

# **IT6100 Series SCPI**

**High Resolution and High Speed  
Programmable Power DC Supply  
Models IT6100 Series**



---

© Copyright 2005 All Rights Reserved  
Ver1.1/MAR, 2008/ IT6100-508

# Directory

About your safety.....	3
Certification and Warranty.....	3
Chapter 1 Remote Operation Mode.....	5
1.1 IT-E121 RS232 Communication Cable .....	5
1.2 IT-E122 USB Communication Cable .....	5
1.3 IT-E135 GPIB Communication Cable .....	5
Chapter 2 Communication Order for IT6100.....	7
2.1 IEEE488.2 Common Order.....	7
2.2 SCPI Essential Order .....	7
2.3 Output Order .....	7
2.4 Port Configure Order .....	8
2.5 Trigger Order .....	9
Chapter 3 SCPI Condition Register .....	10
Chapter 4 SCPI Order Description.....	12
4.1 IEEE488.2 Common Order.....	12
4.2 SCPI Essential Order .....	15
4.3 Output Order .....	18
4.4 Input measurement order .....	22
4.5 Trigger order .....	25

## About your safety

Please review the following safety precautions before operating our equipment.

### General information

The following safety precautions should be observed before using this product and any associated instrumentations. Although some instruments and accessories would be used with non-hazardous voltages, there are situations where hazardous conditions may be present. This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read and follow all installation, operation, and maintenance information carefully before using the product. Refer to this manual for complete product specifications.

If the product is used in a manner not specified, the protection provided by the product may be impaired. Before performing any maintenance, disconnect the line cord and all test cables.

### Protection from electric shock

Operators of this instrument must be protected from electric shock at all times. The responsible body must ensure that operators are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product operators in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 volts, no conductive part of the circuit may be exposed.

### Definition of users

Responsible body is the individual or group responsible for the use and maintenance of equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

Operators use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

Service is only to be performed by qualified service personnel.

Safety symbols and terms

Connect it to safety earth ground using the wire recommended in the user manual.

The symbol on an instrument indicates that the user should refer to the operating instructions located in the manual.

High voltage danger

## Certification and Warranty

### Certification

We certify that this product met its published specifications at time of shipment from the factory.

### Warranty

This instrument product is warranted against defects in material and workmanship for a period of one year from date of delivery. During the warranty period we will, at its option, either repair or replace products which prove to be defective. For warranty service, with the exception of warranty options,

this product must be returned to a service facility designated by us. Customer shall prepay shipping charges by (and shall pay all duty and taxes) for products returned to the supplier for warranty service.

Except for products returned to customer from another country, supplier shall pay for return of products to customer.

## **Limitation of Warranty**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Customer, Customer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation and maintenance.

# Chapter 1 Remote Operation Mode


The DB9 interface connector on the rear panel of the power supply can be transferred to RS-232 interface, the following information will tell you how to use the computer to control the output of the power supply.

## 1.1 IT-E121 RS232 Communication Cable

The DB9 interface connector on the rear panel of power supply is TTL voltage level; you can use the communication cable (IT-E121) to connect the DB9 interface connector of the power supply and the RS-232 interface connector of computer for the communication.


Computer side TTL→RS232

Cable (IT-E121) PS side

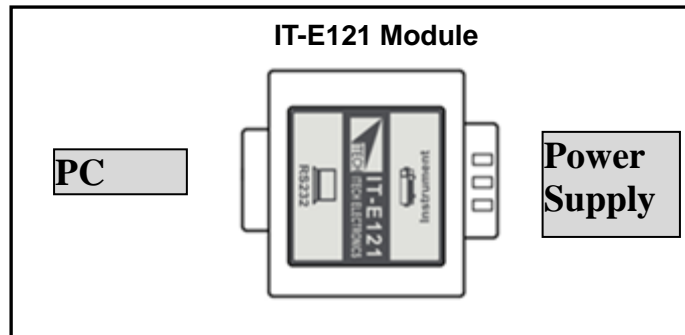

## 1.2 IT-E122 USB Communication Cable


The DB9 interface connector on the rear panel of power supply is TTL voltage level; you can use the communication cable (IT-E122) to connect the DB9 interface connector of the power supply and the USB interface connector of computer for the communication.

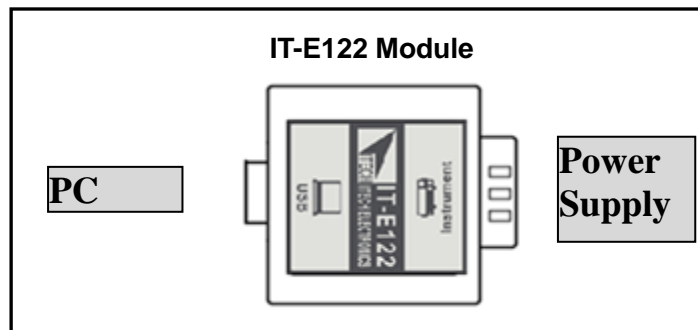

## 1.3 IT-E135 GPIB Communication Cable

The DB9 interface connector on the rear panel of power supply is TTL voltage level; you can use the GPIB communication cable (IT-E135) to connect the DB9 interface connector of the power supply, and then connect the GPIB interface of the IT-E135 and computer with GPIB/IEEE 488 line for the communication.

## IT-E135 outer communication adapter

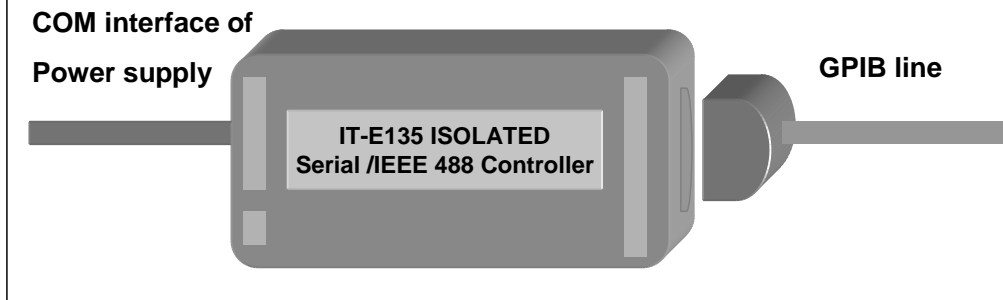

---

**Note:** Forbidden to connect DB9 connector in power supply directly with PC or other RS232 port.

# Chapter 2 Communication Order for IT6100

## 2.1 IEEE488.2 Common Order

"\*CLS"  
"\*ESE"  
"\*ESE?"  
"\*ESR?",  
"\*IDN?",  
"\*OPC",  
"\*OPC?",  
"\*PSC",  
"\*PSC ? ",  
"\*RST",  
"\*SRE",  
"\*SRE?",  
"\*STB?",  
"\*TRG",  
"\*SAV ",  
"\*RCL",

## 2.2 SCPI Essential Order

SYSTem  
:ERRor[:NEXT]?  
:VERSion?,  
:ADDRess?  
:REMote  
:LOCal  
:RWLock

STATus  
:QUEStionable  
[:EVENT]?  
:CONDition?  
:ENABle <VALUE>  
:ENABle?  
:OPERation  
:EVENT]?  
: CONDition?  
:ENABle <VALUE>  
:ENABle?

## 2.3 Output Order

OUTPut  
[:STATe] {<bool>}  
[:STATe]?  
:TIMer  
[:STATe] {<bool>}  
[:STATe]?

```

:DATA {<timer>}
:DATA?
[SOURce:]
MODE {<FIXed|LIST|DRM>}
MODE?
VOLTage
[:LEVel] {<n>}
[:LEVel]?
:PROTection
    :STATe {<bool>}
    :STATe?
[:LEVel] {<n>}
[:LEVel]?
CURRent
[:LEVel] {<n>}
[:LEVel]?
LIST
:MODE {<mode>}
:MODE?
:STEP {<step>}
:STEP?
:COUNT {<n>}
:COUNT?
:CURRent
[:LEVel] {<n>,<n>}
[:LEVel]? {<n>}
:VOLTage
[:LEVel] {<n>,<n>}
[:LEVel]? {<n>}
:WIDth {<n>,<n>}
:WIDth? {<n>}
:NAME {<string code>}
:NAME?
:AREA {1|2|4|8}
:AREA?
:SAVe {1|2|3|4|5|6|7|8}
:RCL {1|2|3|4|5|6|7|8}
Input Meaaure Order
MEASure
[:SCALar]
:VOLTage[:DC]?
:CURRent[:DC]?
:POWeR[:DC]?
:DVM[:DC] ?
:RESistance[DC]?

```

## 2.4 Port Configure Order

```

[SOURce:]
SYSTEM
:SENSe[:STATe] {<bool>}

```

**[:STATe]?**  
PORT  
:MODE {<TRIGger|RIDFi|DIGital>}  
:MODE?  
RI  
:MODE {<OFF|LATChing|LIVE>}  
:MODE?  
DFI  
:SOURce {<OFF|QUES|OPER|ESB|RQS>}  
:SOURce?  
DIGital  
:OUTPut[:STATe] {<bool>}  
:INPut[:STATe]?  
**[:SENSe]**  
:RESistance:RANGe {LOW | MIDdle | HIGH}>  
:RANGe?

## 2.5 Trigger Order

TRIGger  
[:IMMediate]  
:SOURce {<source>}


## Chapter 3 SCPI Condition Register

You can get the condition of power supply and read parameter from the operation register. The power supply can get the different state by 4 condition registers. These registers are status byte register, standard event register, quest condition register and operation status register. The status byte register stores the information of 3 other register. You can get each register's meaning from the following table:


<b>BIT</b>	<b>Signal</b>	<b>Meaning</b>
<b>Operation status register</b>		
0	CAL	The power supply is calculating new calibration parameter.
1	WTG	The power supply is waiting for trigger signal.
2	CV	The power supply is in constant voltage condition.
3	CC	The power supply is in constant current condition.
4	RI	Show the input level condition of RI
<b>Quest condition register</b>		
0	OV	Over voltage
1	OT	Over temperature
2	UNR	The output of power supply is unregulated.
<b>Standard event status register</b>		
0	OPC	Operation of power supply is completed.
2	QYE	Query error. Data of output array is missing.
3	DDE	Device-dependent error. Data stored in register is missing or error occurs in preliminary checkout.
4	EXE	Execution error. Order parameter overflows or the condition is not right.
5	CME	Command error. Syntax or semantic error occurs when receiving information.
7	PON	Power on. It is 1 when power supply is reset.
<b>Status byte register</b>		
3	QUES	If a quest enable condition changes, QUES is 1.
5	ESB	If a standard event status enable register changes, ESB is 1.
6	MSS	
	RQS	
7	OPER	If a operation event enable register changes, OPER is 1.

**Structure of condition register as following:**


Quest condition register

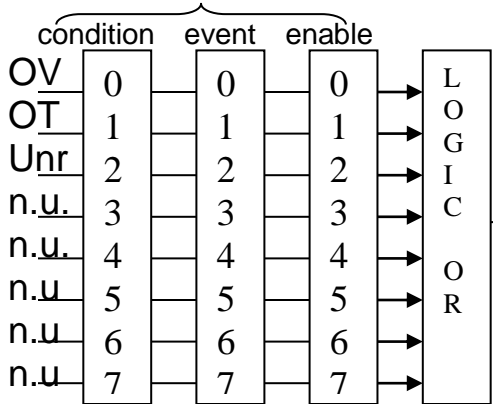


Operation event register

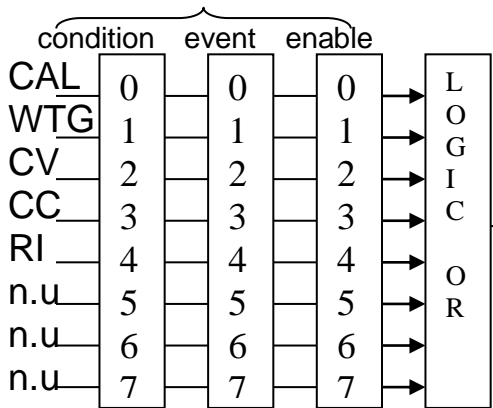

Status byte register

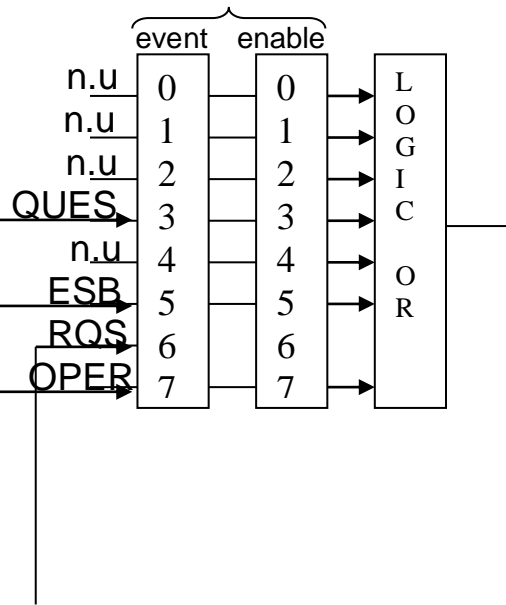

Standard event status register

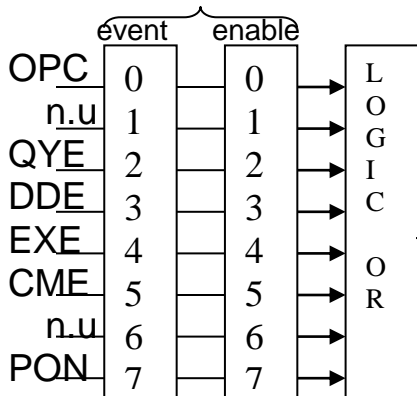

# Chapter 4 SCPI Order Description

## 4.1 IEEE488.2 Common Order

### \*CLS

This order can clean the register as follows:

Standard event status register

Quest condition register

Operation event register

Status byte register

Error code

Order syntax : **\*CLS**

Parameter : None

### \*ESE

This order can set the parameter of standard event enable register. Setting parameter can determine which bit value of standard event register is 1 and the byte will enable ESB of status byte register is 1.

Order syntax : **\*ESE** <NRf>

Parameter : 0~255

Reset value : Consult \*PSC order

Example : \*ESE 128

Quest syntax : **\*ESE ?**

Return parameter : <NR1>

Reference order : **\*ESR ? \*PSC \*STB ?**

### Bit determination of standard event status enable register

Bit position	7	6	5	4	3	2	1	0
Bit Name	PO N	Not used	CME	EXE	DDE	QYE	Not used	OPC
Bit Weight	128		32	16	8	4		
PON	Power-on			DDE	Device-dependent error			
CME	Command error			QYE	Query error			
EXE	Execution error			OPC	Operation complete			

### \*ESR?

This order can read the value of standard event status register. After executing this order, standard event status register is reset. Bit definition of standard event status register is the same as the standard event status enable register.

Quest syntax : **\*ESR ?**

Parameter : None

Return parameter : <NR1>

Reference order : **\*CLS \*ESE \*ESE ? \*OPC**

**\*IDN?**

This order can read information about power supply. The parameter it returns contains 4 segments divided by comma.

Quest syntax : **\*IDN ?**

Parameter : None

Return parameter : <AARD>

segment	description
ITECH	manufacturer
XXXX	product mode
XXXXXX	product serial number
VX . XX	software version number

For example : ITECH , 6152 , 000004 , V1.01

**\*OPC**

When all orders before this order are executed, OPC is 1 of the standard event status register.

Order syntax : **\*OPC**

Parameter : None

Quest syntax : **\*OPC ?**

Return parameter : <NR1>

**\*PSC**

This order control if power supply send a query or not when it is reset.

1 OR ON :When power supply is reset, operation event enable register, query event enable register and standard event status register are all reset.

0 OR OFF : The data of status byte register, operation event enable register, quest event enable register and standard event status enable register is stored in nonvolatile register, and is recalled when power supply is reset.

Order syntax : **\*PSC <bool>**

Parameter : 0|1|ON|OFF

Quest syntax : **\*PSC ?**

Return parameter : 0|1

Reference order : **\*ESE \*SRE STAT:OPER:ENAB STAT:QUES:ENAB**

**\*RST**

This order reset the power supply to default setting.

**CAL:SEC:STAT OFF                    OUTP OFF                    CURR MAX**  
**VOLT:PROT MAX                    VOLT MIN                    TRIG:SOUR BUS                    SYST:SENS**  
**OFF                    PORT:MODE TRIG                    RI:MODE OFF**  
**DFI:SOUR OFF                    VOLT:PROT:STAT OFF**

Order syntax : **\*RST>**

Parameter : None

### **\*SRE**

This order can set the parameter of standard event register. Setting parameter can determine which byte value of status byte register is 1 and the byte will enable RQS of status byte register is 1. Bit definition of status byte enable register is as the same as the status byte register.

Order syntax : **\*SRE** <NRf>

Parameter : 0~255

Reset value : Consult \*PSC order

Example : \*SRE 128

Quest syntax: **\*SRE ?**

Return parameter : <NR1>

Reference Order : **\*ESE \*ESR ? \*PSC \*STB ?**

### **\*STB?**

This order can read the data from status byte register. After executing this order, status byte register is reset.

Quest syntax : **\*STB ?**

Parameter : None

Return parameter : <NR1>

Reference order : **\*CLS \*ESE \*ESR**

### **Bit determination of standard event status enable register**

Bit Position	7	6	5	4	3	2	1	0
Bit Name	OPER	RQS	ESB	no use	QUES	no use	no use	no use
Bit Value	128	64	32		8			

### **\*TRG**

When power supply's trigger source is a order, this order will give a trigger signal. And it's function is as the same as the function of **[SYSTEM:]TRIGger** order.

Order syntax : **\*TRG**

Parameter : None

Reference order : **TRIG TRIG:SORU**

### **\*SAV**

This order can save the parameters of power supply to register. These parameter contains constant current, constant voltage, maximum voltage value and step voltage value.

Order syntax : **\*SAV<NRf>**

Parameter : 1~50

Example : **\*SAV 3**

Reference order : **\*RCL**

### **\*RCL**

This order can recall the parameter you saved before from the register.

Order syntax : **\*RCL<NRf>**

Parameter : 1~50

Example : **\*RCL 3**

Reference order : **\*SAV**

## **4.2 SCPI Essential Order**

### **SYSTem:ERRor[:NEXT]?**

This order can get the error code and error information of the power supply.

No error

- (1) Too many numeric suffices in Command Spec
  - (10) No Input Command to parse
  - (14) Numeric suffix is invalid value
  - (16) Invalid value in numeric or channel list, e.g. out of range
  - (17) Invalid number of dimensions in a channel list
  - (20) Parameter of type Numeric Value overflowed its storage
  - (30) Wrong units for parameter
  - (40) Wrong type of parameter(s)
  - (50) Wrong number of parameters
  - (60) Unmatched quotation mark (single/double) in parameters
  - (65) Unmatched bracket
  - (70) Command keywords were not recognized
  - (80) No entry in list to retrieve (number list or channel list)
  - (90) Too many dimensions in entry to be returned in parameters
  - (101) Command Execution error
  - (100) Too many command
  - (110) Rxd error Parity
- Error EEPROM  
Config data error  
Error Calibration data  
Factory Data error

Order syntax : **SYST:ERR?**

Parameter : None

Return parameter : <NR1> , <SRD>

### **SYSTem:VERSion?**

This order can query the software version.

Order syntax : **SYST:VERS?**

Parameter : None

Return parameter : <NR2>

**SYSTem:ADDRess?**

This order can query address of SOURCE METER.

Order syntax : **SYST:ADDR?**

Parameter : None

Return parameter : <NR2>

**SYSTem:REMOte**

This order can set SOURCE METER as remote control mode.

Order syntax : **SYST:REM**

Parameter : None

Quest syntax : None

**SYSTem:LOCal**

This order can set SOURCE METER as panel control mode.

Order syntax : **SYST:LOC**

Parameter : None

Query syntax : None

**SYSTem:RWLock[:STATe]**

This order can set LOCAL key of SOURCE METER enable or not.

Order syntax : **SYST:RWL**

**STATus:QUESTionable[:EVENT]?**

This order can read the parameter from quest event register. After executing , quest event register is reset.

Quest syntax : **STATus:QUESTionable[:EVENT]?**

Parameter : None

Return parameter : <NR1>

Reference order : **STATus:QUESTionable:ENABLE**

**Bit determination of standard event status enable register**

Bit Position	7	6	5	4	3	2	1	0
Bit name	no use	no use	no use	no use	no use	unr	OT	OV
Bit Value						4	2	1

**STATus:QUESTionable:CONDition?**

This order can read the parameter from quest condition register. When a bit of quest condition changes, the bit value corresponding in quest event register is 1.

Quest syntax : **STATus:QUESTionable: CONDition?**

Parameter : None

Return parameter : <NR1>

**STATus:QUESTionable:ENABLE**

This order can set the parameter of quest event enable register. Setting parameter can determine which bit value of quest event register is 1 and the bit will enable QUES of status byte register is 1.

Order syntax : **STATus:QUESTionable:ENABLE** <NRf>

Parameter : 0~255

Reset value : Consult \*PSC order

Example : **STATus:QUESTionable:ENABLE** 128

Quest syntax : **STATus:QUESTionable:ENABLE ?**

Return parameter : <NR1>

Reference order : **\*PSC**

**STATus:OPERation:EVENT]?**

This order can read the parameter from operation event register. After executing this order, operation event register is reset.

Quest syntax : **STATus: OPERation [:EVENT]?**

Parameter : None

Return parameter : <NR1>

Reference order : **STATus: OPERation:ENABLE**

**Bit determination of standard event status enable register**

Bit Position	7	6	5	4	3	2	1	0
Bit Name	no use	no use	no use	RI	CC	CV	WTG	CAL
Bit value				16	8	4	2	1

**STATus:OPERation:CONDition?**

This order can read the parameter from the operation condition. When the parameter of operation condition register changes, the bit corresponding in operation event register is 1.

Quest syntax : **STATus: OPERation: CONDition?**

Parameter : None

Return parameter : <NR1>

**STATus:OPERation:ENABLE**

This order can set the parameter of operation even enable register. Setting parameter can determine which bit value of operation event register is 1 and the bit will enable OPER of status byte register is 1.

Order syntax : **STATus: OPERation:ENABLE** <NRf>

Parameter : 0~255

Reset value : Consult \*PSC order

Example : **STATus: OPERation:ENABLE** 128

Quest syntax : **STATus: OPERation:ENABLE ?**

Return parameter : <NR1>

Reference order : \*PSC

### 4.3 Output Order

#### **OUTPut[:STATe]**

This order can set power supply output on or off.

Order syntax : **OUTPut[:STATe] <bool>**

Parameter : 0|1|ON|OFF

\*RST value : OFF

Quest syntax : **OUTPut:STATe?**

Return parameter : 0|1

#### **OUTPut:TIMer[:STATe]**

This order can set output timer's state of power supply.

Order syntax : **OUTPut:TIMer[:STATe] <bool>**

Parameter : 0|1|ON|OFF

\*RST value : OFF

Quest syntax : **OUTPut:TIMer:STATe?**

Return parameter : 0|1

#### **OUTPut:TIMer:DATA**

This order can set the time of output timer.

Order syntax : **OUTPut:TIMer:DATA <NR1>**

Parameter : <NR2>

\*RST value : 1

Quest syntax : **OUTPut:TIMer:DATA?**

Return parameter : <NR2>

#### **[SOURce:]MODE**

This order can set the power supply working in order fixed mode or list mode.

FIXed      Order fixed mode

LIST      List mode

DRM      Digital milliohm meter

Order syntax : **[SOURce:]MODE <mode>**

Parameter : FIXed|LIST|DRM

\*RST value: FIXed

Example : **MODE FIX**

Quest syntax : **[SOURce:] MODE ?**

Return parameter : <CRD>

**[SOURce:]CURRent [:LEVel]**

This order can set current value of power supply.

Order syntax : **[SOURce:]CURRent [:LEVel] <NRf>**

Parameter : MIN TO MAX|MIN|MAX

Unit : A mA

\*RST value: MIN

Example : **CURR 3A , CURR 30mA , CURR MAX , CURR MIN**

Quest syntax : **[SOURce:]CURRent [:LEVel] ?**

Parameter : [MIN|MAX]

Example : **CURR ? , CURR ? MAX, CURR ? MIN**

Return parameter : <NR2>

**[SOURce:]VOLTage[:LEVel]**

This order can set voltage value of power supply.

Order syntax : **[SOURce:]VOLTage[:LEVel] <NRf>**

Parameter : MIN TO MAX|MIN|MAX

Unit : V | mV| KV

\*RST value : MAX

Quest syntax : **[SOURce:]VOLTage[:LEVel] ?**

Parameter : [MIN|MAX]

Return parameter : <NR2>

**[SOURce:]VOLTage:PROTection:STATe**

This order can set over voltage protection.

Order syntax : **[SOURce:] VOLTage:PROTection:STATe <bool>**

Parameter : 0 | 1 | ON | OFF

Unit: None

\*RST value : OFF

Example : **VOLT:PROT : STAT 1, VOLT :PROT:STAT ON**

Quest syntax : **[SOURce:] VOLTage:PROTection:STATe ?**

Parameter : None

Example : **VOLT:PROT:STAT ?**

Return parameter : <0 | 1>

**[SOURce:]VOLTage:PROTection[:LEVel]**

This order can set voltage protection maximum level.

Order syntax : **[SOURce:] VOLTage:PROTection[:LEVel] <NRf>**

Parameter : MIN TO MAX|MIN|MAX

Unit : V mV

\*RST value : MAX

Example : **VOLT:PROT 30V, VOLT PROT MAX**

Quest syntax : **[SOURce:] VOLTage:PROTection[:LEVel] ?**

Parameter : [MIN|MAX]

Example : **VOLT:PROT ? , VOLT PROT ? MAX**

Return parameter : <NR2>

#### **[SOURce:]LIST:MODE**

This order can set list file .

CONTInious List operation is continuous mode.

STEP List operation is step mode.

Order syntax : **[SOURce:]LIST:MODE <CRD>**

Parameter : CONTInious|STEP

Quest syntax : **[SOURce:]LIST:MODE ?**

Return parameter : <CRD>

#### **[SOURce:]LIST:STEP**

This order can set operation mode of list file.

ONCE List operate once

REPeat Repeat list operation

Order syntax : **[SOURce:]LIST:STEP <SRD>**

Parameter: ONCE|REPeat

Quest syntax : **[SOURce:]LIST:STEP ?**

Return parameter : <CRD>

#### **[SOURce:]LIST:COUNT**

This order can set the steps of list operation.

Order syntax : **[SOURce:]LIST:COUNT <NRf>**

Parameter : 2~400

Quest syntax : **[[SOURce:]LIST:COUNT ?**

Parameter : None

Return parameter : <NR1>

#### **[SOURce:]LIST :CURRent[:LEVel]**

This order can set current step.

Order syntax : **[SOURce:]LIST :CURRent[:LEVel] <NRf>**

Parameter : 0~30A

Unit : A |mA

Example : **LIST:CURR 1 , 3A ;**

Quest syntax : **[SOURCE:]TRANSition:CURRENT:TLEVEL ?**

Parameter : None

Example : **LIST:CURR ? 1 ;**

Return parameter : <NR2>

#### **[SOURCE:]LIST :VOLTage[:LEVEL]**

This order can set voltage step.

Order syntax : **[SOURCE:]LIST : VOLTage [:LEVEL] <NRf>**

Parameter : 0~360V

Unit : V mV

Example : **LIST:VOLT 1 , 3V ;**

Quest syntax : **[SOURCE:]TRANSition: VOLTage:TLEVEL ?**

Parameter : None

Example : **LIST:VOLT ? 1 ;**

Return parameter : <NR2>

#### **[SOURCE:]LIST:WIDTH**

This order can set the minimum step time.

Order syntax : **[SOURCE:]LIST:WIDTH <NRf>**

Parameter : MIN TO MAX|MIN|MAX

Unit : S mS

Example : **LIST:WID 1, 100mS;**

Quest syntax : **[SOURCE:]LIST:WIDTH ?**

Parameter : None

Example : **LIST:WID? 1;**

Return parameter : <NR2>

#### **[SOURCE:]LIST:NAME**

This order can set name for list file. Make sure that the file name should less than 8 characters.

Order syntax : **[SOURCE:]LIST:NAME <name>**

Parameter : <SRD>

Example : **LIST:NAME 'TEST';**

Quest syntax : **[SOURCE:]LIST:NAME?**

Return parameter : <SRD>

#### **[SOURCE:]LIST:AREA**

This order can divide the store area of list file with 4 methods.

- 1 . 1 group of store area, 400 steps
- 2 . 2 groups of store area, each group has 200 steps.
- 4 . 4 groups of store area, each group has 100 steps.
- 8 . 8 groups of store area, each group has 50 steps.

Order syntax : **[SOURCE:]LIST:AREA <NR1>**

Parameter : 1|2|4|8

Example : LIST:AREA 1

Quest syntax : **[SOURCE:]LIST:AREA ?**

Return parameter : <NR1>

#### **[SOURCE:]LIST:SAVe**

This order can save list file into register.

Order syntax : **[SOURCE:]LIST:SAVe <NR1>**

Parameter : 1~8

Example : LIST:SAV 1

#### **[SOURCE:]LIST:RCL**

This order can recall the list file saved before from the register.

Order syntax : **[SOURCE:]LIST:SAV <NR1>**

Parameter : 1~8

Example : LIST:SAV 1

## **4.4 Input measurement order**

### **MEASure[:SCALar]:VOLTage[:DC]?**

This order can get the input voltage of power supply.

Order syntax : **MEASure[:SCALar]:VOLTage[:DC]?**

Parameter : None

Return parameter : <NR2>

Return parameter unit : V

Example : **MEAS:VOLT ?**

### **MEASure[:SCALar]:CURRent[:DC]?**

This order can get the input current of power supply.

Order syntax : **MEASure[:SCALar]:CURRent[:DC]?**

Parameter : None

Return parameter : <NR2>

Return parameter unit : A

Example : **MEAS:CURR ?**

**MEASure[:SCALar]:POWER[:DC]?**

This order can get the input power of the power supply.

Order syntax : **MEASure[:SCALar]:POWER?**

Parameter : None

Return parameter : <NR2>

Return parameter unit : W

Example : **MEAS:POW?**

**MEASure[:SCALar]:DVM[:DC]?**

This order can get voltage value from the digital voltage meter.

Order syntax : **MEASure[:SCALar]:DVM?**

Parameter : None

Return parameter : <NR2>

Return parameter unit : V

Example : **MEAS:DVM?**

**[:SENSe]:RESistance:RANGe**

This order can set the range of milliohm meter.

LOW: 0.01W resistance range

MIDDLE: 0.1W resistance range

HIGH: 1W resistance range

Order syntax : **[:SENSe]:RESistance:RANGe**

Parameter : LOW | MIDdle | HIGH

Example : RES:RANG LOW

Quest syntax : **[:SENSe]:RESistance:RANGe?**

Return parameter : <SRD>

**MEASure[:SCALar]:RESistance[:DC]?**

This order can read the resistance value from the milliohm meter.

Order syntax : **MEASure[:SCALar]: RESistance?**

Parameter : None

Return parameter : <NR2>

Return parameter unit : R

Example : **MEAS:RES?**

**Interface Configure Order**

**[SOURce:]SYSTem:SENSe [:STATe]{<bool>}**

This order can control the power supply enable remote sense function or not.

Order syntax : **SYSTem: SENSe [:STATe] <bool>**

Parameter : 0|1|ON|OFF

Quest syntax : **SYSTem:SENSe [:STATe] ?**

\*RST value : 0

#### **[SOURce:]PORT:MODE**

This order can set port function of rear panel.:

TRIGGER function: Pin1、 pin2 can be used as the external trigger source of power supply and control list operation.

RI/DFI function : Inhibit Input can control the output state of power supply. Fault Output can shows false..

DIGITAL I/O function : It can read and control output port state by order.

Order syntax : **SOURce:PORT:MODE**

Parameter : TRIGger|RIDFi|DIGital

Quest syntax : **SOURce:PORT:MODE ?**

\*RST value : TRIGger

#### **[SOURce:]RI:MODE**

This order can set input mode of RI.

LITCHING mode : When the level of RI port changes from high to low, the output of power supply is off.

LIVE mode : The output state of power supply changes along with the level of RI port. If the level of RI is high, the output is on; and the level of RI is low, the output of power supply is off.

OFF mode : The level state of RI do not affect the output state of power supply.

Order syntax : **SOURce:RI:MODE**

Parameter : OFF|LATChing|LIVE

Quest syntax : **SOURce:RI:MODE ?**

\*RST value : OFF

#### **[SOURce:]DFI:SOURce**

This order can set output source of DFI.

LITCHING mode : When the level of RI port changes from high to low, the output of power supply is off.

LIVE mode : The output state of power supply changes along with the level of RI port. If the level of RI is high, the output is on; and the level of RI is low, the output of power supply is off.

OFF mode : The level state of RI do not affect the output state of power supply.

Order syntax : **SOURce:DFI:SOURce**

Parameter : OFF|QUES|OPER|ESB|RQS

Quest syntax : **SOURce:DFI:SOURce ?**

\*RST value : OFF

### **[SOURCE:]DIGital:OUTPut[:STATe]**

This order can set the output state of port. When the mode of port is DIGITAL, this order is enable.

Order syntax : **SOURCE:OUTPut[:STATe]**

Parameter : OFF|ON|0|1

### **[SOURCE:]DIGital:INPut[:STATe]?**

This order can set the input state of port. When the mode of port is DIGITAL, this order is enable.

Order syntax : **SOURCE:INPut[:STATe] ?**

## **4.5 Trigger order**

### **TRIGger[:IMMediate]**

When trigger source is order mode, this order will give a trigger signal. And its function is as the same as \*TRG order.

Order syntax : \* **TRIGger[:IMMediate]**

Parameter : None

Reference order : **TRIG TRIG:SORU**

### **TRIGger:SOURce**

This order can set the trigger mode of power supply.

IMMediate: If this function is enabled, press **Shift** + **Trigger**, the power supply will start trigger operation once.

EXternal: External trigger signal (TTL). There is a trigger input port on the rear panel. When this function is enabled, please give this trigger input port a pulse about 5 mS, and the power supply will start trigger operation once.

Bus: Order trigger mode. When this function is enabled, and the power supply receives order\*TRG or TRIGger, the power supply will start trigger operation once.

Order syntax : **TRIGger:SOURce <mode>**

Parameter : IMMediate|EXternal|BUS

\*RST value: KEY