

# Bi-directional DC power supply

## IT-M3400 Programming Guide



---

Model: IT-M3400 Series  
Version: V1.1 / 10, 2021

## Notices

© Itech Electronic, Co., Ltd. 2020  
No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior permission and written consent from Itech Electronic, Co., Ltd. as governed by international copyright laws.

### Manual Part Number

IT-M3400

### Revision

1st Edition: July. 6, 2020  
Itech Electronic, Co., Ltd.

### Trademarks

Pentium is U.S. registered trademarks of Intel Corporation.

Microsoft, Visual Studio, Windows and MS Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries and regions.

## Warranty

The materials contained in this document are provided "as is", and is subject to change, without prior notice, in future editions. Further, to the maximum extent permitted by applicable laws, ITECH disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. ITECH shall not be held liable for errors or for incidental or indirect damages in connection with the furnishing, use or application of this document or of any information contained herein. Should ITECH and the user enter into a separate written agreement with warranty terms covering the materials in this document that conflict with these terms, the warranty terms in the separate agreement shall prevail.

### Technology Licenses

The hardware and/or software described herein are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Restricted Rights Legend

Restricted permissions of the U.S. government. Permissions for software and technical data which are authorized to the U.S. Government only include those for custom provision to end users. ITECH provides this customary commercial license in software and technical data pursuant to FAR 12.211 ( Technical Data) and 12.212 ( Computer Software) and, for the Department of Defense, DFARS 252.227-7015 ( Technical Data – Commercial Items) and DFARS 227.7202-3 ( Rights in Commercial Computer Software or Computer Software Documentation).

## Safety Notices

### CAUTION

A CAUTION sign denotes a hazard. It calls attention to an operating procedure or practice that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

### WARNING

A WARNING sign denotes a hazard. It calls attention to an operating procedure or practice that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.



### NOTE

A NOTE sign denotes important hint. It calls attention to tips or supplementary information that is essential for users to refer to

## Quality Certification and Assurance

We certify that IT-M3400 power supply meets all the published specifications at time of shipment from the factory.

## Warranty

ITECH warrants that the product will be free from defects in material and workmanship under normal use for a period of one (1) year from the date of delivery (except those described in the Limitation of Warranty below).

For warranty service or repair, the product must be returned to a service center designated by ITECH.









- The product returned to ITECH for warranty service must be shipped PREPAID. And ITECH will pay for return of the product to customer.
- If the product is returned to ITECH for warranty service from overseas, all the freights, duties and other taxes shall be on the account of customer.








## Limitation of Warranty

This Warranty will be rendered invalid in case of the following:

- Damage caused by circuit installed by customer or using customer own products or accessories;
- Modified or repaired by customer without authorization;
- Damage caused by circuit installed by customer or not operating our products under designated environment;
- The product model or serial number is altered, deleted, removed or made illegible by customer;
- Damaged as a result of accidents, including but not limited to lightning, moisture, fire, improper use or negligence.

## Safety Symbols

	Direct current		ON (power on)
	Alternating current		OFF (power off)
	Both direct and alternating current		Power-on state
	Protective conductor terminal		Power-off state

	Earth (ground) terminal		Reference terminal
	Caution, risk of electric shock		Positive terminal
	Warning, risk of danger (refer to this manual for specific Warning or Caution information)		Negative terminal
	Frame or chassis terminal	-	-

## Safety Precautions

The following safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or specific warnings elsewhere in this manual will constitute a default under safety standards of design, manufacture and intended use of the instrument. ITECH assumes no liability for the customer's failure to comply with these precautions.

### WARNING

- Do not use the instrument if it is damaged. Before operation, check the casing to see whether it cracks. Do not operate the instrument in the presence of inflammable gasses, vapors or dusts.
- The power supply is provided with a three-core power line during delivery and should be connected to a three-core junction box. Before operation, be sure that the instrument is well grounded.
- Make sure to use the power cord supplied by ITECH.
- Check all marks on the instrument before connecting the instrument to power supply.
- Use electric wires of appropriate load. All loading wires should be capable of bearing maximum short-circuit current of power supply without overheating. If there are multiple electronic loads, each pair of the power cord must be capable of bearing the full-loaded rated short-circuit output current.
- Ensure the voltage fluctuation of mains supply is less than 10% of the working voltage range in order to reduce risks of fire and electric shock.
- Do not install alternative parts on the instrument or perform any unauthorized modification.
- Do not use the instrument if the detachable cover is removed or loosen.
- To prevent the possibility of accidental injuries, be sure to use the power adapter supplied by the manufacturer only.
- We do not accept responsibility for any direct or indirect financial damage or loss of profit that might occur when using the instrument.
- This instrument is used for industrial purposes, do not apply this product to IT power supply system.

- Never use the instrument with a life-support system or any other equipment subject to safety requirements.

### CAUTION

- Failure to use the instrument as directed by the manufacturer may render its protective features void.
- Always clean the casing with a dry cloth. Do not clean the internals.
- Make sure the vent hole is always unblocked.

## Environmental Conditions

The instrument is designed for indoor use and an area with low condensation. The table below shows the general environmental requirements for the instrument.



Environmental Conditions	Requirements
Operating temperature	0°C to 40°C
Operating humidity	20%-80% (non-condensation)
Storage temperature	-20°C to 70 °C
Altitude	Operating up to 2,000 meters
Pollution degree	Pollution degree 2
Installation category	II




### Note

To make accurate measurements, allow the instrument to warm up for 30 min before operation.

## Regulatory Markings

	<p>The CE mark indicates that the product complies with all the relevant European legal directives. The specific year (if any) affixed refers to the year when the design was approved.</p>
	<p>The instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard the electrical/electronic product in domestic household waste.</p>

	<p>This symbol indicates the time period during which no hazardous or toxic substances are expected to leak or deteriorate during normal use. The expected service life of the product is 10 years. The product can be used safely during the 10-year Environment Friendly Use Period (EFUP). Upon expiration of the EFUP, the product must be immediately recycled.</p>
---	--

## Waste Electrical and Electronic Equipment (WEEE) Directive



2002/96/EC Waste Electrical and Electronic Equipment (WEEE) Directive

This product complies with the WEEE Directive (2002/96/EC) marking requirement. This affix product label indicates that you must not discard the electrical/electronic product in domestic household waste.

Product Category

With reference to the equipment classifications described in the Annex I of the WEEE Directive, this instrument is classified as a "Monitoring and Control Instrument".

To return this unwanted instrument, contact your nearest ITECH office.

## Compliance Information

Complies with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:

- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Low-Voltage Directive (Safety) 2014/35/EU

Conforms with the following product standards:

### EMC Standard

IEC 61326-1:2012/ EN 61326-1:2013 <sup>123</sup>

#### Reference Standards

CISPR 11:2009+A1:2010/ EN 55011:2009+A1:2010 (Group 1, Class A)

IEC 61000-4-2:2008/ EN 61000-4-2:2009

IEC 61000-4-3:2006+A1:2007+A2:2010/ EN 61000-4-3:2006+A1:2008+A2:2010

IEC 61000-4-4:2004+A1:2010/ EN 61000-4-4:2004+A1:2010

IEC 61000-4-5:2005/ EN 61000-4-5:2006

IEC 61000-4-6:2008/ EN 61000-4-6:2009

IEC 61000-4-11:2004/ EN 61000-4-11:2004

1. The product is intended for use in non-residential/non-domestic environments. Use of the product in residential/domestic environments may cause electromagnetic interference.
2. Connection of the instrument to a test object may produce radiations beyond the specified limit.
3. Use high-performance shielded interface cable to ensure conformity with the EMC standards listed above.

### Safety Standard

IEC 61010-1:2010/ EN 61010-1:2010

## Content

Quality Certification and Assurance .....	i
Warranty .....	i
Limitation of Warranty .....	i
Safety Symbols .....	i
Safety Precautions .....	ii
Environmental Conditions .....	iii
Regulatory Markings .....	iii
Waste Electrical and Electronic Equipment (WEEE) Directive .....	iv
Compliance Information .....	v
<b>Chapter1 SCPI Introduction .....</b>	<b>12</b>
1.1 Overview .....	12
1.2 Command Type of SCPI .....	12
1.3 Message Type of SCPI.....	14
1.4 Response Data Type .....	16
1.5 Command Format .....	16
1.6 Data Type .....	18
1.7 Remote Interface Connections.....	19
<b>Chapter2 SCPI status register .....</b>	<b>1</b>
<b>Chapter3 Status Commands.....</b>	<b>3</b>
STATus:OPERation[:EVENT]? .....	3
STATus:OPERation:CONDition? .....	3
STATus:OPERation:ENABle <n>.....	3
STATus:OPERation:NTRansition <n> .....	4
STATus:OPERation:PTRansition <n>.....	4
STATus:QUEStionable[:EVENT]? .....	5
STATus:QUEStionable:CONDition? .....	5
STATus:QUEStionable:ENABle <n>.....	6
STATus:QUEStionable:NTRansition <n>.....	6
STATus:QUEStionable:PTRansition <n> .....	7
STATus:PRESet .....	7
<b>Chapter4 Channel Selection Commands .....</b>	<b>8</b>
CHANnel <NR1> .....	8
INSTrument[:SElect] <NR1> .....	8
<b>Chapter5 System Commands .....</b>	<b>10</b>
SYSTem:BEEPer:IMMediate .....	10
SYSTem:BEEPer[:STATe] <bool> .....	10
SYSTem:ERRor?.....	11
SYSTem:CLEar .....	11
SYSTem:REMote .....	11
SYSTem:LOCal .....	12
SYSTem:RWLock .....	12
SYSTem:KEY <n> .....	13

SYSTem:COMMunicate:GPIB[:SELf]:ADDRes <addr> .....	13
SYSTem:COMMunicate:LAN:CURRent:ADDRes <"addr"> .....	14
SYSTem:COMMunicate:LAN:CURRent:DGATeway <"addr"> .....	14
SYSTem:COMMunicate:LAN:CURRent:SMASk <"addr"> .....	15
SYSTem:COMMunicate:LAN:DHCP <Bool> .....	15
SYSTem:COMMunicate:LAN:RAWSocket:PORT .....	16
SYSTem:COMMunicate:LAN:MACAddress? .....	16
SYSTem:COMMunicate:SERial:BAUDrate .....	17
SYSTem:VERSion? .....	17
SYSTem:COMMunicate:LAN:DNS1 <dns> .....	17
SYSTem:COMMunicate:LAN:DNS2 <dns> .....	18
SYSTem:COMMunicate:LAN:RAWSocketport <port> .....	18
SYSTem:COMMunicate:LAN:MDNS <onoff> .....	19
SYSTem:COMMunicate:LAN:PING <onoff> .....	19
SYSTem:COMMunicate:LAN:TELNet <onoff> .....	19
SYSTem:COMMunicate:LAN:WEB <onoff> .....	20
SYSTem:COMMunicate:LAN:VXI11 <onoff> .....	20
SYSTem:COMMunicate:LAN:REStore .....	21
SYSTem:COMMunicate:LAN:SAVE .....	21
SYSTem:COMMunicate:LAN:STATe? .....	22
SYSTem:COMMunicate:LAN:HOSTName? .....	22
SYSTem:COMMunicate:LAN:DESCription? .....	22
SYSTem:COMMunicate:LAN:DOMain? .....	23
[SOURce:]EXTernal[:STATe] <bool> .....	23
ADDRes <NR1> .....	24
SYSTem:BOOT:VERSion? .....	24
<b>Chapter6 Measure &amp; Fetch Commands.....</b>	<b>25</b>
MEASure[:SCALar]:CURRent[:DC]? .....	25
FETCh[:SCALar]:CURRent[:DC]? .....	25
MEASure[:SCALar]:POWER[:DC]? .....	25
FETCh[:SCALar]:POWER[:DC]? .....	25
MEASure[:SCALar]:VOLTage[:DC]? .....	26
FETCh[:SCALar]:VOLTage[:DC]? .....	26
MEASure[:SCALar]:CAPacity? .....	26
FETCh[:SCALar]:CAPacity? .....	26
MEASure[:SCALar]:UUT:TEMPerature? .....	27
FETCh[:SCALar]:UUT:TEMPerature? .....	27
MEASure[:SCALar]:RECover:ENERgy? .....	27
FETCh[:SCALar]:RECover:ENERgy? .....	27
MEASure[:SCALar]:AHOuR? .....	28
FETCh:AHOuR? .....	28
MEASure[:SCALar]:WHOuR? .....	28
FETCh:WHOuR? .....	28
MEASure? .....	28
FETCh? .....	28

<b>Chapter7</b>	<b>Output Commands</b> .....	<b>30</b>
	OUTPut[:STATe] <bool> .....	30
	[OUTPut:]PROTection:CLEar .....	30
	OUTPut:DELAy[:RISE] <NRf+> .....	31
	OUTPut:DELAy:FALL <NRf+> .....	31
	OUPut:PONSetup <RST LAST LOFF> .....	32
	OUTPut:REVerse[:STATe]? .....	32
	OUTPut:SDS[:STATe]? .....	33
	OUTPut:SDS:ENABLE <0 OFF 1 ON> .....	33
	OUTPut:SDS:DC:RELAy <0 OFF 1 ON> .....	33
	OUTPut:SDS:SENSe:RELAy <0 OFF 1 ON> .....	34
	OUTPut:SDS:SURGe:SUPPress .....	34
	OUTPut:PROTection:WDOG[:STATe] <0 OFF 1 ON> .....	35
	OUTPut:PROTection:WDOG:DELAy <NRf+> .....	35
	OUTPut:PROTection:FOLDBack[:MODE] <OFF CC CV> .....	36
	OUTPut:PROTection:FOLDBack:DELAy <NRf+> .....	36
<b>Chapter8</b>	<b>Trigger Commands</b> .....	<b>38</b>
	TRIGger[:IMMEdiate] .....	38
	TRIGger:LIST:SOURce <KEYPad BUS> .....	38
	INITiate[:IMMEdiate]:LIST .....	39
	ABORT:LIST .....	39
<b>Chapter9</b>	<b>Sense Commands</b> .....	<b>40</b>
	SENSe[:REMote][:STATe] <bool> .....	40
	SENSe:FILTer:LEVel <SLOW MEDium FAST> .....	40
	SENSe:AHOuR:RESet .....	41
	SENSe:WHOUr:RESet .....	41
<b>Chapter10</b>	<b>Source Commands</b> .....	<b>42</b>
	[SOURce:]CURRent[:LEVel][:IMMEdiate][:AMPLitude] <NRf+> .....	42
	[SOURce:]CURRent[:LEVel]:LIMit:POSitive <NRf+> .....	42
	[SOURce:]CURRent[:LEVel]:LIMit:NEGative <NRf+> .....	43
	[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude] <NRf+> .....	43
	[SOURce:]CURRent[:OVER]:PROTection[:LEVel] <NRf+> .....	44
	[SOURce:]CURRent[:OVER]:PROTection:DELAy <NRf+> .....	44
	[SOURce:]CURRent[:OVER]:PROTection:STATe <bool> .....	45
	[SOURce:]CURRent:UNDer:PROTection[:LEVel] <NRf+> .....	45
	[SOURce:]CURRent:UNDer:PROTection:DELAy <NRf+> .....	46
	[SOURce:]CURRent:UNDer:PROTection:STATe <bool> .....	46
	[SOURce:]CURRent:UNDer:PROTection:WARM <NRf+> .....	47
	[SOURce:]CURRent:SLEW[:BOTH] <NRf+>,<NRf+> .....	47
	[SOURce:]CURRent:SLEW:NEGative <NRf+> .....	48
	[SOURce:]CURRent:SLEW:POSitive <NRf+> .....	48
	[SOURce:]VOLTAge[:LEVel][:IMMEdiate][:AMPLitude] <NRf+> .....	49
	[SOURce:]VOLTAge[:LEVel]:LIMit[:HIGH] <NRf+> .....	49

[SOURce:]VOLTage[:LEVel]:LIMit:LOW <NRf+>.....	50
[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude] <NRf+>.....	50
[SOURce:]VOLTage:SLEW[:BOTH] <NRf+>,<NRf+> .....	51
[SOURce:]VOLTage:SLEW:NEGative <NRf+> .....	51
[SOURce:]VOLTage:SLEW:POSitive <NRf+> .....	52
[SOURce:]VOLTage[:OVER]:PROTection[:LEVel] <NRf+> .....	52
[SOURce:]VOLTage[:OVER]:PROTection:DELay <NRf+> .....	53
[SOURce:]VOLTage[:OVER]:PROTection:STATe <bool>.....	53
[SOURce:]VOLTage:UNDer:PROTection[:LEVel] <NRf+> .....	54
[SOURce:]VOLTage:UNDer:PROTection:DELay <NRf+>.....	54
[SOURce:]VOLTage:UNDer:PROTection:STATe <bool> .....	55
[SOURce:]VOLTage:UNDer:PROTection:WARM <NRf+> .....	55
[SOURce:]RESistance[:LEVel][:IMMediate][:AMPLitude] <NRf+> .....	56
[SOURce:]SINK:RESistance:STATe <bool> .....	57
[SOURce:]SINK:RESistance[:LEVel][:IMMediate][:AMPLitude] <NRf+> .....	57
[SOURce:]POWer:LIMit[:POSitive][:IMMediate][:AMPLitude] <NRf+> .....	58
[SOURce:]POWer:LIMit:NEGative[:IMMediate][:AMPLitude] <NRf+> .....	58
[SOURce:]POWer:LIMit[:IMMediate][:AMPLitude] <NRf+> .....	59
[SOURce:]POWer:PROTection[:LEVel] <NRf+> .....	59
[SOURce:]POWer:PROTection:DELay <NRf+> .....	60
[SOURce:]POWer:PROTection:STATe <Bool> .....	60
[SOURce:]FUNCTion:MODE <FIXed   LIST   BATTery   BEMulator>.....	61
[SOURce:]FUNCTion <CV   CC   VOLTage   CURRent> .....	61
[SOURce:]UUT:TEMPerature:PROTection[:STATe] .....	62
[SOURce:]UUT:TEMPerature:PROTection[:LEVel] <NRf+> .....	62
OFF:VOLTage <ZERO   CONST> .....	63
<b>Chapter11 Trace Commands .....</b>	<b>64</b>
TRACe:CLear .....	64
TRACe:POINts <NRf+> .....	64
TRACe:FEED:CONTRol <NEVer   NEXT   ALWays> .....	65
TRACe:FEED[:SELected]<BOTH   VOLTage   CURRent> .....	65
TRACe:DELay <NRf+> .....	66
TRACe:TIMer <NRf+> .....	66
TRACe:POINts:ACTual?.....	67
TRACe:CLear:AUTO[:STATe] <bool> .....	67
TRACe:DATA? .....	68
TRACe:FILTer[:STATe].....	68
<b>Chapter12 List Commands .....</b>	<b>69</b>
LIST:STEP:COUNT <NR1> .....	69
LIST[:STEP]:VOLTage <NR1>,<NRf+> .....	69
LIST[:STEP]:CURRent <NR1>,<NRf+> .....	70
LIST[:STEP]:SLEW <NR1>,<NRf+> .....	70
LIST[:STEP]:WIDTH <NR1>,<NRf+> .....	70
LIST:REPeat <NRf+> .....	71
LIST:FUNCTion <VOLTage   CURRent> .....	71

LIST:VOLTage:LIMit[:HIGH] <NRf+>.....	72
LIST:VOLTage:LIMit:LOW <NRf+>.....	72
LIST:CURRent:LIMit[:POSitive] <NRf+> .....	73
LIST:CURRent:LIMit:NEGative <NRf+> .....	73
LIST:SAVE <NR1> .....	73
LIST:RECall <NR1> .....	74
LIST[:STATe] <bool> .....	74
[SOURce:]LIST:TERMinate:LAST<bool> .....	75
LIST:PAUSe[:STATe] <BOOLEAN> .....	75
[SOURce:]LIST:RESet .....	76
[SOURce:]LIST:RUN:STEP?.....	76
[SOURce:]LIST:RUN:REPeat? .....	76
<b>Chapter13 Battery Commands.....</b>	<b>78</b>
BATTery:MODE <CHARge DISCharge> .....	78
BATTery:CHARge:VOLTage <NRf+> .....	78
BATTery:CHARge:CURRent <NRf+>.....	79
BATTery:DISCharge:VOLTage <NRf+> .....	79
BATTery:DISCharge:CURRent <NRf+> .....	79
BATTery:STOP:VOLTage <NRf+> .....	80
BATTery:STOP:CURRent <NRf+> .....	80
BATTery:STOP:CAPacity <NRf+> .....	81
BATTery:STOP:TIME <NRf+> .....	81
BATTery[:STATe] .....	82
BATTery:SAVE <BANK> .....	82
BATTery:RECall <BANK>.....	82
[SOURce:]BATTery:RESet .....	83
<b>Chapter14 Parallel&amp;Link Commands.....</b>	<b>84</b>
PARallel:ROLE <SINGle SLAVe MASTer>.....	84
PARallel:GROup <group> .....	84
PARallel:NUMBer <NR1>.....	85
LINK:MODE <OUTPut TRACk> .....	85
LINK[:STATe] <bool>.....	85
LINK:REFerence <NRf+> .....	86
<b>Chapter15 Common Commands .....</b>	<b>87</b>
*CLS.....	87
*ESE.....	87
*ESR?.....	88
*IDN?.....	88
*OPC.....	89
*PSC .....	90
*RCL .....	90
*RST.....	91
*SAV .....	91
*SRE .....	92

*STB?.....	92
*TRG.....	93
*TST?.....	93
*WAI.....	94
*PSC <Bool> .....	94
<b>Chapter16      Error Messages.....</b>	<b>95</b>
Error List.....	95

# Chapter1 SCPI Introduction

## 1.1 Overview

SCPI is short for Standard Commands for Programmable Instruments which defines a communication method of bus controller and instrument. It is based on ASCII and supply for testing and measuring instruments. SCPI command is based on hierarchical architecture which also known as tree system. In this system, Relevant Command is returned to a common node or root, so that a subsystem is formed. A part of OUTPut subsystem is listed below:

**OUTPut:**


- **SYNC {OFF|0|ON|1}**
- **SYNC:**
- **MODE {NORMAl|CARRier}**
- **POLarity {NORMAl|INVerted}**

OUTPut is the root class keyword, SYNC is the second keyword, MODE and POLarity are the third keyword. Colon(:) is used for separating the command keyword and the next level keyword.

## 1.2 Command Type of SCPI

SCPI has two types of commands, common and subsystem.

- Common commands generally are not related to specific operation but to controlling overall instrument functions, such as reset, status, and synchronization. All common commands consist of a three-letter mnemonic preceded by an asterisk: **\*RST \*IDN? \*SRE 8**.
- Subsystem commands perform specific instrument functions. They are organized into an inverted tree structure with the "root" at the top. The following figure shows a portion of a subsystem command tree, from which you access the commands located along the various paths.

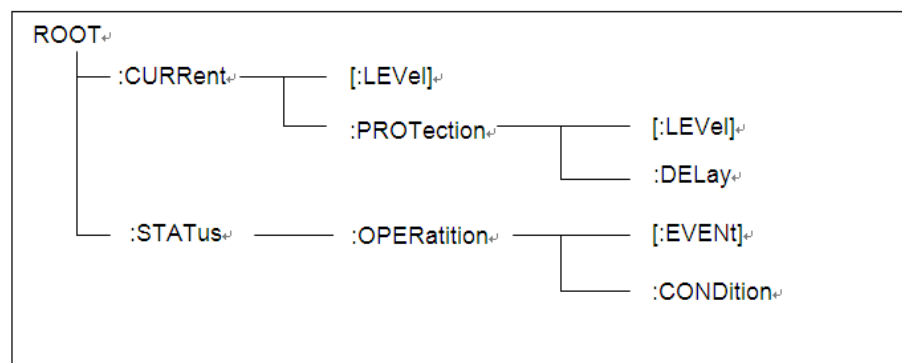

### Multiple Commands in a Message

Multiple SCPI commands can be combined and sent as a single message with one message terminator. There are two important considerations when sending several commands within a single message:

- Use a semicolon to separate commands within a message.
- Head paths influence how the instrument interprets commands.

We consider the head path as a string which will be inserted in front of every command of a message. As for the first command of a message, the head path is a null string; for each subsequent command, the head path is a string which is defined to form the current command until and including the head of the last colon separator. A message with two combined commands:

**CURR:LEV 3;PROT:STAT OFF**

The example indicates the effect of semicolon and explains the concept of head path. Since the head path is defined to be "CURR" after "curr: lev 3", the head of the second command, "curr", is deleted and the instrument explains the second command as:

**CURR:PROT:STAT OFF**

If "curr" is explicitly included in the second command, it is semantically wrong. Since combining it with the head path will become "CURR:CURR:PROT:STAT OFF", resulting in wrong command.

## Movement in the Subsystem

In order to combine commands from different subsystems, you need to be able to reset the header path to a null string within a message. You do this by beginning the command with a colon (:), which discards any previous header path. For example, you could clear the output protection and check the status of the Operation Condition register in one message by using a root specifier as follows:

**PROTection:CLEAR;:STATus:OPERation:CONDition?**

The following message shows how to combine commands from different subsystems as well as within the same subsystem:

**POWER:LEVel 200;PROTection 28; :CURRent:LEVel 3;PROTection:STATe ON**

Note the use of the optional header LEVel to maintain the correct path within the voltage and current subsystems, and the use of the root specifier to move between subsystems.

## Including Common Commands

You can combine common commands with subsystem commands in the same message. Treat the common command as a message unit by separating it with a semicolon (the message unit separator). Common commands do not affect the header path; you may insert them anywhere in the message.

**VOLTage:TRIGgered 17.5;:INITialize;\*TRG**

**OUTPut OFF;\*RCL 2;OUTPut ON**

## Case Sensitivity

Common commands and SCPI commands are not case sensitive. You can use upper or lower, for example:

```
*RST = *rst
:DATA? = :data?
:SYSTEM:PRESet = :system:preset
```

## Long-Form and Short-Form Versions

A SCPI command word can be sent in its long-form or short-form version. However, the short-form version is indicated by upper case characters. Examples:

```
:SYSTEM:PRESet long-form
:SYST:PRES short form
:SYSTEM:PRES long-form and short-form combination
```

Note that each command word must be in long-form or short-form, and not something in between.

For example, **:SYSTe:PRESe** is illegal and will generate an error. The command will not be executed.

## Query

Observe the following precautions with queries:


- Set up the proper number of variables for the returned data. For example, if you are reading back a measurement array, you must dimension the array according to the number of measurements that you have placed in the measurement buffer.
- Read back all the results of a query before sending another command to the instrument. Otherwise a Query Interrupted error will occur and the unreturned data will be lost.

## 1.3 Message Type of SCPI

There are two types of SCPI messages, program and response.

- Program message: A program message consists of one or more properly formatted SCPI commands sent from the controller to the instrument. The message, which may be sent at any time, requests the instrument to perform some action.
- Response message: A response message consists of data in a specific SCPI format sent from the instrument to the controller. The instrument sends the message only when commanded by a program message called a "query."

The next figure illustrates SCPI message structure:

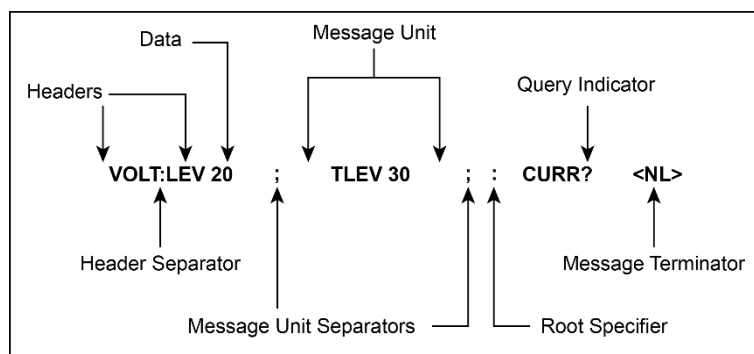

## The message unit

The simplest SCPI command is a single message unit consisting of a command header (or keyword) followed by a message terminator. The message unit may include a parameter after the header. The parameter can be numeric or a string.

**ABORt<NL>**

**VOLTage 20<NL>**

## Headers

Headers, also referred to as keywords, are instructions recognized by the instrument. Headers may be either in the long form or the short form. In the long form, the header is completely spelled out, such as VOLTAGE, STATUS and DELAY. In the short form, the header has only the first three or four letters, such as VOLT, STAT and DEL.

## Query indicator

Following a header with a question mark turns it into a query (**VOLTage?**, **VOLTage:PROtection?**). If a query contains a parameter, place the query indicator at the end of the last header (**VOLTage:PROtection?MAX**).

## Message unit separator

When two or more message units are combined into a compound message, separate the units with a semicolon (**STATus:OPERation?;QUESTionable?**).

## Root specifier

When it precedes the first header of a message unit, the colon becomes the root specifier. It tells the command parser that this is the root or the top node of the command tree.

## Message terminator

A terminator informs SCPI that it has reached the end of a message. Three permitted message terminators are:

- newline (<NL>), decimal 10 or hexadecimal 0X0A in ASCII.
- end or identify (<END>)
- both of the above (<NL><END>).

In the examples of this guide, there is an assumed message terminator at the end of each message.

## Command execution rules

- Commands execute in the order that they are presented in the program message.
- An invalid command generates an error and, of course, is not executed.
- Valid commands that precede an invalid command in a multiple command program message are executed.
- Valid commands that follow an invalid command in a multiple command program message are ignored.

## 1.4 Response Data Type

Character strings returned by query statements may take either of the following forms, depending on the length of the returned string:

- **<CRD>**: character response data. Permits the return of character strings.
- **<AARD>**: arbitrary ASCII response data. Permits the return of un delimited 7-bit ASCII. This data type has an implied message terminator.
- **<SRD>**: string response data. Returns string parameters enclosed in double quotes.
- **<Block>**: arbitrary block data.

### Response messages

A response message is the message sent by the instrument to the computer in response to a query command.

### Sending a response message

After sending a query command, the response message is placed in the Output Queue. When the instrument is then addressed to talk, the response message is sent from the Output Queue to the computer

### Multiple response messages

If you send more than one query command in the same program message, the multiple response messages for all the queries is sent to the computer when the instrument is addressed to talk. The responses are sent in the order that the query commands were sent and are separated by semicolons (;). Items within the same query are separated by commas (.). The following example shows the response message for a program message that contains four single item query commands:

```
0; 1; 1; 0
```

### Response message terminator (RMT)

Each response is terminated with an LF (line feed) and EOI (end or identify). The following example shows how a multiple response message is terminated:

```
0; 1; 1; 0; <RMT>
```

### Message exchange protocol

Two rules summarize the message exchange protocol:

- **Rule 1:** You must always tell the instrument what to send to the computer. The following two steps must always be performed to send information from the instrument other computer:
  1. Send the appropriate query command(s) in a program message.
  2. Address the instrument to talk.
- **Rule 2:** The complete response message must be received by the computer before another program message can be sent to the instrument.

## 1.5 Command Format

Formats for command display are as follows:

```
[SOURce[1|2]:]VOLTage:UNIT {VPP|VRMS|DBM}
```

**[SOURce[1|2]:]FREQuency:CENTer  
{<frequency>|MINimum|MAXimum|DEFault}**

Based on the command syntax, most commands (and certain Parameter) are expressed in both upper and lower cases. Upper case refers to abbreviation of commands. Shorter program line may send commands in abbreviated format. Long-format commands may be sent to ensure better program readability.

For example, both formats of VOLT and VOLTAGE are acceptable in the above syntax statements. Upper or lower case may be used. Therefore, formats of VOLTAGE, volt and Volt are all acceptable. Other formats (such as VOL and VOLTAG) are invalid and will cause errors.

- Parameter options with given command strings are included in the brace ({}). The brace is not sent along with command strings.
- Vertical stripes (|) separate several parameter options with given command strings. For example, {VPP|VRMS|DBM} indicates that you may assign "APP", "VRMS" or "DBM" in the above commands. Vertical stripes are not sent along with command strings.
- Angle brackets (< >) in the second example indicates that a value must be assigned to the parameter in the brace. For example, the parameter in the angle bracket is <frequency> in the above syntax statements. Angle brackets are not sent along with command strings. You must assign a value (such as "FREQ:CENT 1000") to the parameter, unless you select other options displayed in the syntax (such as "FREQ:CENT MIN").
- Some syntax elements (such as nodes and Parameter) are included in square brackets ([ ]). It indicates that these elements can be selected and omitted. Angle brackets are not sent along with command strings. If no value is assigned to the optional Parameter, the instrument will select a default value. In the above examples, "SOURce[1|2]" indicates that you may refer to source channel 1 by "SOURce" or "SOURce1" or "SOUR1" or "SOUR". In addition, since the whole SOURce node is optional (in the square bracket), you can refer to the channel 1 by omitting the whole SOURce node. It is because the channel 1 is the default channel for SOURce language node. On the other hand, if you want to refer to channel 2, "SOURce2" or "SOUR2" must be used in the program line.

### Colon (:)

It is used to separate key words of a command with the key words in next level. As shown below:

**APPL:SIN 455E3,1.15,0.0**

In this example, APPLy command assigns a sine wave with frequency of 455 KHz, amplitude of 1.15 V and DC offset of 0.0 V.

### Semicolon (;)

It is used to separate several commands in the same subsystem and can also minimize typing. For example, to send the following command string:

**TRIG:SOUR EXT; COUNT 10**

has the same effect as sending the following two commands:

**TRIG:SOUR EXT  
TRIG:COUNT 10**

## Question mark (?)

You can insert question marks into a command to query current values of most Parameter. For example, the following commands will trigger to set the count as 10:

**TRIG:COUN 10**

Then, you may query count value by sending the following command:

**TRIG:COUN?**

You may also query the allowable minimum or maximum count as follows:

**TRIG:COUN?MIN**

**TRIG:COUN?MAX**

## Comma (,)

If a command requires several Parameter, then a comma must be used to separate adjacent Parameter.

## Space

You must use blank characters, [TAB] or [Space] to separate Parameter with key words of commands.

## Common commands (\*)

The IEEE-488.2 standard defines a set of common commands that perform functions such as reset, self-test, and status operations. Common commands always start with an asterisk (\*) and occupy 3 character sizes, including one or more Parameter. Key words of a command and the first parameter are separated by a space. Semicolon (;) can separate several commands as follows:

**\*RST; \*CLS; \*ESE 32; \*OPC?**

## Command terminator

Command strings sent to the instrument must end with a <Newline> (<NL>) character. IEEE-488 EOI (End or Identify) information can be used as <NL> character to replace termination command string of <NL> character. It is acceptable to place one <NL> after a <Enter>. Termination of command string always resets current SCPI command path to root level.

### NOTE

As for every SCPI message with one query sent to the instrument, the instrument will use a <NL> or newline sign (EOI) to terminate response of return. For example, if "DISP:TEXT?" is sent, <NL> will be placed after the returned data string to terminate response. If an SCPI message includes several queries separated by semicolon (such as "DISP?;DISP:TEXT?"), <NL> will terminate response returned after response to the last query. In all cases, the program must read <NL> in response before another command is sent to the instrument, otherwise errors will be caused.

## 1.6 Data Type

SCPI language defines several data types used for program message and response messages.

- Numerical parameter

Commands requiring numerical parameter support the notations of all common decimal notations, including optional signs, decimal points, scientific notation, etc. Special values of numerical parameter are also acceptable, such as MIN, MAX and DEF. In addition, suffixes for engineering units can also be sent together with numerical parameter (including M, k, m or u). If the command accepts only some specific values, the instrument will automatically round the input parameter to acceptable values. The following commands require numerical parameter of frequency value:

**[SOURCE[1|2]:]FREQUENCY:CENTER  
{<Frequency>|MINimum|MAXimum}**

- <NR1>: represents an integer value, such as 273;
- <NR2>: represents a real number in floating-point format, such as .273;
- <NR3>: represents a real number in scientific notation, such as 2.73E+2;
- <Nrf>: The extensible form includes <NR1>, <NR2> and <NR3>;
- <Nrf+>: The extensible decimal form includes <Nrf>, MIN, MAX and DEF. MIN and MAX are the minimum and maximum finite number. Within the range of the parameter definition, DEF is the default of the parameter.

- Discrete parameter

Discrete parameter are used for settings with limited number of programming values (such as IMMEDIATE, EXTERNAL or BUS). They can use short and long format like key words of commands. They may be expressed in both upper and lower case. The query response always returns uppercase Parameter in short format. The following commands require discrete parameter in voltage unit:

**[SOURCE[1|2]:]VOLTAGE:UNIT {VPP|VRMS|DBM}**

- Boolean parameter

Boolean parameter refer to true or false binary conditions. In case of false conditions, the instrument will accept "OFF" or "0". In case of true conditions, the instrument will accept "ON" or "1". In query of Boolean settings, the instrument will always return "0" or "1". Boolean parameter are required by the following commands:

**DISPLAY {OFF|0|ON|1}**

- ASCII string parameter

String parameter may actually include all ASCII character sets. Character strings must start and end with paired quotation marks; and single quotation marks or double quotation marks are both allowed. Quotation mark separators may also act as one part of a string, they can be typed twice without any character added between them. String parameter is used in the following command:

**DISPLAY:TEXT <quoted string>**

For example, the following commands display message of "WAITING..." (without quotation marks) on the front panel of the instrument.

**DISP:TEXT "WAITING..."**

Single quotation marks may also be used to display the same message.

**DISP:TEXT 'WAITING...'**

– <SPD>: string program data. String parameters enclosed in single or double quotes.

– <CPD>: character program data.

## 1.7 Remote Interface Connections

Please refer to user manual for detailed introductions of the remote interface.

**Note**

If the user want to change the settings of the instrument, for instance, the output setting value, the command SYST:REM must be sent to the instrument after finishing the connection between the instrument and PC.

## Chapter2 SCPI status register

You can get the current status of the power supply by reading the operation status registers. The power supply records the different status of the instrument through the four status register group, the four status register group are: status byte register, standard event register, query status register and operation status register. Status byte register records the information of the other status register.

The following table describes the status signals.

Bit name	Bit	Decimal value	Definition
<b>Questionable Status Register</b>			
OV	0	1	Output is disabled by the over-voltage protection.
OC	1	2	Output is disabled by the over-current protection.
OP	2	4	Output is disabled by the over-power protection.
UV	3	8	Output is disabled by the under-voltage protection.
UUT_OT	4	16	Output is disabled by the UUT over-temperature protection.
UC	5	32	Output is disabled by the under-current protection.
SRvs	6	64	Sense malfunction.
LINE	7	128	Off Line.
Rvs	8	256	Output terminals reversed
BUS	9	512	Output is disabled by the external command
Wdog	10	1024	Watchdog protection.
OT	11	2048	Over-temperature protection.
FAN_FAIL	12	4096	Unknow fault internal
TEMP_SENSE_FAIL	13	8192	Temperature sensor fault
AC_LOSS	14	16384	Power down
FLDBK	15	32768	Foldback protection
<b>Operation Status Register</b>			
Priority	0		CV /CC mode priority
Cal	1	2	The power supply is under calibration.
List	2-3	4-8	The power supply is running the list program. 0: idle, 1: wtg, 2: run, 3: end;
CV	4	16	Output is in constant voltage.
CC	5	32	Output is in constant current.
CW	6	56	Output is in constant current.
On_Delay	8	256	The power supply is in the output-on delay.
Off_Delay	9	512	The power supply is in the output-off delay.
On	10	1024	Output is programmed on.

List Pause	11	2048	The list program pauses.
<b>Standard Event Register</b>			
OPC	0	1	All commands before and including *OPC have been executed.
QYE	2	4	The instrument tried to read the output buffer but it was empty, a new command line was received before a previous query has been read, or both the input and output buffers are full.
DDE	3	8	A device-specific error, including a self-test error, calibration error or other device-specific error occurred.
EXE	4	16	An execution error occurred.
CME	5	32	A command syntax error occurred.
NU	6	not used	0 is returned.
PON	7	128	Power has been cycled since the last time the event register was read or cleared.
<b>Status Byte Register</b>			
NU	0	not used	0 is returned.
NU	1	not used	0 is returned.
EAV	2	4	Error buffer available.
QUES	3	8	This bit is set to 1 when any one status of enabled query status register changes.
MAV	4	16	Output buffer available.
ESB	5	32	Bit ESB is set to 1 when the status of an enabled standard event status.
RQS/MSS	6	64	Register changes.
OPER	7	128	If the status of enabled operation register changes, then this bit is set to 1.

---

## Chapter3 Status Commands

---

### **STATus:OPERation[:EVENT]?**

This command can read the parameter from operation event register. After executing this order, operation event register is reset.

#### Syntax

STATus:OPERation[:EVENT]?

#### Arguments

None

#### Example

STAT:OPER?

#### Returns

NR1

### **STATus:OPERation:CONDition?**

This command can read the parameter from the operation condition register. When the parameter of operation condition register changes, the bit corresponding in operation event register is 1.

#### Syntax

STATus:OPERation:CONDition?

#### Arguments

None

#### Example

STAT:OPER:COND?

#### Returns

NR1

### **STATus:OPERation:ENABLE <n>**

This command can set the parameter of operation event enable register. Setting parameter can determine which bit value of operation event register is 1 and the bit will cause OPER of status byte register to be 1.

**Syntax**`STATus:OPERation:ENABle <n>`**Arguments**`<0-65535>`**Example**`STAT:OPER:ENAB 16`**Query syntax**`STATus:OPERation:ENABle?`**Returns**`NR1`**STATus:OPERation:NTRansition <n>**

This command is used to edit the negative transition trigger register of operation event.

**Syntax**`STATus:OPERation:NTRansition <n>`**Arguments**`<0-65535>`**Example**`STAT:OPER:NTR 16`**Query syntax**`STATus:OPERation:NTRansition?`**Returns**`NR1`**STATus:OPERation:PTRansition <n>**

This command is used to edit the positive transition trigger register of operation event.

**Syntax**`STATus:OPERation:PTRansition <n>`

**Arguments**

&lt;0-65535&gt;

**Example**

STAT:OPER:PTR 32

**Query syntax**

STATus:OPERation:PTRansition?

**Returns**

NR1

**STATus:QUEStionable[:EVENT]?**

This command can be used to read the value in query event register. The power supply will return a decimal number corresponding to the binary weighted sum of each unit digit of register. These digits will be latched. After executing this command, the query event register will be cleared.

**Syntax**

STATus:QUEStionable[:EVENT]?

**Arguments**

None

**Example**

STAT:QUES?

**Returns**

NR1

**STATus:QUEStionable:CONDition?**

This command is used to read the value of query condition register and gets the status of power supply.

**Syntax**

STATus:QUEStionable:CONDition?

**Arguments**

None

**Example**

STAT:QUES:COND?

**Returns**

NR1

**STATus:QUEStionable:ENABLE <n>**

This command edits the enable register value of query event. In query, the power supply will return a decimal number representing the binary weighted sum of the enable register.

**Syntax**

STATus:QUEStionable:ENABLE &lt;n&gt;

**Arguments**

&lt;0-65535&gt;

**Example**

STAT:QUES:ENAB 24

**Query syntax**

STATus:QUEStionable:ENABLE?

**Returns**

NR1

**STATus:QUEStionable:NTRansition <n>**

This command is used to edit the negative transition trigger register of query event.

**Syntax**

STATus:QUEStionable:NTRansition &lt;n&gt;

**Arguments**

&lt;0-65535&gt;

**Example**

STAT:QUES:NTR 64

**Query syntax**

STATus:QUEStionable:NTRansition?

**Returns**

NR1

## **STATus:QUEStionable:PTRansition <n>**

This command is used to edit the positive transition trigger register of query event.

### Syntax

STATus:QUEStionable:PTRansition <n>

### Arguments

<0-65535>

### Example

STAT:QUES:PTR 32

### Query syntax

STATus:QUEStionable:PTRansition?

### Returns

NR1

## **STATus:PRESet**

This command is used to clear the register status as follows:

- Enable the Questionable status, PTR register and NTR register
- Enable the operation status, PTR register and NTR register

### Syntax

STATus:PRESet

### Example

STAT:PRES

---

## Chapter4 Channel Selection Commands

---

### **CHANnel <NR1>**

This command selects the channel number.

#### Syntax

CHANnel <NR1>

#### Arguments

0-16

#### Default value

0

#### Example

CHAN 2

#### Query syntax

CHANnel?

#### Returns

NR1

### **INSTrument[:SElect] <NR1>**

This command selects the channel. The function is the same as the command CHANnel <NR1>.

#### Syntax

INSTrument[:SElect] <NR1>

#### Arguments

0-16

#### Default value

0

#### Example

INST[:SEL] 2

#### Query syntax

INSTrument[:SElect]?

## Returns

NR1

---

## Chapter5 System Commands

---

### **SYSTem:BEEPer:IMMediate**

This command tests the beeper function of the power supply. If it passes the test, a beep is issued.

#### Syntax

SYSTem:BEEPer:IMMediate

#### Arguments

None

#### Example

SYST:BEEP:IMM

#### Query syntax

None

#### Returns

None

### **SYSTem:BEEPer[:STATe] <bool>**

This command enables or disables the beeper function of the power supply.

#### Syntax

SYSTem:BEEPer[:STATe] <bool>

#### Arguments

0|OFF|1|ON

#### Default value

1

#### Example

SYST:BEEP 1

#### Query syntax

SYSTem:BEEPer[:STATe]?

#### Returns

0|1

## SYSTem:ERRor?

This command reads the error code and error information.

### Syntax

SYSTem:ERRor?

### Arguments

None

### Example

```
- > SYST:ERR?  
< - 0,"NO_ERR"
```



#### Note

- “- >” indicates the commands that you send to instrument.
- “< -” indicates the response from instrument.

### Returns

AARD

## SYSTem:CLEar

This command clears the system status register.

### Syntax

SYSTem:CLEar

### Arguments

None

### Example

```
SYST:CLE
```

### Query syntax

None

### Returns

None

## SYSTem:REMote

This command takes the instrument out of front-panel control mode and switches it to remote control mode.

**Syntax**

SYSTem:REMOte

**Arguments**

None

**Example**

SYST:REM

**Query syntax**

None

**Returns**

None

**SYSTem:LOCal**

This command is to switch the power supply into control from the front panel.

**Syntax**

SYSTem:LOCal

**Arguments**

None

**Example**

SYST:LOC

**Query syntax**

None

**Returns**

None

**SYSTem:RWLock**

This command locks the power supply in remote control mode. When this command is executed, pressing the LOCAL button does not switch the instrument to local control mode.

**Syntax**

SYSTem:RWLock

**Arguments**

None

### Example

SYST:RWL

### Query syntax

None

### Returns

None

## SYSTEM:KEY <n>

This command and its query form set and read the value of the Operation Enable register.

### Syntax

SYSTEM:KEY <n>

### Arguments

The definition of keyboard is listed as follows:

Arguments	keys	Arguments	keys
1	Link	9	l-set
2	Shift	10	R-set
3	Source	11	Enter
4	Load	12	Left
5	Esc	13	Right
6	V-set	14	Decrease
7	Save	15	Increase
8	On/Off	-	-

### Example

SYST:KEY 5

### Query syntax

SYSTEM:KEY?

### Returns

n

## SYSTEM:COMMunicate:GPIB[:SELF]:ADDRESS <addr>

This command sets the GPIB address of the power supply.

### Syntax

SYSTEM:COMMunicate:GPIB[:SELF]:ADDRESS <addr>

### Arguments

NR1 <0-30>

### Default value

15

### Example

SYST:COMM:GPIB:ADDR 14

### Query syntax

SYSTem:COMMunicate:GPIB[:SELF]:ADDRess?

### Returns

NR1 (0-30)

## **SYSTem:COMMunicate:LAN:CURRent:ADDRess <"addr">**

This command sets the IP address of the power supply.

### Syntax

SYSTem:COMMunicate:LAN:CURRent:ADDRess <"addr">

### Arguments

Str "<0-255>,<0-255>,<0-255>,<0-255>"

### Example

SYST:COMM:LAN:CURR:ADDR "192.168.0.211"

### Query syntax

SYSTem:COMMunicate:LAN:CURRent:ADDRess?

### Returns

Str

## **SYSTem:COMMunicate:LAN:CURRent:DGATeway <"addr">**

This command sets the gateway of the power supply.

### Syntax

SYSTem:COMMunicate:LAN:CURRent:DGATeway <"addr">

**Arguments**

Str "<0-255>,<0-255>,<0-255>,<0-255>"

**Example**

SYST:COMM:LAN:CURR:DGAT "192.168.0.1"

**Query syntax**

SYSTem:COMMunicate:LAN:CURRent:DGATeway?

**Returns**

Str

## **SYSTem:COMMunicate:LAN:CURRent:SMASK <"addr">**

This command sets the subnet mask of the power supply.

**Syntax**

SYSTem:COMMunicate:LAN:CURRent:SMASK <"addr">

**Arguments**

Str "<0-255>,<0-255>,<0-255>,<0-255>"

**Example**

SYST:COMM:LAN:CURR:SMAS "255.255.255.0"

**Query syntax**

SYSTem:COMMunicate:LAN:CURRent:SMASK?

**Returns**

Str

## **SYSTem:COMMunicate:LAN:DHCP <Bool>**

This command enables or disables the dynamic IP address function.

**Syntax**

SYSTem:COMMunicate:LAN:DHCP <Bool>

**Arguments**

<0|1|OFF|ON>

**Example**

SYST:COMM:LAN:DHCP 1

### Query syntax

SYSTem:COMMunicate:LAN:DHCP?

### Returns

0|1

## **SYSTem:COMMunicate:LAN:RAWSocket:PORT**

This command sets the socket port for the LAN communication.

### Syntax

SYSTem:COMMunicate:LAN:RAWSocket:PORT <NR1>

### Arguments

<2000-65535>

### Example

SYST:COMM:LAN:RAWS:PORT 30000

### Query syntax

SYSTem:COMMunicate:LAN:RAWSocket:PORT?

### Returns

NR1

## **SYSTem:COMMunicate:LAN:MACaddress?**

This command queries the communication MAC address.

### Syntax

SYSTem:COMMunicate:LAN:MACaddress?

### Arguments

None

### Example

- > SYST:COMM:LAN:MAC?

< - "12:34:56:79:99:AA"



#### Note

- “ - >” indicates the commands that you send to the power supply.
- “< -” indicates the response from the power supply.

### Returns

str

## **SYSTem:COMMunicate:SERial:BAUDrate**

This command sets the baud rate of the serial port.

### Syntax

SYSTem:COMMunicate:SERial:BAUDrate

### Arguments

<4800|9600|19200|38400|57600|115200>

### Example

SYST:COMM:SER:BAUD 9600

### Query syntax

SYSTem:COMMunicate:SERial:BAUDrate?

### Returns

4800|9600|19200|38400|57600|115200

## **SYSTem:VERSion?**

This command queries the SCPI version of the instrument.

### Syntax

SYSTem:VERSion?

### Arguments

None

### Example

```
- > SYST:VERS?  
< - "1993.1"
```

### Returns

AARD

## **SYSTem:COMMunicate:LAN:DNS1 <dns>**

This command sets DNS primary address for LAN.

### Syntax

SYSTem:COMMunicate:LAN:DNS1 <dns>

### Arguments

SPD

**Example**

```
SYST:COMM:LAN:DNS1 "192.168.0.1"
```

**Query syntax**

```
SYSTem:COMMunicate:LAN:DNS1?
```

**Returns**

```
SPD
```

**SYSTem:COMMunicate:LAN:DNS2 <dns>**

This command sets DNS secondary address for LAN.

**Syntax**

```
SYSTem:COMMunicate:LAN:DNS2 <dns>
```

**Arguments**

```
SPD
```

**Example**

```
SYST:COMM:LAN:DNS1 "192.168.0.2"
```

**Query syntax**

```
SYSTem:COMMunicate:LAN:DNS2?
```

**Returns**

```
SPD
```

**SYSTem:COMMunicate:LAN:RAWSocketport <port>**

This command sets the socket port for the LAN communication.

**Syntax**

```
SYSTem:COMMunicate:LAN:RAWSocketport <port>
```

**Arguments**

```
2000-65535
```

**Example**

```
SYST:COMM:LAN:RAWS 30000
```

**Query syntax**

```
SYSTem:COMMunicate:LAN:RAWSocketport?
```

**Returns**

NR1

**SYSTem:COMMunicate:LAN:MDNS <onoff>**

This command is used to set the status of MDNS function.

**Syntax**

SYSTem:COMMunicate:LAN:MDNS &lt;onoff&gt;

**Arguments**

0|OFF|1|ON

**Example**

SYST:COMM:LAN:MDNS 1

**Query syntax**

SYSTem:COMMunicate:LAN:MDNS?

**Returns**

0|1

**SYSTem:COMMunicate:LAN:PING <onoff>**

This command is used to set the status of MDNS function.

**Syntax**

SYSTem:COMMunicate:LAN:PING &lt;onoff&gt;

**Arguments**

0|OFF|1|ON

**Example**

SYST:COMM:LAN:PING 1

**Query syntax**

SYSTem:COMMunicate:LAN:PING?

**Returns**

0|1

**SYSTem:COMMunicate:LAN:TELNet <onoff>**

This command is used to set the status of telnet function.

**Syntax**`SYSTem:COMMunicate:LAN:TELNet <onoff>`**Arguments**`0|OFF|1|ON`**Example**`SYST:COMM:LAN:TELNet 1`**Query syntax**`SYSTem:COMMunicate:LAN:TELNet?`**Returns**`0|1`**SYSTem:COMMunicate:LAN:WEB <onoff>**

This command is used to set the status of WEB function.

**Syntax**`SYSTem:COMMunicate:LAN:WEB <onoff>`**Arguments**`0|OFF|1|ON`**Example**`SYST:COMM:LAN:WEB 1`**Query syntax**`SYSTem:COMMunicate:LAN:WEB?`**Returns**`0|1`**SYSTem:COMMunicate:LAN:VXI11 <onoff>**

This command is used to set the status of VXI-11 function.

**Syntax**`SYSTem:COMMunicate:LAN:VXI11 <onoff>`**Arguments**`0|OFF|1|ON`

**Example**

```
SYST:COMM:LAN:VXI11 1
```

**Query syntax**

```
SYSTem:COMMunicate:LAN:VXI11?
```

**Returns**

```
0|1
```

**SYSTem:COMMunicate:LAN:REStore**

This command resets the LAN settings to default settings.

**Syntax**

```
SYSTem:COMMunicate:LAN:REStore
```

**Arguments**

None

**Example**

```
SYST:COMM:LAN:REST
```

**Query syntax**

None

**Returns**

None

**SYSTem:COMMunicate:LAN:SAVE**

This command makes the LAN settings valid.

**Syntax**

```
SYSTem:COMMunicate:LAN:SAVE
```

**Arguments**

None

**Example**

```
SYST:COMM:LAN:RES
```

**Query syntax**

None

**Returns**

None

**SYSTem:COMMunicate:LAN:STATe?**

This command queries the LAN state.

**Syntax**

SYSTem:COMMunicate:LAN:STATe?

**Arguments**

None

**Default value**

DOWN

**Example**

SYST:COMM:LAN:STAT?

**Returns**

DOWN|UP

**SYSTem:COMMunicate:LAN:HOSTname?**

This command queries the host name in the LAN communication.

**Syntax**

SYSTem:COMMunicate:LAN:HOSTname?

**Arguments**

None

**Example**

SYST:COMM:LAN:HOST?

**Returns**

SPD

**SYSTem:COMMunicate:LAN:DESCription?**

This command queries the host name description in the LAN communication.

**Syntax**

SYSTem:COMMunicate:LAN:DESCription?

**Arguments**

None

**Example**

SYST:COMM:LAN:DESC?

**Returns**

SPD

**SYSTem:COMMunicate:LAN:DOMain?**

This command queries the domain in the LAN communication.

**Syntax**

SYSTem:COMMunicate:LAN:DOMain?

**Arguments**

None

**Example**

SYST:COMM:LAN:DOM?

**Returns**

SPD

**[SOURce:]EXTernal[:STATe] <bool>**

This command enables or disables the external analog quantity function of the power supply.

**Syntax**

[SOURce:]EXTernal[:STATe] &lt;bool&gt;

**Arguments**

&lt;0|1|OFF|ON&gt;

**Default value**

0

**Example**

EXT 1

**Query syntax**

[SOURce:]EXTernal[:STATe]?

**Returns**

0|1

**ADDRess <NR1>**

This command is used to set instrument address which communicate through RS232 and RS485 interface.

**Syntax**

ADDRess &lt;NR1&gt;

**Arguments**

0-127

**Default value**

None

**Example**

ADDR 1

**SYSTem:BOOT:VERSion?**

This command is used to query the boot version of optional accessories.

**Syntax**

SYSTem:BOOT:VERSion?

**Arguments**

None

**Default value**

None

**Example**

SYST:BOOT:VERS?

**Returns**

AARD

## Chapter6 Measure & Fetch Commands

---

### **MEASure[:SCALar]:CURRent[:DC]?**

### **FETCh[:SCALar]:CURRent[:DC]?**

This command queries the present current measurement.

#### Syntax

MEASure[:SCALar]:CURRent[:DC]?

FETCh[:SCALar]:CURRent[:DC]?

#### Arguments

None

#### Example

MEAS:CURR?

FETC:CURR?

#### Returns

NRf

### **MEASure[:SCALar]:POWer[:DC]?**

### **FETCh[:SCALar]:POWer[:DC]?**

This command queries the present power measurement.

#### Syntax

MEASure[:SCALar]:POWer[:DC]?

FETCh[:SCALar]:POWer[:DC]?

#### Arguments

None

#### Example

MEAS:POW?

FETC:POW?

#### Returns

NRf

## **MEASure[:SCALar]:VOLTage[:DC]?**

## **FETCh[:SCALar]:VOLTage[:DC]?**

This command queries the present measured voltage.

### Syntax

MEASure[:SCALar]:VOLTage[:DC]?

FETCh[:SCALar]:VOLTage[:DC]?

### Arguments

None

### Example

MEAS:VOLT?

FETC:VOLT?

### Returns

NRf

## **MEASure[:SCALar]:CAPacity?**

## **FETCh[:SCALar]:CAPacity?**

This command queries the charging capacity of the battery.

### Syntax

MEASure[:SCALar]:CAPacity?

FETCh[:SCALar]:CAPacity?

### Arguments

None

### Example

MEAS:CAP?

FETC:CAP?

### Returns

NRf

## **MEASure[:SCALar]:UUT:TEMPerature?**

## **FETCh[:SCALar]:UUT:TEMPerature?**

This command queries the measured UUT temperature.

### Syntax

MEASure[:SCALar]:UUT:TEMPerature?

FETCh[:SCALar]:UUT:TEMPerature?

### Arguments

None

### Example

MEAS:UUT:TEMP?

FETC:UUT:TEMP?

### Returns

NRf

## **MEASure[:SCALar]:RECover:ENERgy?**

## **FETCh[:SCALar]:RECover:ENERgy?**

This command queries the total energy which return to grid.

### Syntax

MEASure[:SCALar]:RECover:ENERgy?

FETCh[:SCALar]:RECover:ENERgy?

### Arguments

None

### Example

MEAS:REC:ENERgy?

FETCh:REC:ENERgy?

### Returns

NRf

## **MEASure[:SCALar]:AHOuR?**

### **FETCh:AHOuR?**

This command queries the total Ah value.

#### Syntax

FETCh:AHOuR?

#### Arguments

None

#### Example

FETC:AHO?

#### Returns

NRf

## **MEASure[:SCALar]:WHOUr?**

### **FETCh:WHOUr?**

This command queries the total Wh value.

#### Syntax

FETCh:WHOUr?

#### Arguments

None

#### Example

FETC:WHO?

#### Returns

NRf

## **MEASure?**

This command queries the present voltage measurement, current measurement and power measurement

### **FETCh?**

This command reads the latest preprocessed capacity voltage value, current value and power value from sampling buffer.

**Syntax**

FETCh?  
MEASure?

**Arguments**

None

**Example**

FETC?  
MEAS?

**Returns**

NRf

---

## Chapter7 Output Commands

---

### **OUTPut[:STATe] <bool>**

This command sets the output state of the power supply.

#### Syntax

OUTPut[:STATe] <bool>

#### Arguments

0|OFF|1|ON

#### Default value

0

#### Example

OUTP ON

#### Query syntax

OUTPut[:STATe]?

#### Returns

0|1

### **[OUTPut:]PROTection:CLEAr**

This command clears the protection status.

#### Syntax

[OUTPut:]PROTection:CLEAr

#### Arguments

None

#### Example

PROT:CLE

#### Query syntax

None

#### Returns

None

## **OUTPut:DElAy[:RISE] <NRf+>**

This command sets the delay time before turning the output on.

### Syntax

OUTPut:DElAy[:RISE] <NRf+>

### Arguments

<0.000-10.000>

### Default value

0.000S

### Example

OUTP:DEL 1.0

### Query syntax

OUTPut:DElAy[:RISE]? [MINimum|MAXimum]

### Returns

NR3

## **OUTPut:DElAy:FALL <NRf+>**

This command sets the delay time after turning the output off.

### Syntax

OUTPut:DElAy:FALL <NRf+>

### Arguments

<0.000-10.000>

### Default value

0.000S

### Example

OUTP:DEL:FALL 1.0

### Query syntax

OUTPut:DElAy:FALL? [MINimum|MAXimum]

### Returns

NR3

## **OUTPut:PONSetup <RST|LAST|LOFF>**

This command controls the settings and output state when the power supply is powered on.

### Syntax

```
OUTPut:PONSetup <RST|LAST|LOFF>
```

### Arguments

```
<RST|LAST|LOFF>
```

### Default value

```
RST
```

### Example

```
OUTP:PONS LAST
```

### Query syntax

```
OUTPut:PONS?
```

### Returns

```
RST|LAST|LOFF
```

## **OUTPut:REVerse[:STATe]?**

This command is used to query the connection of output terminals.

### Syntax

```
OUTPut:REVerse[:STATe]?
```

### Arguments

```
None
```

### Default value

```
None
```

### Example

```
OUTP:REV?
```

### Returns

```
0|1
```

0: indicates NOT reversed, 1: indicates reversed.

## **OUTPut:SDS[:STATe]?**

This command is used to query the SDS status.

### Syntax

OUTPut:SDS[:STATe]?

### Arguments

None

### Default value

None

### Example

OUTP:SDS?

### Returns

0|1

0: indicates not connecte SDS, 1: indicates the SDS is connected.

## **OUTPut:SDS:ENABLE <0|OFF|1|ON>**

This command is used to enable or disable the SDS module.1: indicates enable, 0: indicates disable.

### Syntax

OUTPut:SDS:ENABLE <0|OFF|1|ON>

### Arguments

<0|OFF|1|ON>

### Default value

1

### Example

OUTP:SDS:ENAB 1

### Returns

0|1

## **OUTPut:SDS:DC:RELay <0|OFF|1|ON>**

This command is used to open or close the main circuit DC relay, 0 indicates open, 1 indicates close.

**Syntax**

OUTPut:SDS:DC:RELAy <0|OFF|1|ON>

**Arguments**

<0|1|OFF|ON>

**Default value**

ON

**Example**

OUTP:SDS:DC:REL 0

**Returns**

0|1

**Query syntax**

OUTPut:SDS:DC:RELAy?

**OUTPut:SDS:SENSe:RELAy <0|OFF|1|ON>**

This command is used to switch the SDS relay to local measurement or remote sense. 0 indicates local measurement. 1 indicates remote sensing.

**Syntax**

OUTPut:SDS:DC:RELAy <0|OFF|1|ON>

**Arguments**

<0|1|OFF|ON>

**Default value**

ON

**Example**

OUTP:SDS:DC:REL 1

**Returns**

0|1

**Query syntax**

OUTPut:SDS:SENSe:RELAy?

**OUTPut:SDS:SURGe:SUPPress**

This command is used to execute the prevent the surge function of SDS.

**Syntax**

OUTPut:SDS:SURGe:SUPPress

**Arguments**

None

**Default value**

None

**Example**

OUTP:SDS:SURG:SUPP

**Returns**

0|1

0: indicates this function execute fail. 1: indicates this function execute success.

**Query syntax**

OUTPut:SDS:SURGe:SUPPress?

**OUTPut:PROTection:WDOG[:STATe] <0|OFF|1|ON>**

This command enables or disables the state of the communication watchdog.

**Syntax**

OUTPut:PROTection:WDOG[:STATe] &lt;0|OFF|1|ON&gt;

**Arguments**

&lt;0|1|OFF|ON&gt;

**Default value**

OFF

**Example**

OUTP:PROT:WDOG 0

**Returns**

0|1

**Query syntax**

OUTPut:PROTection:WDOG[:STATe]?

**OUTPut:PROTection:WDOG:DELaY <NRf+>**

This command sets the time of the communication watchdog.

**Syntax**

OUTPut:PROTection:WDOG:DELaY <NRf+>

**Arguments**

<MINimum-MAXimum>|MINimum|MAXimum>

**Default value**

2

**Example**

OUTP:PROT:WDOG:DEL 3

**Returns**

<NRf+>

**Query syntax**

OUTPut:PROTection:WDOG:DELaY?

**OUTPut:PROTection:FOLDBack[:MODE] <OFF|CC|CV>**

This command is used to set foldback function mode.

**Syntax**

OUTPut:PROTection:FOLDBack[:MODE] <OFF|CC|CV>

**Arguments**

<OFF|CC|CV>

**Default value**

OFF

**Example**

OUTP:PROT:FOLD CC

**Returns**

OFF|CC|CV

**Query syntax**

OUTPut:PROTection:FOLDBack[:MODE]?

**OUTPut:PROTection:FOLDBack:DELaY <NRf+>**

This command is used to set the delay time of FOLDBACK protection.

**Syntax**

OUTPut:PROTection:FOLDback:DELaY <NRf++>

**Arguments**

<MINimum-MAXimum>|MINimum|MAXimum

**Default value**

MAXimum

**Example**

OUTP:PROT:FOLD:DEL 0.2

**Returns**

NR3

**Query syntax**

OUTPut:PROTection:FOLDback:DELaY? [MINimum|MAXimum]

---

## Chapter8 Trigger Commands

---

### **TRIGger[:IMMediate]**

This command generates a trigger signal when the trigger source is BUS.

#### Syntax

TRIGger[:IMMediate]

#### Arguments

None

#### Example

TRIG

#### Query syntax

None

#### Returns

None

### **TRIGger:LIST:SOURce <KEYPad|BUS>**

This command sets the trigger source.

#### Syntax

TRIGger:LIST:SOURce <KEYPad|BUS>

#### Arguments

<KEYPad|BUS>

#### Default value

KEYPad

#### Example

TRIG:LIST:SOUR KEYPad

#### Returns

KEYPad |BUS

## **INITiate[:IMMediate]:LIST**

this command is used to launch the LIST file. When the List finishes running, the interface displays END, and this command can be sent to initialize the List again to wait for triggering running state.

### Syntax

INITiate[:IMMediate]:LIST

### Arguments

None

### Example

INIT:LIST

### Returns

None

## **ABORt:LIST**

This command is used to reset the list program to idle state.

### Syntax

ABORt:LIST

### Arguments

None

### Example

ABOR:LIST

### Returns

None

---

## Chapter9 Sense Commands

---

### **SENSe[:REMOte][:STATe] <bool>**

This command enables or disables the sense function.

#### Syntax

SENSe[:REMOte][:STATe] <bool>

#### Arguments

0|OFF|1|ON

#### Default value

OFF

#### Example

SENS ON

#### Query syntax

SENSe[:REMOte][:STATe]?

#### Returns

0|OFF|1|ON

### **SENSe:FILTer:LEVel <SLOW|MEDIum|FAST>**

This command sets the sense filter level.

#### Syntax

SENSe:FILTer:LEVel <SLOW|MEDIum|FAST>

#### Arguments

<FAST|MEDIum|SLOW>

#### Default value

SLOW

#### Example

SENS:FILT:LEV MED

#### Query syntax

SENSe:FILTer:LEVel?

**Returns**

FAST|MEDIUm|SLOW

**SENSe:AHOur:RESet**

This command clears the Ah information.

**Syntax**

SENSe:AHOur:RESet

**Arguments**

None

**Default value**

None

**Example**

SENS:AHO:RES

**Returns**

None

**SENSe:WHOur:RESet**

This command clears the Wh information.

**Syntax**

SENSe:WHOur:RESet

**Arguments**

None

**Default value**

None

**Example**

SENS:WHO:RES

**Returns**

None

---

## Chapter10 Source Commands

---

### **[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude] <NRf+>**

This command sets the current value of the power supply. The query form of this command gets the set current value of the power supply.

#### Syntax

[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude] <NRf+>

#### Arguments

<NRf+> MIN TO MAX

#### Default value

MAX

#### Example

CURR 3.500

#### Query syntax

[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude]? [MINimum|MAXimum]

#### Returns

NRf+

### **[SOURce:]CURRent[:LEVel]:LIMit:POSitive <NRf+>**

This command sets the positive current limit value of the power supply.

#### Syntax

[SOURce:]CURRent [:LEVel]:LIMit:POSitive <NRf+>

#### Arguments

<MINimum-MAXimum>|MINimum|MAXimum

#### Default value

0.0

#### Example

CURR:LIM:POS MAX

## Query syntax

```
[SOURce:]CURRent [:LEVel]:LIMit:POSitive?
```

## Returns

```
NR3
```

**[SOURce:]CURRent[:LEVel]:LIMit:NEGative <NRf+>**

This command sets negative current limit value of power supply.

## Syntax

```
[SOURce:]CURRent [:LEVel]:LIMit:NEGative <NRf+>
```

## Arguments

```
<MINimum-MAXimum>|MINimum|MAXimum
```

## Default value

```
0.0
```

## Example

```
CURR:LIM:NEG MAX
```

## Query syntax

```
[SOURce:]CURRent [:LEVel]:LIMit:NEGative?
```

## Returns

```
NR3
```

**[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude] <NRf+>**

This command sets the output current value when the power supply receives a trigger.

## Syntax

```
[SOURce:]CURRent[:LEVel][:IMMEDIATE][:AMPLitude] <NRf+>
```

## Arguments

```
<NRf+> MIN TO MAX
```

## Default value

```
MIN
```

## Example

```
CURR:TRIG 3.500
```

## Query syntax

[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude]? [MINimum|MAXimum]

## Returns

NRf+

**[SOURce:]CURRent[:OVER]:PROTection[:LEVel]  
<NRf+>**

This command sets the over-current limit of the power supply.

## Syntax

[SOURce:]CURRent[:OVER]:PROTection[:LEVel] <NRf+>

## Arguments

<NRf+> MIN TO MAX

## Default value

MAX

## Example

CURR:PROT 10.000

## Query syntax

[SOURce:]CURRent[:OVER]:PROTection[:LEVel]? [MINimum|MAXimum]

## Returns

NRf+

**[SOURce:]CURRent[:OVER]:PROTection:DELaY  
<NRf+>**

This command sets the over-current delay time of the power supply.

## Syntax

[SOURce:]CURRent[:OVER]:PROTection:DELaY <NRf+>

## Arguments

<0-10>

## Default value

10.00S

**Example**

```
CURR:PROT:DEL 10.00
```

**Query syntax**

```
[SOURce:]CURRent[:OVER]:PROTection:DELay? [MINimum|MAXimum]
```

**Returns**

```
NRf+
```

**[SOURce:]CURRent[:OVER]:PROTection:STATe  
<bool>**

This command enables or disables the over-current function.

**Syntax**

```
[SOURce:]CURRent[:OVER]:PROTection:STATe <bool>
```

**Arguments**

```
0|OFF|1|ON
```

**Default value**

```
0
```

**Example**

```
CURR:PROT:STAT ON
```

**Query syntax**

```
[SOURce:]CURRent[:OVER]:PROTection:STATe?
```

**Returns**

```
0|1
```

**[SOURce:]CURRent:UNDer:PROTection[:LEVel]  
<NRf+>**

This command sets the under-current limit of the power supply.

**Syntax**

```
[SOURce:]CURRent:UNDer:PROTection[:LEVel] <NRf+>
```

**Arguments**

```
<NRf+> MIN TO MAX
```

## Default value

MIN

## Example

CURR:UND:PROT 0.500

## Query syntax

[SOURce:]CURRent:UNDer:PROTection[:LEVel]? [MINimum|MAXimum]

## Returns

&lt;NRf+&gt;

**[SOURce:]CURRent:UNDer:PROTection:DELay  
<NRf+>**

This command sets the under-current delay time of the power supply.

## Syntax

[SOURce:]CURRent:UNDer:PROTection:DELay &lt;NRf+&gt;

## Arguments

&lt;0-10&gt;

## Default value

10.00S

## Example

CURR:UND:PROT:DEL 10.000

## Query syntax

[SOURce:]CURRent:UNDer:PROTection:DELay? [MINimum|MAXimum]

## Returns

&lt;NRf+&gt;

**[SOURce:]CURRent:UNDer:PROTection:STATe <bool>**

This command enables or disables the under-current function.

## Syntax

[SOURce:]CURRent:UNDer:PROTection:STATe &lt;bool&gt;

## Arguments

&lt;0|OFF|1|ON&gt;

## Default value

0

## Example

CURR:UND:PROT:STAT ON

## Query syntax

[SOURce:]CURRent:UNDer:PROTection:STATe?

## Returns

0|1

**[SOURce:]CURRent:UNDer:PROTection:WARM <NRf+>**

This command sets the under-current warm-up time of the power supply.

## Syntax

[SOURce:]CURRent:UNDer:PROTection:WARM &lt;NRf+&gt;

## Arguments

0-30

## Default value

30.00S

## Example

CURR:UND:PROT:WARM 10.000

## Query syntax

[SOURce:]CURRent:UNDer:PROTection:WARM? [MINimum|MAXimum]

## Returns

NRf+

**[SOURce:]CURRent:SLEW[:BOTH] <NRf+>,<NRf+>**

This command sets the current rising and falling slew rate of the power supply.

## Syntax

[SOURce:]CURRent:SLEW[:BOTH] &lt;NRf+&gt;,&lt;NRf+&gt;

## Arguments

&lt;MINimum-MAXimum&gt;|MINimum|MAXimum

**Default value**

MAXimum

**Example**

CURR:SLEW 0.5,0.5

**Query syntax**

[SOURce:]CURRent:SLEW[:BOTH]? [MINimum|MAXimum]

**Returns**

NR3

**[SOURce:]CURRent:SLEW:NEGative <NRf+>**

This command sets the current falling slew rate of the power supply.

**Syntax**

[SOURce:]CURRent:SLEW:NEGative &lt;NRf+&gt;

**Arguments**

NRf+

**Default value**

0.01S

**Example**

CURR:SLEW:NEG 1.000

**Query syntax**

[SOURce:]CURRent:SLEW:NEGative? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]CURRent:SLEW:POSitive <NRf+>**

This command sets the current rising slew rate of the power supply.

**Syntax**

[SOURce:]CURRent:SLEW:POSitive &lt;NRf+&gt;

**Arguments**

NRf+

**Default value**

0.01S

**Example**

CURR:SLEW:POS 1.000

**Query syntax**

[SOURce:]CURRent:SLEW:POSitive? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]VOLTage[:LEVel][:IMMediate][:AMPLitude] <NRf+>**

This command sets the voltage value of the power supply. The query form of this command gets the set voltage value of the power supply.

**Syntax**

[SOURce:]VOLTage[:LEVel][:IMMediate][:AMPLitude] &lt;NRf+&gt;

**Arguments**

&lt;NRf+&gt; MIN TO MAX

**Default value**

MINimum

**Example**

VOLT 60.00

**Query syntax**

[SOURce:]VOLTage[:LEVel][:IMMediate][:AMPLitude]? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]VOLTage[:LEVel]:LIMit[:HIGH] <NRf+>**

This command sets voltage upper limit under CC priority mode.

**Syntax**

[SOURce:]VOLTage[:LEVel]:LIMit[:HIGH] &lt;NRf+&gt;

**Arguments**

&lt;MINimum-MAXimum&gt;|MINimum|MAXimum

**Default value**

0.0

**Example**

VOLT:LIM 60.0

**Query syntax**

[SOURce:]VOLTage[:LEVel]:LIMit[:HIGH]? [MINimum|MAXimum]

**Returns**

NR3

**[SOURce:]VOLTage[:LEVel]:LIMit:LOW <NRf+>**

This command sets voltage lower limit under CC priority mode.

**Syntax**

[SOURce:]VOLTage[:LEVel]:LIMit:LOW &lt;NRf+&gt;

**Arguments**

&lt;MINimum-MAXimum&gt;|MINimum|MAXimum

**Default value**

0.0

**Example**

VOLT:LIM:LOW 60.0

**Query syntax**

[SOURce:]VOLTage[:LEVel]:LIMit[:HIGH]? [MINimum|MAXimum]

**Returns**

NR3

**[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude] <NRf+>**

This command sets the output voltage value when the power supply receives a trigger.

**Syntax**

[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude] &lt;NRf+&gt;

**Arguments**

&lt;NRf+&gt; MIN TO MAX

**Default value**

MIN

**Example**

VOLT:TRIG 60.00

**Query syntax**

[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude]? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]VOLTage:SLEW[:BOTH] <NRf+>,<NRf+>**

This command sets the voltage rising and falling slew rate of the power supply.

**Syntax**

[SOURce:]VOLTage:SLEW[:BOTH] &lt;NRf+&gt;,&lt;NRf+&gt;

**Arguments**

&lt;MINimum-MAXimum&gt;|MINimum|MAXimum

**Default value**

MAXimum

**Example**

VOLT:SLEW MAX,MAX

**Query syntax**

[SOURce:]VOLTage:SLEW[:BOTH]? [MINimum|MAXimum]

**Returns**

NR3

**[SOURce:]VOLTage:SLEW:NEGative <NRf+>**

This command sets the voltage falling slew rate of the power supply.

**Syntax**

[SOURce:]VOLTage:SLEW:NEGative &lt;NRf+&gt;

**Arguments**

&lt;NRf+&gt;

**Default value**

0.01S

**Example**

VOLT:SLEW:NEG 0.03

**Query syntax**

[SOURce:]VOLTage:SLEW:NEGative? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]VOLTage:SLEW:POSitive <NRf+>**

This command sets the voltage rising slew rate of the power supply.

**Syntax**

[SOURce:]VOLTage:SLEW:POSitive &lt;NRf+&gt;

**Arguments**

&lt;NRf+&gt;

**Default value**

0.01S

**Example**

VOLT:SLEW:POS 0.03

**Query syntax**

[SOURce:]VOLTage:SLEW:POSitive? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]VOLTage[:OVER]:PROTection[:LEVel]  
<NRf+>**

This command sets the over-voltage limit of the power supply.

**Syntax**

[SOURce:]VOLTage[:OVER]:PROTection[:LEVel] &lt;NRf+&gt;

**Arguments**

&lt;NRf+&gt; MIN TO MAX

## Default value

MAX

## Example

VOLT:PROT 600.00

## Query syntax

[SOURce:]VOLTage[:OVER]:PROTection[:LEVel]? [MINimum|MAXimum]

## Returns

NRf+

**[SOURce:]VOLTage[:OVER]:PROTection:DELay  
<NRf+>**

This command sets the over-voltage delay time of the power supply.

## Syntax

[SOURce:]VOLTage[:OVER]:PROTection:DELay &lt;NRf+&gt;

## Arguments

&lt;NRf+&gt;

## Default value

10.00S

## Example

VOLT:PROT:DEL 10.00

## Query syntax

[SOURce:]VOLTage[:OVER]:PROTection:DELay? [MINimum|MAXimum]

## Returns

NRf+

**[SOURce:]VOLTage[:OVER]:PROTection:STATE  
<bool>**

This command enables or disables the over-voltage function.

## Syntax

[SOURce:]VOLTage[:OVER]:PROTection:STATe &lt;bool&gt;

**Arguments**

0|OFF|1|ON

**Default value**

0

**Example**

VOLT:APROT:STAT ON

**Query syntax**

[SOURce:]VOLTage[:OVER]:PROTection:STATe?

**Returns**

0|1

**[SOURce:]VOLTage:UNDER:PROTection[:LEVel]  
<NRf+>**

This command sets the under-voltage limit of the power supply.

**Syntax**

[SOURce:]VOLTage:UNDER:PROTection[:LEVel] &lt;NRf+&gt;

**Arguments**

&lt;NRf+&gt; MIN TO MAX

**Default value**

MIN

**Example**

VOLT:UND:PROT 10.00

**Query syntax**

[SOURce:]VOLTage:UNDER:PROTection[:LEVel]? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]VOLTage:UNDER:PROTection:DELay  
<NRf+>**

This command sets the under-voltage delay time of the power supply.

**Syntax**

```
[SOURce:]VOLTage:UNDer:PROTection:DELay <NRf+>
```

**Arguments**

```
<NRf+>
```

**Default value**

```
10.00S
```

**Example**

```
VOLT:UND:PROT:DEL 10.00
```

**Query syntax**

```
[SOURce:]VOLTage:UNDer:PROTection:DELay? [MINimum|MAXimum]
```

**Returns**

```
NRf+
```

**[SOURce:]VOLTage:UNDer:PROTection:STATe <bool>**

This command enables or disables the under-voltage function.

**Syntax**

```
[SOURce:]VOLTage:UNDer:PROTection:STATe <bool>
```

**Arguments**

```
0|OFF|1|ON
```

**Default value**

```
0
```

**Example**

```
VOLT:UND:PROT:STAT ON
```

**Query syntax**

```
[SOURce:]VOLTage:UNDer:PROTection:STATe?
```

**Returns**

```
0|1
```

**[SOURce:]VOLTage:UNDer:PROTection:WARM  
<NRf+>**

This command sets the under-voltage warm-up time of the power supply.

**Syntax**

[SOURce:]VOLTage:UNDer:PROTection:WARM <NRf+>

**Arguments**

<NRf+>

**Default value**

10.00S

**Example**

VOLT:UND:PROT:WARM 10.00

**Query syntax**

[SOURce:]VOLTage:UNDer:PROTection:WARM? [MINimum|MAXimum]

**Returns**

NRf+

**[SOURce:]RESistance[:LEVel][:IMMediate][:AMPLitude]  
<NRf+>**

This command sets the inner resistance of power source.

**Syntax**

[SOURce:]RESistance[:LEVel][:IMMediate][:AMPLitude] <NRf+>

**Arguments**

<NRf+>

**Default value**

MINimum

**Example**

RESistance 3

RES MIN

**Query syntax**

RESistance?

**Returns**

NRf+

## **[SOURce:]SINK:RESistance:STATe <bool>**

This command is used to enable or disable the CR sink function under CC priority.

### Syntax

```
[SOURce:]SINK:RESistance:STATe <bool>
```

### Arguments

```
0|OFF|1|ON
```

### Default value

```
OFF
```

### Example

```
SINK:RES:STAT ON
```

### Query syntax

```
[SOURce:]SINK:RESistance:STATe?
```

### Returns

```
0|1
```

## **[SOURce:]SINK:RESistance[:LEVel][:IMMediate][:AMPLitude] <NRf+>**

This command is used to set CR value

This command can be set only when SINK:RESistance:STATe on.

### Syntax

```
[SOURce:]SINK:RESistance[:LEVel][:IMMediate][:AMPLitude] <NRf+>
```

### Arguments

```
<MINimum-MAXimum>|MINimum|MAXimum
```

### Default value

```
MAXimum
```

### Example

```
SINK:RESistance 5
```

```
SINK:RES MIN
```

### Query syntax

```
[SOURce:]SINK:RESistance[:LEVel][:IMMediate][:AMPLitude]?
```

## Returns

NR3

**[SOURce:]POWer:LIMit[:POSitive][:IMMEDIATE][:AMPLitude] <NRf+>**

This command is used to set the positive output power limit of the source.

## Syntax

`[SOURce:]POWer:LIMit[:POSitive][:IMMEDIATE][:AMPLitude] <NRf+>`

## Arguments

`<NRf+> MIN TO MAX`

## Default value

MAX

## Example

`POW:LIM 900.0`

## Query syntax

`[SOURce:]POWer:LIMit[:POSitive][:IMMEDIATE][:AMPLitude]?`

## Returns

NRf+

**[SOURce:]POWer:LIMit:NEGative[:IMMEDIATE][:AMPLitude] <NRf+>**

This command is used to set the negative power limit of a source.

## Syntax

`[SOURce:]POWer:LIMit:NEGative[:IMMEDIATE][:AMPLitude] <NRf+>`

## Arguments

`<NRf+> MIN TO MAX`

## Default value

MAX

## Example

`POW:LIM:NEG 800``POW:LIM:NEG MAX`

## Query syntax

```
[SOURce:]POWer:LIMit:NEGative[:IMMEDIATE][:AMPLitude]?
```

## Returns

```
NRf+
```

**[SOURce:]POWer:LIMit[:IMMEDIATE][:AMPLitude]  
<NRf+>**

This command sets the maximum setting voltage limit of the power supply.

## Syntax

```
[SOURce:]POWer:LIMit[:IMMEDIATE][:AMPLitude] <NRf+>
```

## Arguments

```
<NRf+> MIN TO MAX
```

## Default value

```
MAX
```

## Example

```
POW:LIM 900.0
```

## Query syntax

```
[SOURce:]POWer:LIMit[:IMMEDIATE][:AMPLitude]? [MINimum|MAXimum]
```

## Returns

```
NRf+
```

**[SOURce:]POWer:PROTection[:LEVel] <NRf+>**

This command sets the over-power limit of the power supply.

## Syntax

```
[SOURce:]POWer:PROTection[:LEVel] <NRf+>
```

## Arguments

```
<NRf+> MIN TO MAX
```

## Default value

```
MAX
```

## Example

```
POW:PROT 900.0
```

## Query syntax

```
[SOURce:]POWer:PROTection[:LEVel]? [MINimum|MAXimum]
```

## Returns

```
NRf+
```

**[SOURce:]POWer:PROTection:DELay <NRf+>**

This command sets the over-power delay time of the power supply.

## Syntax

```
[SOURce:]POWer:PROTection:DELay <NRf+>
```

## Arguments

```
<NRf+>
```

## Default value

```
10.00S
```

## Example

```
POW:PROT:DEL 10.00
```

## Query syntax

```
[SOURce:]POWer:PROTection:DELay? [MINimum|MAXimum]
```

## Returns

```
NRf+
```

**[SOURce:]POWer:PROTection:STATe <Bool>**

This command enables or disables the over-power function.

## Syntax

```
[SOURce:]POWer:PROTection:STATe <Bool>
```

## Arguments

```
0|OFF|1|ON
```

## Default value

```
0
```

## Example

```
POW:PROT:STAT ON
```

## Query syntax

```
[SOURce:]POWer:PROTection:STATe?
```

## Returns

```
0|1
```

**[SOURce:]FUNCTION:MODE  
<FIXed|LIST|BATTery|BEMulator>**

This command sets the operating modes of the power supply.

## Syntax

```
[SOURce:]FUNCTION:MODE <FIXed|LIST|BATTery|BEMulator >
```

## Arguments

```
FIXed|LIST|BATTery|BEMulator
```

## Default value

```
FIXed
```

## Example

```
FUNC:MODE FIX
```

## Query syntax

```
[SOURce:]FUNCTION:MODE?
```

## Returns

```
FIXed|LIST|BATTery|BEMulator
```

**[SOURce:]FUNCTION <CV|CC|VOLTage|CURRent>**

This command sets the priority mode of the power supply.

## Syntax

```
[SOURce:]FUNCTION <CV|CC|VOLTage|CURRent>
```

## Arguments

```
<CV|CC|VOLTage|CURRent>
```

## Default value

```
VOLTage
```

## Example

```
FUNC VOLT
```

## Query syntax

```
[SOURce:]FUNCTion?
```

## Returns

```
<CV|CC|VOLTage|CURRent>
```

**[SOURce:]UUT:TEMPerature:PROTection[:STATe]**

This command sets the UUT over temperature protection status of the power supply.

## Syntax

```
[SOURce:]UUT:TEMPerature:PROTection[:STATe]
```

## Arguments

```
<0|1|OFF|ON>
```

## Default value

```
0
```

## Example

```
UUT:TEMP:PROT 1
```

## Query syntax

```
[SOURce:]UUT:TEMPerature:PROTection[:STATe]?
```

## Returns

```
0|1
```

**[SOURce:]UUT:TEMPerature:PROTection[:LEVe] <NRf+>**

This command sets the UUT over-temperature limit of the power supply.

## Syntax

```
[SOURce:]UUT:TEMPerature:PROTection[:LEVe] <NRf+>
```

## Arguments

```
<MINimum-MAXimum>|MINimum|MAXimum
```

## Default value

```
MAXimum
```

## Example

```
UUT:TEMP:PROT MAX
```

**Query syntax**

[SOURce:]UUT:TEMPerature:PROTection[:LEVel]? [MINimum|MAXimum]

**Returns**

NRf+

**OFF:VOLTage <ZERO|CONSt>**

This command is used to set the voltage drop speed when CC priority mode. ZERO means that the instrument voltage rapidly drops to 0V, and when set to CONSt, the voltage drop speed is normal.

**Syntax**

OFF:VOLTage <ZERO|CONSt>

**Arguments**

ZERO|CONSt

**Default value**

ZERO

**Example**

OFF:VOLT ZERO

**Query syntax**

OFF:VOLTage?

**Returns**

ZERO|CONSt

---

# Chapter11 Trace Commands

---

## TRACe:CLEAr

This command is used to clear reading cache. If cache is not cleared, subsequent saving will overwrite the previous data.

### Syntax

TRACe:CLEAr

### Arguments

None

### Example

TRAC:CLE

### Query syntax

None

### Returns

None

## TRACe:POINts <NRf+>

This command is used to specify cache size.

### Syntax

TRACe:POINts <NRf+>

### Arguments

<2-1000>|MINimum|MAXimum

### Default value

1000

### Example

TRAC:POINT MAX

### Query syntax

TRACe:POINts?

## Returns

NR1

## **TRACe:FEED:CONTRol <NEVer|NEXT|ALWays>**

This command is used to select cache control. Select NEVer, Save to Cache is disabled; select NEXT, save process starts and will stop when the cache is filled in. Select ALWays. After cache is filled in, circulate the cache.

## Syntax

TRACe:FEED:CONTRol <NEVer|NEXT|ALWays>

## Arguments

NEVer|NEXT|ALWays

## Default value

NEVer

## Example

TRAC:FEED:CONT NEXT

## Query syntax

TRACe:FEED:CONTRol?

## Returns

NEVer|NEXT|ALWays

## **TRACe:FEED[:SELeCted]<BOTH|VOLTage|CURRent>**

This command selects the reading source saved in the cache. If VOLTage is selected, the voltage reading is saved in cache; if CURRent is selected, the current reading is saved in cache. If BOTH is selected, both voltage and current are saved in cache when saving is executed.

## Syntax

TRACe:FEED[:SELeCted]<BOTH|VOLTage|CURRent>

## Arguments

BOTH|VOLTage|CURRent

## Default value

VOLTage

**Example**

TRAC:FEED BOTH

**Query syntax**

TRACe:FEED?

**Returns**

BOTH|VOLTage|CURRent

**TRACe:DElAy <NRf+>**

This command selects cache delay time.

**Syntax**

TRACe:DElAy &lt;NRf+&gt;

**Arguments**

0 to 3600s|MINimum|MAXimum

**Default value**

0.000S

**Example**

TRAC:DEL MINimum

**Query syntax**

TRACe:DElAy?

**Returns**

NR1

**TRACe:TIMer <NRf+>**

This command selects cache time interval.

**Syntax**

TRACe:TIMer &lt;NRf+&gt;

**Arguments**<0.001-3600.0>  
MINimum-MAXimum|MINimum|MAXimum**Default value**

0.001S

**Example**

```
TRAC:TIM <NRf+>
```

**Query syntax**

```
TRACe:TIMer?
```

**Returns**

```
NR3
```

## **TRACe:POINts:ACTual?**

This command selects number of actual readings in the cache.

**Syntax**

```
TRACe:POINts:ACTual?
```

**Arguments**

```
None
```

**Example**

```
TRAC:POIN:ACT?
```

**Returns**

```
NR1
```

## **TRACe:CLEAr:AUTO[:STATe] <bool>**

This command selects whether clear the readings in the cache automatically .

**Syntax**

```
TRACe:CLEAr:AUTO[:STATe] <bool>
```

**Arguments**

```
<0|1|OFF|ON>
```

**Example**

```
TRAC:CLE:AUTO ON
```

**Query syntax**

```
TRACe:CLEAr:AUTO[:STATe]?
```

**Returns**

```
0|1
```

## TRACe:DATA?

This command reads all values saved in the cache.



### Note

Before sending the query command TRACe:DATA?, the command TRIGger[:IMMEDIATE] must be sent to the instrument to trigger the instrument into data storage status. And the argument of the command TRACe:FEED:CONTRol <NEXT|ALWays|NEVer> must be set to NEXT or ALWays, otherwise the system will prompt an error.

### Syntax

TRACe:DATA?

### Arguments

None

### Example

TRACe:DATA?

### Returns

<NRf>,<NRf>,<NRf>.....

## TRACe:FILTer[:STATe]

This command enables or disables the filter.

### Syntax

TRACe:FILTer[:STATe]

### Arguments

<0|1|OFF|ON>

### Default value

OFF

### Example

TRAC:FILT 0

### Returns

0|1

---

## Chapter12 List Commands

---

### **LIST:STEP:COUNT <NR1>**

This command sets the total steps of the list program.

#### Syntax

LIST:STEP:COUNT <NR1>

#### Arguments

<1-100>

#### Example

LIST:STEP COUN 1

#### Query syntax

LIST:STEP:COUNT?

#### Returns

NR1

### **LIST[:STEP]:VOLTage <NR1>,<NRf+>**

This command sets the voltage value of the nth step in the list program.

#### Syntax

LIST[:STEP]:VOLTage <NR1>,<NRf+>

#### Arguments

<1-100>,<MINimum-MAXimum|MINimum|MAXimum>

#### Example

LIST:VOLT 1,100.00

#### Query syntax

LIST:VOLTage?

#### Returns

NR3

## **LIST[:STEP]:CURRent <NR1>,<NRf+>**

This command sets the current value of the nth step in the list program.

### Syntax

LIST[:STEP]:CURRent <NR1>,<NRf+>

### Arguments

<1-100>,<MINimum-MAXimum|MINimum|MAXimum>

### Example

LIST:CURRent 1,3.500

### Query syntax

LIST[:STEP]:CURRent?

### Returns

NR3

## **LIST[:STEP]:SLEW <NR1>,<NRf+>**

This command sets the slew rate value of the nth step in the list program.

### Syntax

LIST[:STEP]:SLEW <NR1>,<NRf+>

### Arguments

<1-100>,<MINimum-MAXimum|MINimum|MAXimum>

### Example

LIST[:STEP]:SLEW 1,1.000

### Query syntax

LIST[:STEP]:SLEW? <NR1>

### Returns

NR3

## **LIST[:STEP]:WIDTh <NR1>,<NRf+>**

This command sets the width value of the nth step in the list program.

### Syntax

LIST[:STEP]:WIDTh <NR1>,<NRf+>

### Arguments

<1-100>,<MINimum-MAXimum|MINimum|MAXimum>

### Example

```
LIST[:STEP]:WIDT 1,1.000
```

### Query syntax

```
LIST[:STEP]:WIDTh? <NR1>
```

### Returns

NR3

## **LIST:REPeat <NRf+>**

This command sets the number of list repetitions.

### Syntax

```
LIST:REPeat <NRf+>
```

### Arguments

<MINimum-MAXimum|MINimum|MAXimum>

### Example

```
LIST:REP 3
```

### Query syntax

```
LIST:REPeat?
```

### Returns

NR3

## **LIST:FUNcTion <VOLTage|CURRent>**

This command sets the working mode of list program.

### Syntax

```
LIST:FUNcTion <VOLTage|CURRent>
```

### Arguments

<VOLTage|CURRent>

### Example

```
LIST:FUNC VOLT
```

**Query syntax**

LIST:FUNction?

**Returns**

VOLTage|CURRent

**LIST:VOLTage:LIMit[:HIGH] <NRf+>**

This command sets the voltage upper limit of list program.

**Syntax**

LIST:VOLTage:LIMit[:HIGH] &lt;NRf+&gt;

**Arguments**

&lt;MINimum-MAXimum|MINimum|MAXimum&gt;

**Example**

LIST:VOLT:LIM 80

**Query syntax**

LIST:VOLTage:LIMit[:HIGH]? [MINimum|MAXimum]

**Returns**

NR3

**LIST:VOLTage:LIMit:LOW <NRf+>**

This command sets the voltage lower limit of list program.

**Syntax**

LIST:VOLTage:LIMit:LOW &lt;NRf+&gt;

**Arguments**

&lt;MINimum-MAXimum|MINimum|MAXimum&gt;

**Example**

LIST:VOLT:LIM:LOW 20

**Query syntax**

LIST:VOLTage:LIMit:LOW? [MINimum|MAXimum]

**Returns**

NR3

## **LIST:CURRent:LIMit[:POSitive] <NRf+>**

This command sets the current positive limit of list program.

### Syntax

LIST:CURRent:LIMit[:POSitive] <NRf+>

### Arguments

<MINimum-MAXimum|MINimum|MAXimum>

### Example

LIST:CURR:LIM 20

### Query syntax

LIST:CURRent:LIMit[:POSitive]? [MINimum|MAXimum]

### Returns

NR3

## **LIST:CURRent:LIMit:NEGative <NRf+>**

This command sets the current negative limit of list program.

### Syntax

LIST:CURRent:LIMit:NEGative <NRf+>

### Arguments

<MINimum-MAXimum|MINimum|MAXimum>

### Example

LIST:CURR:LIM:NEG 20

### Query syntax

LIST:CURRent:LIMit:NEGative? [MINimum|MAXimum]

### Returns

NR3

## **LIST:SAVE <NR1>**

This command saves the present list program into the specified memory.

### Syntax

LIST:SAVE <NR1>

**Arguments**

&lt;1-10&gt;

**Example**

LIST:SAV 1

**Query syntax**

LIST:SAVE?

**Returns**

NR3

**LIST:RECall <NR1>**

This command recalls the list program you saved in the specified memory location.

**Syntax**

LIST:RECall &lt;NR1&gt;

**Arguments**

&lt;1-10&gt;

**Example**

LIST:REC 1

**Query syntax**

LIST:RECall?

**Returns**

NR3

**LIST[:STATe] <bool>**

This command enables or disables the list function.

**Syntax**

LIST[:STATe] &lt;bool&gt;

**Arguments**

&lt;0|1|OFF|ON&gt;

**Default value**

0

**Example**

LIST ON

**Query syntax**

LIST[:STATe]?

**Returns**

0|1

**[SOURce:]LIST:TERMinate:LAST<bool>**

This command sets the end state of the list program.

**Syntax**

LIST:TERMinate &lt;terminate&gt;

**Arguments**

NORMal|LAST

**Example**

LIST:TERM NORM

**Query syntax**

LIST:TERMinate?

**Returns**

NORMal|LAST

**LIST:PAUSE[:STATe] <BOOLEAN>**

This command sets the pause state of the list program.

**Syntax**

LIST:PAUSE[:STATe] &lt;BOOLEAN&gt;

**Arguments**

&lt;0|1|OFF|ON&gt;

**Example**

LIST:PAUS 1

**Query syntax**

LIST:PAUSE[:STATe]?

## Returns

0|1

**[SOURce:]LIST:RESet**

This command resets the running state of the list program to waiting trigger.

## Syntax

[SOURce:]LIST:RESet

## Arguments

None

## Example

LIST:RES

## Query syntax

None

## Returns

None

**[SOURce:]LIST:RUN:STEP?**

This command queries the present step number of the running list program.

## Syntax

[SOURce:]LIST:RUN:STEP?

## Arguments

None

## Example

LIST:RUN:STEP?

## Returns

NR1

**[SOURce:]LIST:RUN:REPeat?**

This command queries the present repetitions of the running list program.

## Syntax

[SOURce:]LIST:RUN:REPeat?

**Arguments**

None

**Example**

LIST:RUN:REP?

**Returns**

NR1

---

## Chapter13 Battery Commands

---

### **BATTery:MODE <CHARge|DISCharge>**

This command is used to set the mode of battery test: charging or discharging.

#### Syntax

BATTery:MODE <CHARge|DISCharge>

#### Arguments

CHARge|DISCharge

#### Default value

CHARge

#### Example

BATTery:MODE CHAR

#### Query syntax

BATTery:MODE?

#### Returns

CHARge|DISCharge

### **BATTery:CHARge:VOLTage <NRf+>**

This command is used to set the battery charging voltage value.

#### Syntax

BATTery:CHARge:VOLTage <NRf+>

#### Arguments

<MINimum-MAXimum|MINimum|MAXimum>

#### Example

BATT:CHAR:VOLT 5.0

#### Query syntax

BATTery:CHARge:VOLTage? [MINimum|MAXimum]

#### Returns

NR3

## **BATTery:CHARge:CURRent <NRf+>**

This command is used to set the battery charging current value.

### Syntax

BATTery:CHARge:CURRent <NRf+>

### Arguments

<MINimum-MAXimum|MINimum|MAXimum>

### Example

BATT:CHAR:CURR 3.0

### Query syntax

BATTery:CHARge:CURRent? [MINimum|MAXimum]

### Returns

NR3

## **BATTery:DISCharge:VOLTage <NRf+>**

This command is used to set the battery discharge voltage value.

### Syntax

BATTery:DISCharge:VOLTage <NRf+>

### Arguments

<MINimum-MAXimum|MINimum|MAXimum>

### Example

BATT:DISC:VOLT 3.0

### Query syntax

BATTery:DISCharge:VOLTage? [MINimum|MAXimum]

### Returns

NR3

## **BATTery:DISCharge:CURRent <NRf+>**

This command is used to set the battery discharge current value.

### Syntax

BATTery:DISCharge:CURRent <NRf+>

**Arguments**

&lt;MINimum-MAXimum|MINimum|MAXimum&gt;

**Example**

BATT:DISC:CURR 3.0

**Query syntax**

BATTery:DISCharge:CURRent? [MINimum|MAXimum]

**Returns**

NR3

**BATTery:STOP:VOLTage <NRf+>**

This command is used to set the voltage value for the battery test cutoff.

**Syntax**

BATTery:STOP:VOLTage &lt;NRf+&gt;

**Arguments**

&lt;MINimum-MAXimum|MINimum|MAXimum&gt;

**Example**

BATT:SHUT:VOLT 4.0

**Query syntax**

BATTery:STOP:VOLTage? [MINimum|MAXimum]

**Returns**

NR3

**BATTery:STOP:CURRent <NRf+>**

This command is used to set the current value of the battery test cutoff.

**Syntax**

BATTery:STOP:CURRent &lt;NRf+&gt;

**Arguments**

&lt;MINimum-MAXimum|MINimum|MAXimum&gt;

**Example**

BATT:SHUT:CURR 3.0

**Query syntax**

BATTery:STOP:CURRent? [MINimum|MAXimum]

**Returns**

NR3

**BATTery:STOP:CAPacity <NRf+>**

This command is used to set the capacitance value of the battery test cutoff.

**Syntax**

BATTery:STOP:CAPacity <NRf+>

**Arguments**

<MINimum-MAXimum|MINimum|MAXimum>

**Example**

BATT:SHUT:CAP 3.0

**Query syntax**

BATTery:STOP:CAPacity? [MINimum|MAXimum]

**Returns**

NR3

**BATTery:STOP:TIME <NRf+>**

This command is used to set the battery test cutoff time.

**Syntax**

BATTery:STOP:TIME <NRf+>

**Arguments**

<MINimum-MAXimum|MINimum|MAXimum>

**Example**

BATT:SHUT:TIME 3.0

**Query syntax**

BATTery:STOP:TIME? [MINimum|MAXimum]

**Returns**

NR3

## **BATTery[:STATe]**

This command enables or disables the battery function.

### Syntax

BATTery[:STATe]

### Arguments

<0|1|OFF|ON>

### Example

BATT 1

### Query syntax

BATTery[:STATe]?

### Returns

0|1

## **BATTery:SAVE <BANK>**

This command saves the present battery test file into the specified memory.

### Syntax

BATTery:SAVE <BANK>

### Arguments

<1-10>

### Example

BATT:SAV 1

### Query syntax

None

### Returns

<NR1>

## **BATTery:RECall <BANK>**

This command recalls the battery test file you saved in the specified memory location.

**Syntax**

BATTery:SAVE <BANK>

**Arguments**

<1-10>

**Example**

BATT:REC 1

**Query syntax**

None

**Returns**

<NR1>

**[SOURce:]BATTery:RESet**

This command resets the running state of the list program to initial state.

**Syntax**

[SOURce:]BATTery:RESet

**Arguments**

None

**Example**

BATT:RES

**Query syntax**

None

**Returns**

None

---

## Chapter14 Parallel&Link Commands

---

### **PARallel:ROLE <SINGle|SLAVe|MASTer>**

This command sets the power supply to single, slave or master mode in the parallel operation.

#### Syntax

PARallel:ROLE <SINGle|SLAVe|MASTer>

#### Arguments

SINGle|SLAVe|MASTer

#### Example

PAR:ROLE SLAV

#### Query syntax

PARallel:ROLE?

#### Returns

SINGle|SLAVe|MASTer

### **PARallel:GROup <group>**

This command specifies the parallel group.

#### Syntax

PARallel:GROup <group>

#### Arguments

<A-H>

#### Example

PAR:GRO 1

#### Query syntax

PARallel:GROup?

#### Returns

NR1

## **PARallel:NUMBer <NR1>**

This command sets the total instrument number in the parallel operation.

### Syntax

PARallel:NUMBer <NR1>

### Arguments

<1-16>

### Example

PAR:NUMB 3

### Query syntax

PARallel:NUMBer?

### Returns

NR1

## **LINK:MODE <OUTPut|TRACk|DUPLicate>**

This command sets the link mode.

### Syntax

LINK:MODE <OUTPut|TRACk|DUPLicate>

### Arguments

OUTPut|TRACk|DUPLicate

### Example

LINK:MODE OUTP

### Query syntax

LINK:MODE?

### Returns

OUTPut|TRACk |DUPLicate

## **LINK[:STATe] <bool>**

This command enables or disables the link function.

### Syntax

LINK[:STATe] <bool>

**Arguments**

&lt;0|1|OFF|ON&gt;

**Example**

LINK ON

**Query syntax**

LINK[:STATe]?

**Returns**

0|1

**LINK:REFerence <NRf+>**

This command sets reference proportion of the link mode.

**Syntax**

LINK:REFerence &lt;NRf+&gt;

**Arguments**

&lt;0.01-100.00&gt;

**Example**

LINK:REF 3

**Query syntax**

LINK:REFerence? [MINimum|MAXimum]

**Returns**

NR3

---

## Chapter15 Common Commands

---

### **\*CLS**

This command clears the error queue and the bits of the following registers:

- Standard Event Register
- Questionable Event Register
- Status byte register

#### Syntax

\*CLS

#### Arguments

None

#### Default value

Not applicable

#### Example

\*CLS

#### Query command

None

#### Returns

Not applicable

### **\*ESE**

This command sets or queries the bits in the Event Status Enable Register (ESER). The ESER is an eight-bit register that determines which bits in the Standard Event Status Register (SESR) will set the Event Summary Bit (ESB) in the Status Byte Register (SBR).

#### Syntax

\*ESE <NRf>

#### Arguments

0 to 255

#### Default value

0

**Example**

\*ESE 16

**Query command**

\*ESE?

**Returns**

NR1

**See also**

\*ESR?

\*STB?

**\*ESR?**

This command reads the value of Standard Event Status Register (SESR). Once this command executes, the SESR is reset. The bit definition for the SESR is the same as the Standard Event Status Enable Register.

**Syntax**

\*ESR?

**Arguments**

None

**Default value**

Not applicable

**Example**

\*ESR?

**Returns**

NR1

**See also**

\*CLS

\*ESE

\*ESE?

\*OPC

**\*IDN?**

This command reads information that identifies the power supply. It returns a parameter that contains four segments divided by a comma. Example: ITECH Ltd., IT3400, 60234567890123456, 1.01-1.02-1.03.

## Syntax

\*IDN?

## Arguments

None

## Default value

Not applicable

## Example

- > \*IDN?

< - ITECH Ltd.,IT3400,60234567890123456,1.01-1.02-1.03



### Note

- “ - >” indicates the commands that you send to instrument.
- “< -” indicates the response from instrument.

## Returns

AARD

## \*OPC

This command sets the Operation Complete (OPC) bit in the Standard Event Status Register to 1 when all other commands are complete.

## Syntax

\*OPC

## Arguments

None

## Default value

Not applicable

## Example

\*OPC

## Query command

\*OPC?

## Returns

NR1

## **\*PSC**

This command specifies whether the Service Request Enable Register (SRER) and the Event State Enable Register (ESER) are cleared when the instrument is powered on. The query form of this command gets the state of the power-on status clear function.

### Syntax

\*PSC <Boolean>

### Arguments

0|OFF|1|ON

### Default value

0

### Example

\*PSC 0

### Query command

\*PSC?

### Returns

0|1

## **\*RCL**

This command recalls the setups you saved in the specified memory location.

### Syntax

\*RCL <NRf>

### Arguments

<1-10>

### Default value

Not applicable

### Example

\*RCL 1

### Query command

None

**Returns**

Not applicable

**\*RST**

This command resets the power supply to default settings.

**Syntax**`*RST`**Arguments**

None

**Default value**

Not applicable

**Example**`*RST`**Query command**

None

**Returns**

Not applicable

**\*SAV**

This command saves the present setting values of the power supply into specified memory

**Syntax**`*SAV <NRf>`**Arguments**

&lt;1-10&gt;

**Default value**

Not applicable

**Example**`*SAV 1`**Query command**

None

**Returns**

Not applicable

**\*SRE**

This command sets or queries the bits in the Status Byte Enable Register. Setting this parameter can determine which byte of the Status Byte Register has a value of 1. The byte sets the RQS bit of the Status Byte Register to 1. The bit definition of the Status Byte Enable Register is as the same as the Status Byte Register.

**Syntax**`*SRE <NRf>`**Arguments**

0 to 255

**Default value**

Not applicable

**Example**`*SRE 255`**Query command**`*SRE?`**Returns**

NR1

**\*STB?**

This command reads the data in the Status Byte Register (SBR).

**Syntax**`*STB?`**Arguments**

None

**Default value**

Not applicable

**Example**`*STB?`

**Returns**

NR1

**\*TRG**

This command generates a trigger signal when the trigger source is BUS.

**Syntax**

\*TRG

**Arguments**

None

**Default value**

Not applicable

**Example**

\*TRG

**Query command**

None

**Returns**

None

**\*TST?**

This command initiates a self-test and reports any errors.

**Query command**

\*TST?

**Arguments**

None

**Default value**

Not applicable

**Example**

\*TST?

**Returns**

NR1,&lt;str&gt;

**\*WAI**

Pauses additional command processing until all pending operations are complete.

Query command

\*WAI

Arguments

None

Default value

Not applicable

Example

\*WAI

Returns

None

**\*PSC <Bool>**

This instruction is used to control whether the status register is cleared when the instrument is powered-on. This instruction affects the value of the status register at the next powered-on.

Syntax

\*PSC <Bool>

Arguments

0|OFF|1|ON

Default value

OFF

Example

\*PSC 0

Query syntax

\*PSC?

Returns

0|1

## Chapter16 Error Messages

### Error List

Sending the command SYST:ERR? can read one error code and error message from the error queue.

Error code	Error message
101	"Too many numeric suffices"
110	"No input command"
114	"Invalid Numeric suffix"
116	"Invalid value"
117	"Invalid dimensions"
120	"Parameter overflowed"
130	"Wrong units for parameter"
140	"Wrong type of parameter"
150	"Wrong number of parameter"
160	"Unmatched quotation mark"
165	"Unmatched bracket"
170	"Invalid command"
180	"No entry in list"
190	"Too many dimensions"
191	"Too many char"
-200	"Execution error"
-221	"Settings conflict"
-222	"Data out of range"
-223	"Too much data"
-224	"Illegal parameter value"
-225	"Out of memory"
-230	"Data Corrupt or Stale"
-270	"Macro error"
0	"No error"
1	"Module Initialization Lost"
2	"Mainframe Initialization Lost"
3	"Module Calibration Lost"
4	"Eeprom failure"
5	"RST checksum failed"
6	"BACKUP RAM failed"
10	"RAM selftest failed"
222	"Front panel uart parity"
223	"Front panel buffer overrun"
224	"Front panel timeout"
225	"Front Crc Check error"
226	"Front Cmd Error"

401	"CAL switch prevents"
402	"CAL password is incorrect"
403	"CAL not enabled"
404	"readback cal are incorrect"
405	"programming cal are incorrect"
406	"Incorrect sequence of cal"
602	"Command only for rs232"
603	"FETCH of data was not acquired"
604	"Measurement overrange"
800	"Sn Same Conflict"

## **Contact US**

Thank you for purchasing ITECH products. If you have any doubt about this product, please contact us as follow.

1. Visit ITECH website [www.itechate.com](http://www.itechate.com) .
2. Select the most convenient contact for further consultation.