

HDO6000B Oscilloscopes Getting Started Guide





TELEDYNE LECROY
Everywhereyoulook™

700 Chestnut Ridge Road
Chestnut Ridge, NY 10977

1.800.5.LECROY • teledynelecroy.com

HDO6000B Oscilloscopes

Getting Started Guide

© 2024 Teledyne LeCroy, Inc. All rights reserved.

This document does not contain export controlled information.

Unauthorized duplication of Teledyne LeCroy documentation materials is strictly prohibited. Customers are permitted to duplicate and distribute Teledyne LeCroy documentation for internal educational purposes.

Teledyne LeCroy is a trademark of Teledyne LeCroy, Inc. Other product or brand names are trademarks or requested trademarks of their respective holders. Information in this publication supersedes all earlier versions. Specifications are subject to change without notice.

936956-00 Rev A
hdo6000b-gsg-eng.pdf
August, 2024

Welcome

Thank you for buying a Teledyne LeCroy product. We're certain you'll be pleased with the detailed features unique to our instruments. This guide is intended to help you set up a HDO6000B oscilloscope and learn some basic operating procedures, so you're quickly working with waveforms.

- See the *MAUI Oscilloscopes Remote Control and Automation Manual* for comprehensive information on remote control of HDO6000B.
- See the *HDO6000B Oscilloscopes Operator's Manual* for detailed information on the operational features of the HDO6000B.

Both manuals can be downloaded from the Oscilloscope Manuals page on our website at: teledynelecroy.com/support/techlib.

Introduction

Introducing HDO6000B Oscilloscopes	2
Safety	2

Overview

Front of Oscilloscope	4
Powering On/Off	5
Back and Side of Oscilloscope	6
Connecting to External Devices/Systems	7
Front Panel	9
Touch Screen Display	10

Basics

Changing the Display	12
Working with Traces	14
MAUI with OneTouch	15
Vertical (Channel)	20
Digital	22
Horizontal (Timebase)	24
Triggers	26
Zoom	28
Cursors	30

Measurements & Statistics	31
Math	32
Memories (Reference Waveforms)	33
Decode	34
WaveScan	35
History Mode	36
WaveSource Arbitrary Function Generator	37
Saving and Sharing Data	38

Maintenance

Software Options	39
Support	39
Cleaning	40
Language Selection	40
Calibration	40
Firmware Updates	41
Switching Windows Users	41
Service	42

Reference

Warranty	43
Certifications	44

Introducing HDO6000B

Combining Teledyne LeCroy's HD4096 high-definition technology with long memory, a compact form factor, 15.6" touch screen display, powerful measurement and analysis tools, and mixed signal capability, the HDO6000B oscilloscopes are ideal for circuit validation, system debug and waveform analysis. The powerful feature set provides analytical tools and unique application packages to streamline the testing process.

HD4096

HD4096 high-definition technology consists of 12-bit ADCs, high signal-to-noise input amplifiers and a low-noise system architecture. HDO™ instruments capture and display signals up to 1 GHz with a high sample rate and 16 times more resolution than other oscilloscopes. Waveforms are cleaner and crisper. Signal details often lost in the noise are clearly visible and easy to distinguish, and measurements can be performed with unmatched precision for improved debug and analysis.

Enhanced Sample Rate

Enhanced sample rate technology automatically ensures optimal display of acquired waveforms to the instrument's full rated bandwidth.

MAUI with OneTouch

MAUI with OneTouch introduced a new paradigm for oscilloscope user experience. Dramatically reduce setup time with revolutionary drag-and-drop actions to copy and change channels, math functions and measurement parameters without lifting a finger. Use familiar touch screen gestures like pinch, swipe and flick to intuitively interact with the instrument. Quickly enable new traces or parameters using the "Add New" button, and turn them off with a simple flick of the finger.

Key Specifications

Detailed specifications are on the product datasheet at teledynelecroy.com.

Bandwidth	350 MHz to 1 GHz
Analog Channels	4 standard
Memory per Channel (4 channel operation)	50 Mpts/ch standard; up to 250 Mpts/ch with XL option
Sample Rate	up to 10 GS/s*
Vertical Resolution	12-bit
Digital Channels (optional)	16
Digital Sample Rate	1.25 GS/s
Min. Digital Pulse Width	2 ns
Max. Digital Input Frequency	250 MHz

* With Enhanced Sample Rate

Safety

Observe generally accepted safety practices in addition to the precautions specified here.

Symbols



CAUTION of potential damage to equipment, or **WARNING** of potential bodily injury. Refer to manual. Do not proceed until the information is fully understood and conditions are met.



WARNING. Risk of electric shock or burn.



Frame or chassis terminal



Alternating current



Power On/Standby

Operating Environment

Temperature	5 °C to 40 °C
Humidity	Maximum RH 90% (non-condensing) up to 31 °C decreasing linearly to RH 50% at 40 °C
Altitude	Up to 10,000 ft (3,048 m) at or below 30 °C

Power

AC Power	100-240 VAC (±10%) at 50/60/400 Hz (±5%) Automatic AC Voltage Selection
Consumption	
Nominal	220 W / 220 VA
Maximum*	320 W / 320 VA
Standby	4 W

* All PC peripherals and active probes connected to four channels.

Measuring Terminal Ratings

Ratings apply to inputs C1-C4 and Ext In.

Maximum Input Voltage	50 Ω coupling ≤ 5 Vrms 1 MΩ coupling ≤ 400 Vpk max. (Peak AC ≤ 10 kHz + DC) derating at 15 dB/decade from 10 kHz to 1.6 MHz, 10 Vpk max. above 1.6 MHz
------------------------------	---

Measuring terminals have no rated measurement category (CAT) per EN IEC 61010-2-30:2021.
Measuring terminals are not intended to be connected directly to supply mains.

Precautions

Use proper power cord. Use only the power cord shipped with this instrument and certified for the country of use.

Maintain ground. The AC inlet ground is connected to the frame of the instrument. Connect line cords only to outlets with safety ground contacts.



WARNING. Interrupting the protective conductor inside or outside the oscilloscope, or disconnecting the safety ground terminal, creates a hazardous situation. Intentional interruption is prohibited.

Connect and disconnect properly. Do not connect/disconnect probes or test leads while they are connected to a live voltage source.

Observe all terminal ratings. Do not apply a voltage to any input that exceeds the maximum rating of that input. Refer to the markings next to the BNC terminals for maximum allowed values.

Use only within operational environment listed. Do not use in wet or explosive environments.

Use indoors only.

Keep product surfaces clean and dry.

Do not block the cooling vents. Leave a minimum six-inch (15 cm) gap between the instrument and the nearest object. Keep the underside clear of papers and other objects.

Exercise care when lifting and carrying. Unplug and use the built-in carrying handle to move the instrument.

Do not remove the covers or inside parts. Refer all maintenance to qualified service personnel.

Do not operate with suspected failures. Check body and cables regularly. If any part is damaged, cease operation immediately and sequester the instrument from inadvertent use.

Front of Oscilloscope



- A. Touch Screen Display
- B. Front Panel
- C. Power On/Standby Button
- D. Input Channels 1-4
- E. EXT Input
- F. Mixed Signal Interface
- G. Ground and Cal Out Terminals
- H. USB 3.1 Ports (2)
- I. Tilting Feet

The **touch screen display** is the principal viewing and control center of the oscilloscope. See p.10 for an overview of its components.

The **front panel** houses hard controls for different acquisition settings. Operate the instrument using front panel controls, touch screen controls, or a mix that is convenient for you. See "Front Panel" on p.9.

Channels 1–4 are used to input analog signal. **EXT** can be used to input an external trigger signal.

The **Mixed Signal interface** connects the digital leadset to input up-to-16 lines of digital data (on -MS models). See p.8.

The **Ground terminal** can be used with a ground lead or wrist strap. The **Cal Out terminal** emits a signal that can be used to compensate passive probes.




Front mounted **USB 3.1 ports** can be used for transferring data to a removable drive, or connecting peripherals such as a mouse or keyboard.


The **tilting feet** enable easier bench top viewing.

Powering On/Off


Plug the line cord only into a grounded AC power outlet. See Power in "Safety" for ratings. Press the **Power button** to turn on the oscilloscope. The button will light to show the oscilloscope is operational.

 **CAUTION.** Do not power on or calibrate with a signal attached.


Press the Power button again or use or the **File > Shutdown** menu option to execute a proper shut down process and preserve settings.

 **CAUTION.** Do not press and hold the Power button. This will execute a hard shutdown, but may not preserve setups and data.

The Power button does not disconnect the oscilloscope from the AC power supply, but puts it into "Standby" mode. Some "housekeeping" circuitry continues to draw power. The only way to fully power down the instrument is unplug the AC line cord from the outlet. We recommend unplugging the instrument if it will remain unused for a long period of time

 **CAUTION.** Do not change the Windows® Power setting to System Standby or System Hibernate. Doing so may cause failure.

Side and Back of Oscilloscope

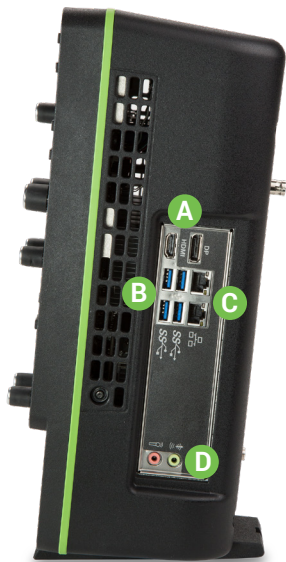

A. HDMI and DisplayPort Ports

B. USB 3.1 Gen 1 Ports (4)

C. Ethernet Ports (2)

D. Audio Mic and Speaker



E. Built-in Carrying Handle

F. WaveSource Out

G. Removable Solid State Drive (optional)

H. Aux Out

I. Ref In/Out

J. USBTMC Port for remote control

K. AC Power Inlet

Connecting to External Devices/Systems

See the *HDO6000B Oscilloscopes Operator's Manual* for more instructions on connecting to external devices.

Audio/USB Peripherals

Connect the device to the appropriate port. These connections are “plug-and-play” and do not require further configuration. Use the Windows control panel to make adjustments. Choose **File > Minimize** to go to the Windows desktop.

External Monitor

The HDMI and DisplayPort interfaces support Ultra HD monitors. Connect the monitor to a video output on the side of the instrument. You can use an adapter if it does not have an HDMI or DP cable. Go to **Display > Display Setup > Open Monitor Control Panel** to configure display settings using the Windows control panel. Be sure to select the oscilloscope as the primary display.

To use the Extend Grids feature, configure the second monitor to extend, not duplicate, the oscilloscope display. If the external monitor is touch screen enabled, the MAUI user interface can be controlled through touch on the external monitor.

LAN

The HDO6000B is preset to accept a DHCP network address over a TCP/IP connection. Connect an ENET cable from either port to a network access device. Go to **Utilities > Utilities Setup > Remote** to find the IP address.

To assign the oscilloscope a static IP address, open **Net Connections** from the Remote dialog and use the Windows networking dialogs to configure the device address. Go to **File > File Sharing** to configure email.

Remote Control

You can control the instrument over a LAN using VICP (TCP/IP) or VXI-11 (LXI). Use a standard ENET cable to connect to a network access point, and be sure the instrument is on the same subnet as the controller. You can also connect directly using TCP/IP, but depending on the controller, you may need to use a cross-over cable.

Note: To connect the instrument to a remote PC running MAUI Studio, choose VICP (TCP/IP). To use LXI, switch to the Administrative User LCRYADMIN (p.41).

USBTMC and GPIB (with the optional USB-GPIB adapter) can also be used to make a remote connection. To change the remote control setting from the default VICP (TCP/IP), go to **Utilities > Utilities Setup > Remote**.

Printer

HDO6000B supports USB printers that are compatible with the Windows OS installed on the oscilloscope. Connect the printer to any host USB port, then go to **File > Print Setup > Print** and select **Printer** to configure settings. Choose **Properties** to open the Windows print dialog.

Aux Out and Cal Out

The oscilloscope can output a pulse upon a trigger event or Pass/Fail outcome. Connect a BNC cable from Aux Out on the back of the instrument to the other device. Go to **Utilities > Utilities Setup > Aux Output** to configure the output.

The Cal Out hook on the front can be set to output a direct current or square wave of custom amplitude and frequency. Use the Aux Output dialog to configure Cal Out.

Reference Clock

To input or output a reference clock signal, connect a BNC cable from Ref In/Out on the back of the instrument to the other instrument. Go to **Timebase > Horizontal Setup > Reference Clock** to configure the clock.

Probes

HDO6000B oscilloscopes are compatible with the included passive probes and most Teledyne LeCroy **ProBus** active probes that are rated for the oscilloscope's bandwidth. Probe specifications and documentation are available at teledynelecroy.com/probes.

Digital Leadset

Delivered with the purchase of a Mixed Signal (-MS) model, the **digital leadset** enables input of up-to-16 lines of digital data. Lines can be organized into two logical groups representing different buses and renamed appropriately.

The digital leadset features two digital banks with separate threshold controls, making it possible to simultaneously view data from different logic families.



Each flying lead has a signal and a ground connection. A variety of ground extenders and flying ground leads are available for different probing needs. To achieve optimal signal integrity, connect the ground at the tip of the flying lead for each channel used in measurements. Use either the provided ground extenders or flying ground leads to make the ground connection.

To connect the leadset to the oscilloscope, push the connector into the mixed signal interface below the front panel until you hear a click.

To remove the leadset, press in and hold the buttons on each side of the connector, then pull out to release it.



Front Panel

Most of the front panel controls duplicate functionality available through the touch screen display. They are covered in more detail in the Basics section and in the *HDO6000B Oscilloscopes Operator's Manual*.

- A. Auto Setup** turns on and configures all channels with a signal attached. The edge trigger level is set to the signal mean.
- B. Default Setup** returns all channels to the factory default settings.
- C. Clear Sweeps** resets math and measurement counters.
- D.** The **Touch Screen** button enables or disables touch screen functionality.
- E.** The **Save** button performs the last action you set on the Save dialog: save a setup file, waveform file, memory, screen image or LabNotebook.
- F.** The **User** button can be configured to execute your choice of actions: save LabNotebook, waveform or setup files; store waveforms to internal memory; perform your chosen "Print" action; and more. Go to **Utilities > Front Panel Setup** to configure the User button.
- G.** When cursors are turned off, the Cursor knobs act as the **Adjust knobs**. They raise/lower the value when a data entry field is selected, or raise/lower trace intensity when a waveform is selected. Pushing the Adjust knobs returns settings to the default value.



All the knobs on the front panel function one way if turned and another if pushed like a button. The first label describes the knob's principal "turn" action, while the second describes its "push" action.

Many front panel buttons light to indicate the function is active. The labels for Trigger, Horizontal, Vertical and Cursors/Adjust also light in the color of the trace that is currently associated with these knobs.



Touch Screen Display

The entire display is active. Use your finger or a stylus to touch, drag-and-drop, swipe, pinch and flick. Many controls that display information also work as "buttons" to access other functions. If you have a mouse installed, you can click anywhere you can touch to activate a control; in fact, you can alternate between clicking and touching, whichever is convenient for you.



A. Menu Bar

B. Grid

C. Cursor

D. Trigger Level Indicator

E. Trigger Time Indicator

F. Trace Descriptor Box

G. Add New Box

H. HD Descriptor Box

I. Timebase and Trigger Descriptor Boxes

J. Cursor Readout

K. Setup Dialogs

A drop-down **menu bar** lets you access set up dialogs and other functions. All functionality can be accessed through either the menu bar or other touch screen shortcuts.



If an action can be “undone” (such as recalling a setup), a small **Undo button** appears at the far right of the menu bar. Click this to return to the previous oscilloscope display.

The **grid** displays the waveform traces. It can be configured to show different grid styles.

Cursors show where measurement points have been set. Touch-and-drag cursor indicators to quickly reposition the measurement point. Horizontal cursor readouts appear below the Timebase and Trigger descriptors.

Trigger Level and **Trigger Time** indicators appear at the edge of the grid when a trigger is set, color-coded to match the trigger channel.


Trace Descriptor boxes appear along the bottom of the grid, one for each open trace. They adjust in size and detail as more are opened.

The **Add New box** sits next to the trace descriptor boxes. Use it to turn on new traces or the Measure table. See “MAUI with OneTouch” on p.15.


The **HD Descriptor box** shows the ADC resolution at which the oscilloscope is operating.

Timebase and Trigger descriptor boxes appear at the right of the display. Timebase and Trigger settings only apply to channel traces. Touch the descriptor box to open the corresponding set up dialog.


Dialogs appear at the bottom of the display for entering set up data. The top dialog will be the main entry point for the selected function. Related dialogs appear as a series of tabs behind the main dialog.

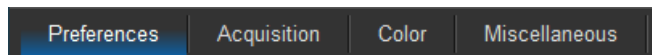


A **toolbar** along the bottom of the main Channel, Math, Memory and Digital dialogs initiates frequent actions without closing the underlying dialog. The actions always apply to the active (highlighted) trace.

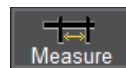


Apply measurement parameters.

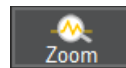


Display a zoom of the trace.

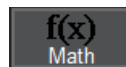


Apply a math function to the trace.

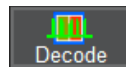


Open the Serial Decode dialog (if decoder options installed; else disabled).

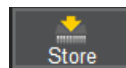

Copy the active trace to the corresponding internal memory (e.g., C2 to M2).

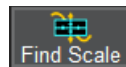

Scale the waveform to fit the grid.

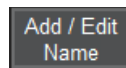

Add a custom name to the trace.




Apply a custom label to the trace.


Changing the Display

Grid Mode

The grid is 8 Vertical divisions representing 4096 Vertical levels and 10 Horizontal time divisions. The value represented by each division depends on the scale settings of the traces that appear on it.

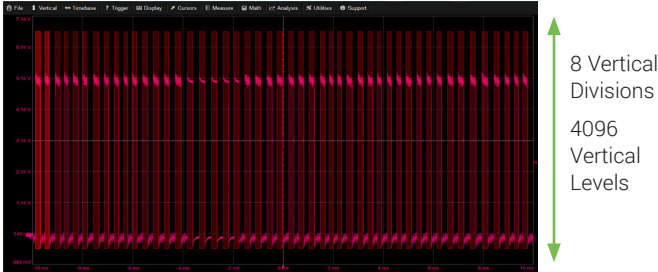

The grid can be divided into multiple grids each representing the full number of Vertical levels. A variety of multi-grid modes are available.

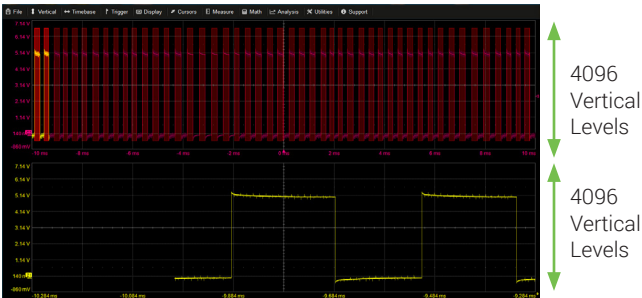

By default, the oscilloscope has the **Auto** grid mode enabled. Auto adds a grid for each new trace, up to 16 grids, until no more grids are available. Other grid modes create a fixed number and orientation of grids; the icon shows the result.

To modify the touch screen display, choose **Display > Display Setup** from the menu bar and make your selections from the Display dialog.

Extended Display

If you have a second monitor connected, select **Extend Grids on 2nd Monitor** from the Display dialog, then choose a grid mode from the Extended Display pop-up menu. Both screens will share this grid mode. Drag-and-drop descriptor boxes to move traces between the displays.




Oscilloscope with an extended display.

Line, Intensity and Persistence


The trace style can be set to a series of separate sample **Points** or a continuous vector **Line**.

Grid Intensity makes the grid lines dimmer or brighter relative to the trace.


When more data is available than can actually be displayed, **Trace Intensity** helps to visualize significant events by applying an algorithm that dims less frequently occurring samples.

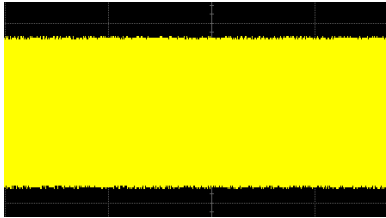

Intensity 100%

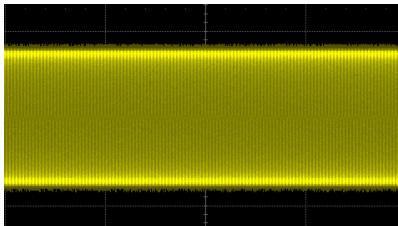


Intensity 15%

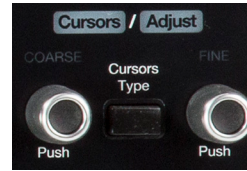


With the trace selected (and cursors off), turn the front panel Adjust knobs to control the Trace Intensity.

Various types of **Persistence** can be added to the display to visualize how waveforms change over time. Persistence displays can be colorized or modeled in 3D and rotated on three axes.

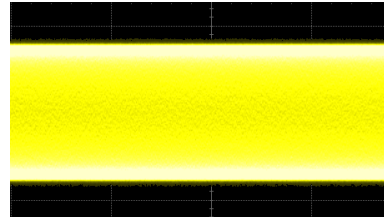

Intensity 15% with Analog Persistence

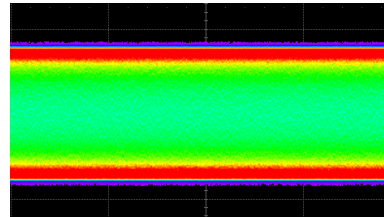

Intensity 15% with Color Persistence

Working With Traces

Trace Descriptor Boxes

Channel (C1-C4), Zoom (Z1-Zn), Math (F1-Fn), Memory (M1-Mn) and Digital (Digital1-Digital4) descriptor boxes appear along the bottom of the grid when a trace is turned on. Descriptor boxes summarize, activate, arrange and configure the traces they represent.

C1	DC1M	F1	FFT(C1)	Z1	zoom(C1)	M1
	50.0 mV		20.0 dB/div		50.0 mV	50.0 mV
	0.0 mV ofst		500 MHz		5.00 ns/div	50.0 ns/div

Trace Context Menu

The trace context menu is a quick way to apply math, measurements or labels to traces. To open the context menu, right-click with your mouse or touch-and-hold on the trace descriptor box until a white circle appears, then release.

Active vs. Inactive Trace

Although several traces may be open and appear on the display, only one at a time is *active*. This is true for all traces, regardless of the type. All actions apply to the active trace until another is selected.

Touch a trace or its descriptor box to activate it and bring it to the *foreground*. When the descriptor box appears highlighted in blue, front panel controls and touch screen gestures apply to that trace.

C1	AC1M
	500 mV/div
	0 mV offset

Inactive. Controls will not work for this trace.

C1	AC1M
	500 mV/div
	0 mV offset

Active. Controls will work for this trace.




Adjusting Settings

On setup dialogs, many entries can be made by selecting from the pop-up menu that appears when you touch a control.



On some pop-up menus, you can choose to display options as a **list** or as **icons**.

When an entry field appears highlighted in blue after touching, it is *active* and the value can be modified by turning the front panel knobs. Fields that don't have a dedicated knob (as do Vertical Level or Horizontal Delay) can be modified using the **Adjust knob**.

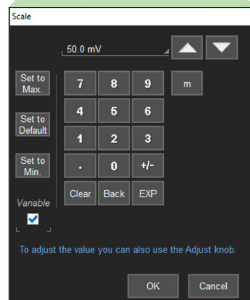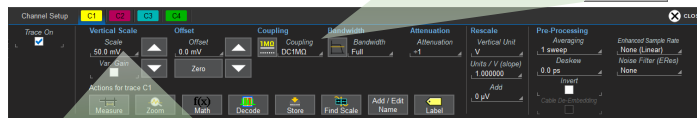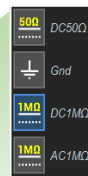

If you have a keyboard installed, you can type entries in an active (highlighted) data entry field. Or, you can touch again, then "type" the entry by touching keys on the virtual keypad or keyboard.

To use the virtual keypad, touch the soft keys exactly as you would a calculator. When you touch OK, the calculated value is entered in the field.


MAUI with OneTouch

Touch, drag, swipe, pinch and flick can be used to create and change setups with one touch. Just as you change the display by using the set up dialogs, you can change the setups by moving different display objects. Use the setup dialogs to refine OneTouch gestures to precise values.

As you drag & drop, valid targets are outlined with a white box. When you're moving over invalid targets, you'll see the "Null" symbol (\emptyset) under your finger tip or cursor.


Turn On

To turn on a new channel, math, memory, or zoom trace, drag any descriptor box of the same type to the **Add New ("+") box**. The next trace in the series will be added to the display at the default settings. It is now the active trace.

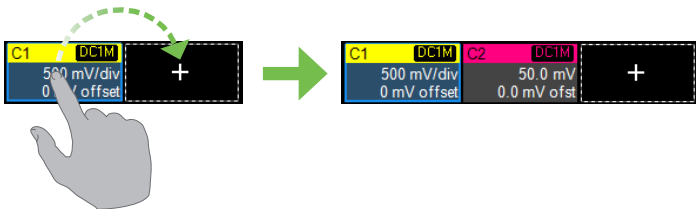


If there is no descriptor box of the desired type on the screen to drag, touch the Add New box and choose the trace type from the pop-up menu.

To turn on the Measure table when it is closed, touch the Add New box and choose Measurement.

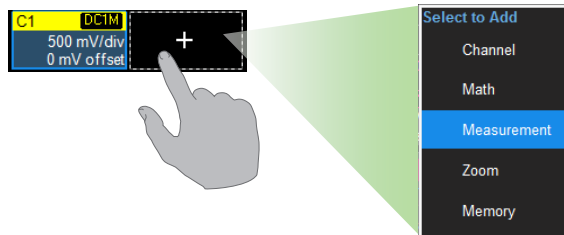


Copy Setups

To copy the setup of one trace to another of the same type (e.g., channel to channel, math to math), drag-and-drop the source descriptor box onto the target descriptor box.

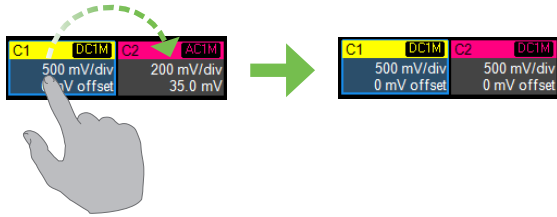


To copy the setup of a measurement (Pn), drag-and-drop the source column onto the target column of the Measure table. You can do the same for a query (Qn) on the Pass/Fail readout table.

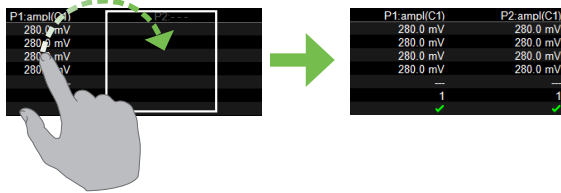


Change Source

To change the source of a trace, drag-and-drop the descriptor box of the desired source onto the target descriptor box. You can also drop it on the Source field of the target setup dialog.

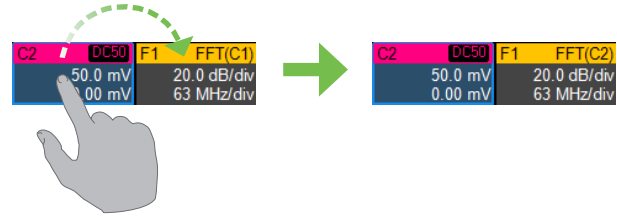


To change the source of a measurement, drag-and-drop the descriptor box of the desired source onto the parameter (Pn) column of the Measure table. You can do the same to a query (Qn) on the Pass/Fail readout table.

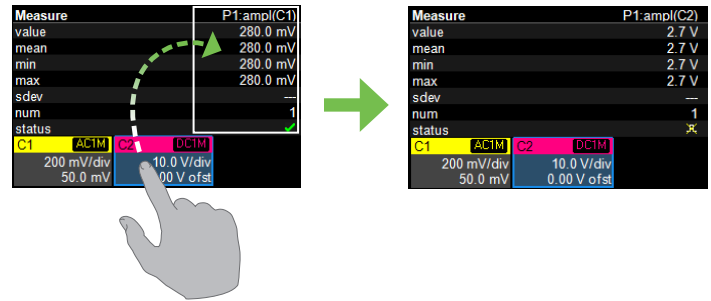


Position Cursors

To change cursor measurement time/level, drag cursor markers to new positions on the grid. The cursor readout will update immediately.

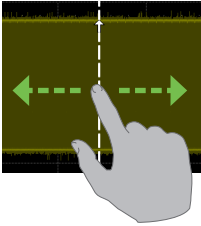


To place horizontal cursors on zooms or other calculated traces where the Horizontal Scale has forced cursors off the grid, drag the cursor readout from below the Timebase descriptor to the grid where you wish to place the cursors. The cursors are set at either the 5 (center) or 2.5 and 7.5 divisions of the grid. Cursors on the source traces adjust position accordingly.

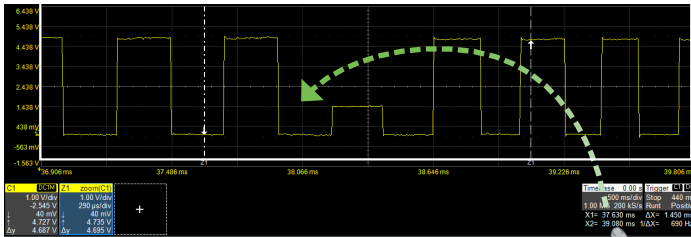


Change Trigger

To change the trigger level, drag the Trigger Level indicator to a new position on the Y axis. The Trigger descriptor box will show the new voltage Level.

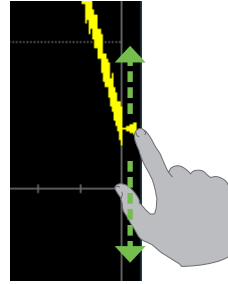


To change the trigger source channel, drag-and-drop the desired channel (Cn) descriptor box onto the Trigger descriptor box. The trigger will revert to the last trigger set on that channel.

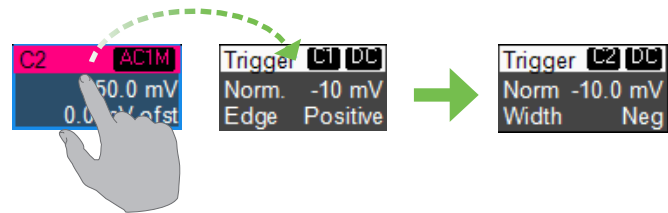


Store to Memory

To store a trace to internal memory, drag-and-drop its trace descriptor box onto the target memory (Mn) descriptor box.

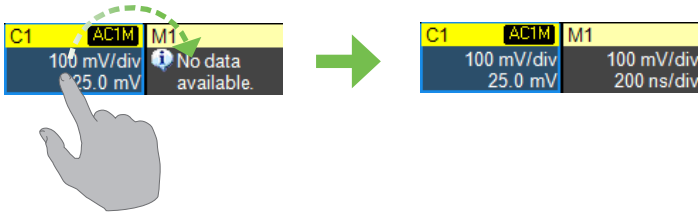


Move Trace

To move a trace to a different grid, drag-and-drop the trace descriptor box onto the target grid.

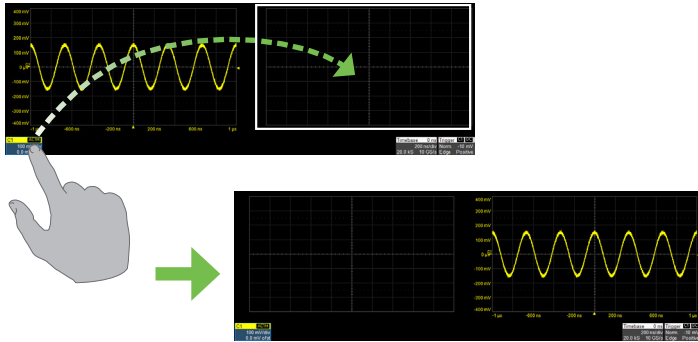

Scroll


To scroll long lists of values or readout tables, swipe the selection dialog or table in an up or down direction.

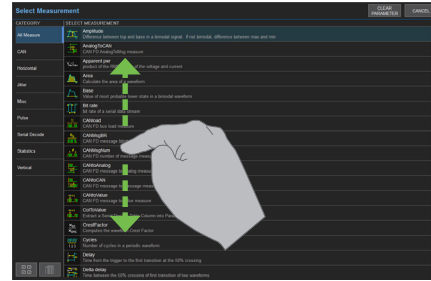


Pan

To pan a trace, activate it to bring it to the forefront, then drag the waveform trace right/left or up/down. If it is the source of any other trace, that trace will move, as well.


To pan at an accelerated rate, swipe the trace right/left or up/down.

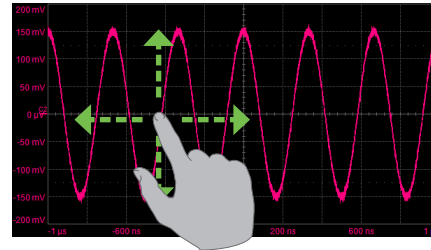


Zoom

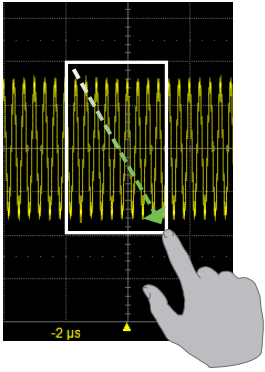

To create a new zoom trace, touch then drag diagonally to draw a selection box around the portion of the trace you want to zoom. Touch the **Zn** descriptor box to open the zoom factor controls and adjust the zoom exactly.

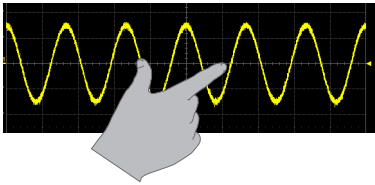


To "zoom in" on any trace, unpinch two fingers over the trace horizontally.

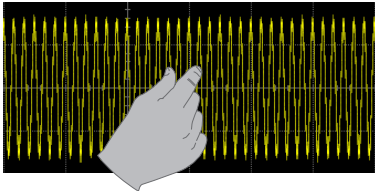

To "zoom out" on any trace, pinch two fingers over the trace horizontally.

Turn Off


To turn off a trace, flick the trace descriptor box toward the bottom of the screen.

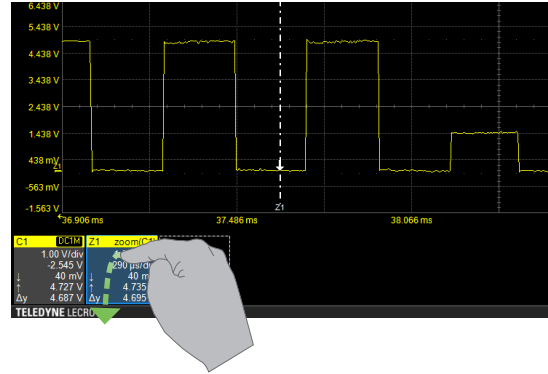


Vertical (Channel)

Vertical controls adjust traces along the Y axis. Traces represent eight Vertical divisions of the source signal at the selected number of units per division. The zero level is at the center grid line unless you add positive or negative Offset. The front panel Volts knob also controls the Vertical Scale of zoom, math and memory traces.

From the Front Panel

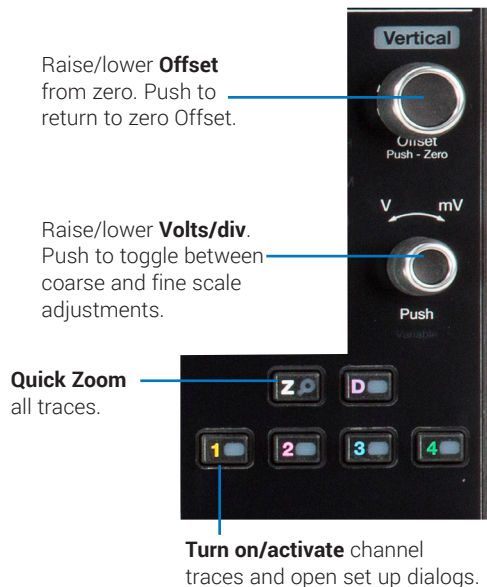


Channel Descriptor Box

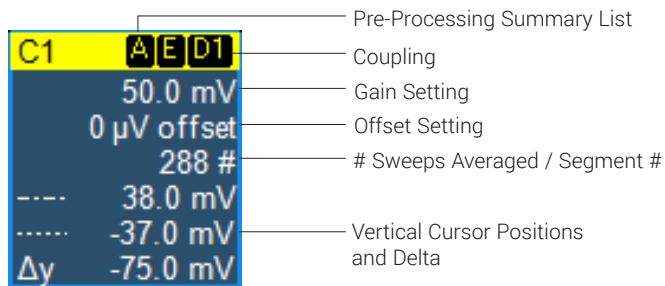

From the Touch Screen

Drop a channel descriptor on the **Add New box**, or touch the Add New box and choose **Channel**. Touch new **C_n descriptor** to open the C_n setup dialog.

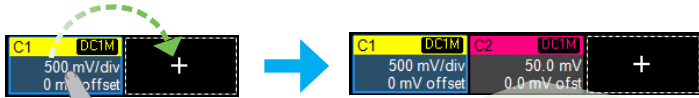

Enter **Attenuation** for passive and other vendors' probes.

Enter **Volts/div** and **Offset**.

Enter **Coupling** for cables/probes.

Apply optional **Bandwidth Filters**.

Rescale channel trace, or change **Vertical Unit** of grid.

Make any other **Pre-Processing** settings.


Digital

On Mixed Signal (-MS) instruments, Digital selections are added to the Vertical menu, and the front panel Vertical knobs control active Digital line and bus traces.

From the Front Panel

Turn **Offset** to raise/lower group **Vertical Position**, the top of lowest bit relative to center.

Turn **Volts** to raise/lower **Group Height**, the total Vertical divisions occupied by group.

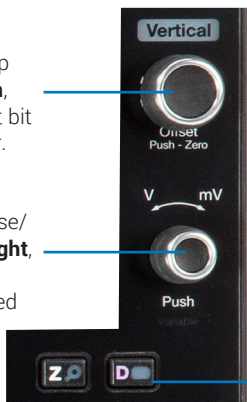


Turn on/activate digital traces.

Digital Descriptor Box



- # Digital Lines in Group
- Digital Sample Rate
- Digital Memory

Digital Displays

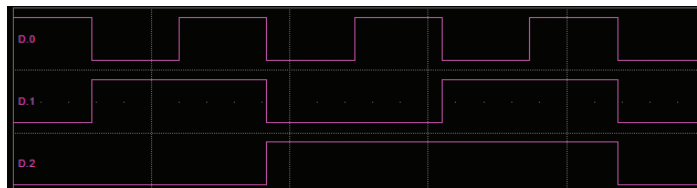

Line trace shows high, low and transition points for each line.





Bus trace collapses lines into hex values.



Activity indicators show when line is high, low, or transitioning.


From the Touch Screen

From the menu bar, choose **Vertical>Digital n Setup**. Touch **Digitaln** descriptor to open Digitaln setup dialog.

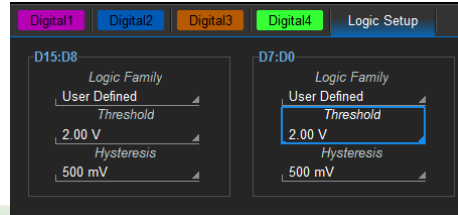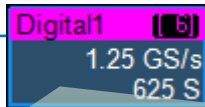

On the Logic Setup tab, choose a standard **Logic Family**, or enter a custom **Threshold** and **Hysteresis**. Separate controls allow you to set different values for each lead bank.

Choose **Display Mode** of individual lines, bus trace, or both.

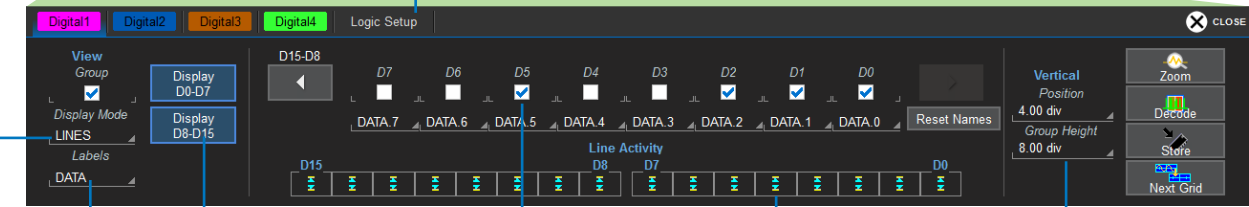

Optionally, choose a new **Label** for the lines. Select Custom to enter unique names.

Use **Display buttons** to switch between lead banks as you select lines.

Use checkboxes to select **lines in the group**.
Optionally, enter a custom **line name** in the field beneath.

Line Activity indicators show the state of each line: high, low, or transitioning.

Enter digital trace **Vertical Position** and **Group Height** in divisions.

Horizontal (Timebase)

Horizontal controls adjust traces along the X axis. Analog traces usually represent one acquisition of the source signal for 10 divisions of the selected Time per division. The trigger event is shown at the center of the grid, unless you add positive or negative Delay time. The front panel Time knob also controls the Horizontal Scale of zoom, math and memory traces, allowing you to "zoom in" to see more detail or "zoom out" to see the bigger picture.

From the Front Panel



Raise/lower trigger **Delay**.
Push to remove Delay.

Raise/lower **Time/div**.
Push to toggle between coarse and fine scale adjustments.

Timebase Descriptor Box

Sampling Mode (blank in real-time)	Timebase	0 μ s	Trigger Delay (Position)
# Samples	Seq: 10	50.0 μ s	Time/div
	5 MS	10 GS/s	Sample Rate

From the Touch Screen

Touch the **Timebase** descriptor to open Timebase setup dialog.

Timebase 0 μ s
Seq: 10 50.0 μ s
5 MS 10 GS/s

Enter **Time/div.**

Select **Sampling Mode.**

The screenshot shows the Timebase setup dialog with the following settings and controls:

- TimeBase:** 0 μ s
- Seq:** 10
- Time/Division:** 50.0 μ s
- Delay:** 0 μ s
- Real Time Sampling Rate:** 10.0 GS/s
- Buttons:** Set Maximum Memory, Fixed Sample Rate, Set To Zero

Optionally, enter **Delay**, (negative) time before trigger or (positive) time after trigger event to show.


Set To Zero removes Delay.

Enter fixed **Sampling Rate** or **Maximum Points** of memory to use in acquisition.

Trigger

Triggers tell the oscilloscope when to perform an acquisition. The acquisition starts as soon as the trigger is armed *and* all trigger conditions are met, unless postponed by a Holdoff count of time or number of trigger events. Trigger types and modes are described at more length in the *HDO6000B Oscilloscopes Operator's Manual*.


From the Front Panel

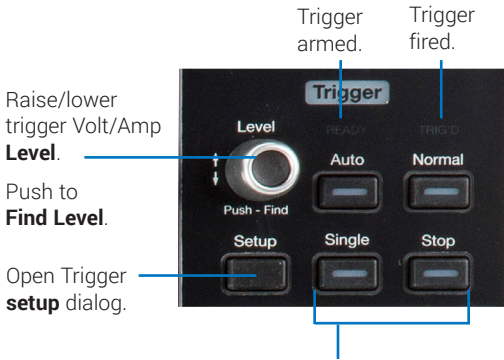

Select **Trigger Mode**:

- Auto – trigger after preset period if no valid trigger.
- Normal – trigger repeatedly when all conditions met.
- Single – trigger once when all conditions met.
- Stop – stop acquisition.

Trigger Descriptor Box

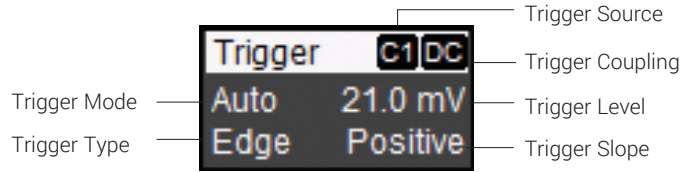

Trigger Indicators



Level




Position



Pre/Post-Trigger – appears at corner of grid when trigger point is no-longer visible.


From the Touch Screen

Touch **Trigger descriptor** to open Trigger setup dialog.

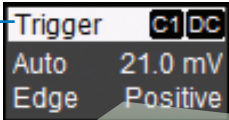

Choose trigger **Source** channel.

Choose trigger **Type**. **Holdoff** tab will appear when Edge or Pattern type is selected.

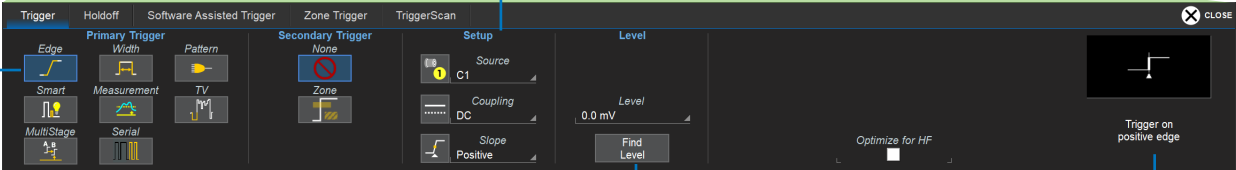

Set other **conditions**, such as **Slope** and **Coupling** (vary by trigger type).

Set trigger **Level**, or **Find Level** based on the input signal.

Icon summarizes the trigger selections.

Zoom

Zoom traces (Zn) display a magnified portion of another trace. Any trace can be zoomed, although Zoom is most useful for channel traces, as it allows you to see the source at the original Timebase at the same time as the Zoom "close up."

From the Front Panel


Adjust **Horizontal Scale** to change zoom magnification.



Create **Zoom** of all open traces.

When you use the front panel **Zoom button**, a new Zoom trace is created for every open trace, showing a 10x magnification of the source trace.


The zoomed portion of the source trace is highlighted, so that the area corresponding to the zoom is more visible.

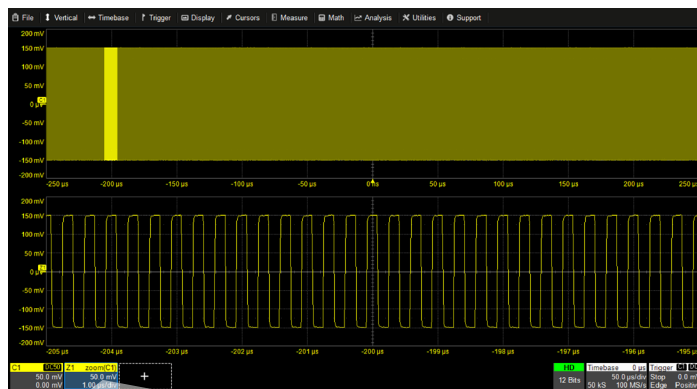

C1	DC50	Z1	zoom(C1)
50.0 mV		50.0 mV	
0.00 mV		1.00 μs/div	


The **Zoom descriptor box** shows the **Zoom Source** and **Horizontal Scale**, which differs from the Timebase.

From the Touch Screen

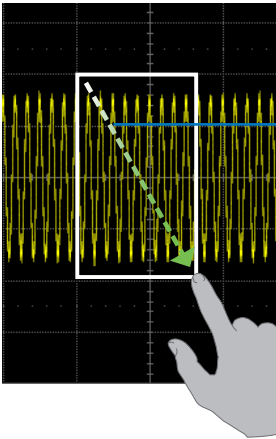

Draw a **Zoom box** over a portion of the source trace.
Repeat on another section to reposition the Zoom trace.

OR

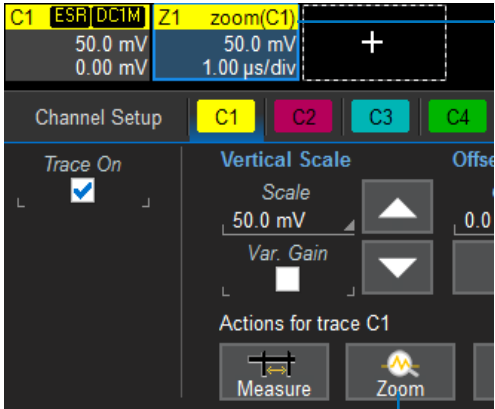

Zoom descriptor opens Zoom dialog to make other adjustments.

On the source trace setup dialog, touch **Action Toolbar Zoom button** to create a new zoom of just that source trace.

Cursors

Cursors set measurement points on the Vertical or Horizontal axis of a trace (or both). The five preset cursor types are described in more detail in the *HDO6000B Oscilloscopes Operator's Manual*. All show the absolute value where the cursor intersects the waveform and the delta of the two lines.


From the Front Panel

Adjust **cursor position**.
Push to select different lines when using Both Rel cursors.



Apply **cursor**. Continue pressing to cycle through **cursor types**.

From the Touch Screen

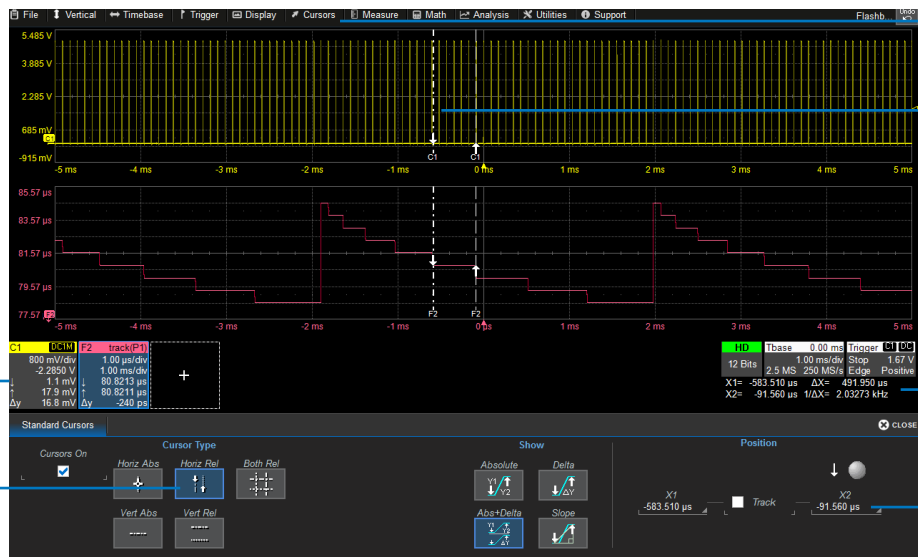

Vertical Cursor readout on descriptor boxes.

Choose **Cursor Type**.

Cursors > Cursor Setup opens the Cursor dialog.

Touch-and-drag **cursor line** to reposition cursor.

Horizontal Cursor readout below Timebase. Drag onto to zooms to reset cursors on the rescaled traces.

Set exact **Cursor Position** using dialog. **Track** moves both lines together.

Measurements and Statistics

Measurements are waveform parameters that can be expressed as numerical values, such as amplitude or frequency. Measurement results are shown in a table below the grid. Statistics can be added to the readout, along with histicons, a miniature histogram of the statistical distribution. You can also gate measurements to limit them to a specific portion of the trace, or plot a histogram, trend or track of the measurement over time.

Touch **Measure** column to re-open Measure dialog if closed.

Use **Measure dialog** to add/remove **Statistics** and **Histicons**, turn on **Standard Measurements** or **Clear Sweeps**.



Measure > Measure Setup opens the Measure dialog.

Touch **Pn** cell to re-open **Parameter** set up dialog.

Accept measurements based on range of values or state of second, qualifying waveform.

Choose **Source** trace to be measured and **Measurement**.


Action buttons quickly plot measurement.

Turn on **Help Markers** to show what is being measured on waveform.

Enter **Gates** (in div) to constrain span of measurement, or drag gate markers from edge of grid.

Math

Math creates a new trace that displays the result of applying a mathematical function (e.g., Sum, Product, FFT) to one or more source traces. Operations can be chained by using one math function as a source for the other. The math trace always opens in a separate grid from the source and can be viewed along side it. One important distinction between math functions and measurement parameters is that the result of math is always another waveform, whereas the result of measurement is a number.

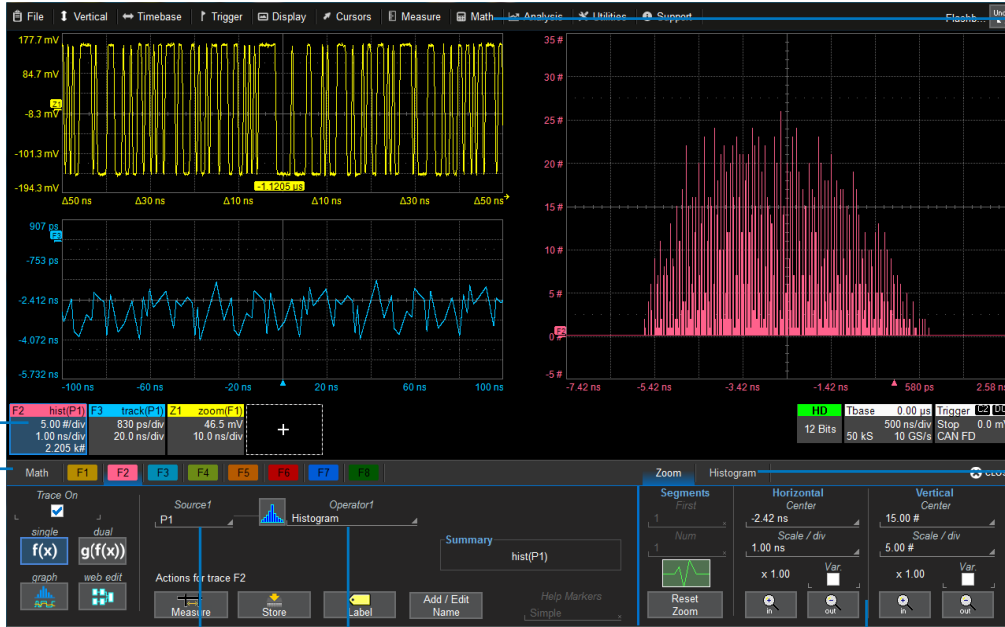

Math > Math Setup opens Math dialog.

Units and scale on **Fn** descriptor.

Use **Math** tab to quickly turn on/off functions.

Make other settings on the **function subdialog** (varies by operation).


Choose **Source** trace(s) to operate on and **Operator**.

Use **Zoom** controls to rescale math trace.

Memories (Reference Waveforms)

Memories are traces stored for reference. They can be recalled to the display for comparison with other traces. A memory can be zoomed or measured for better analysis of historical data.


To store a new memory:

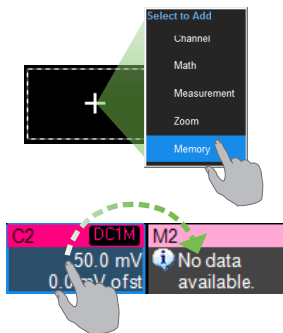

Touch the **Add New** box and choose **Memory** to turn on the next memory trace.

Then, drag the descriptor box of the trace you want stored onto the new Mn descriptor box.

OR

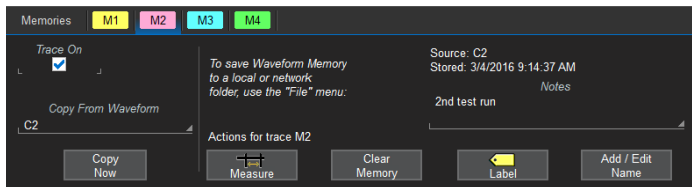


Choose **Math > Memory Setup**. On the Mn tab, select the trace you want stored in **Copy From Waveform**, then touch **Copy Now**.

Optionally, add **Notes** or **Labels** to the stored memory.

To recall a stored memory:

Choose **File > Recall Memory** to open the Memories dialog, then check **On** next to $M1-Mn$.

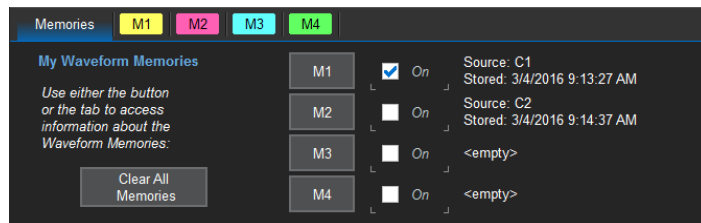

Internal memories persist only until the oscilloscope is rebooted. To store memories indefinitely, save them to a trace (.trc) file by choosing **File > Save Waveform**.

The trace file can later be recalled into one of the internal memories for viewing by choosing **File > Recall Waveform**.

Note: Only files saved with the .trc extension can be recalled.

Decode

Choosing **Analysis > Serial Decode** opens the dialogs for configuring serial trigger and decode options. Decoders apply software algorithms to extract encoded information from physical layer waveforms measured on your oscilloscope. Waveforms are annotated to provide fast, intuitive understanding of the relationship between protocol and signal. Serial triggers fire upon finding complex, user-defined patterns and events in the data stream.

View decoding on the **colored overlays**.

Generate **eye diagrams** with TDME options.

When multiple decoders are running, touch the **Index cell** to drop-in the detailed decoding. Touch any cell *other than* Index and Protocol to zoom. Touch to zoom.



When there is more data than fits in a table cell, touch the **white triangle** to pop-up the full decoding.

Touch **data cells** to zoom that single record of data. The zoomed record is highlighted in the table and on the decode trace.

Touch drop-down arrow in **header** to filter column.

Select **Source trace** and **Protocol**.

Make required settings on the subdialogs.

WaveScan

Choosing **Analysis > WaveScan** opens the WaveScan dialogs. WaveScan Search and Find enables you to search for unusual events in a single capture, or to scan for a particular event in many acquisitions over a long period of time. A predefined set of scan modes (similar to trigger setups) enable a quick search for events of interest. The results are time stamped, tabulated and can be selected for individual viewing.

Result table lists found events. Touch an event to zoom it.



Choose scan **Mode** (event to find) and **Source** waveform to search.

Select different **views** of the scan: event table with/without time stamps, overlay or zoom.

Take **action** when an event is found, such as sounding a beep.


Color overlays mark events on the source trace.

Zoom of selected event.

History Mode

Choose **Timebase > History** to put the instrument into History Mode, allowing you to review any acquisition in the oscilloscope's history buffer, which automatically stores all acquisitions until full. Each record is indexed and time-stamped with either the absolute time since beginning of history or the time relative to where you are in the history. Not only can individual acquisitions be restored to the grid, you can "replay" history at varying speeds to capture detailed changes in the waveforms over time.

Select row of
History table
to view that
acquisition.

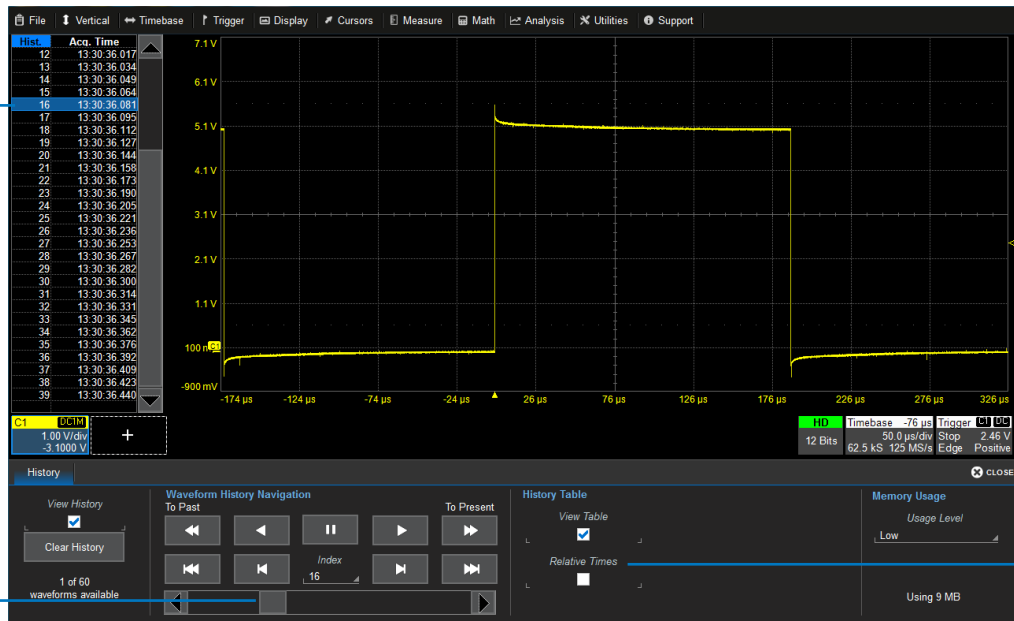

Auto Play buttons
and slider bar
"replay" history to
find events
of interest.

View History table
using absolute time
or relative time.

WaveSource Arbitrary Function Generator

The WaveSource Arbitrary Function Generator allows you to output multiple types of waveform signals, including arbitrary waveforms, from the HDO6000B. To use it, just connect a BNC cable from the WaveSource output on the back of the oscilloscope to the input device, then set up the waveform on the WaveSource dialog. To access the WaveSource dialog, choose **Utilities > WaveSource**.

Check **Enable** to start signal output.

Select **waveform type**.

Choose **settings**:
Frequency *or* Period,
Amplitude *or* Level.

Enter waveform **settings**.

The screenshot shows the WaveSource dialog box with the following components:

- WaveSource** (Title Bar)
- WaveSource** (Section Header)
- Enable** (Checkbox, checked)
- Load HiZ** (Button)
- Waveform** (Section Header)
- Waveform icons: Sine, Square, Triangle, Pulse (selected), DC, Noise, ARB (selected)
- Settings** (Section Header)
- Freq** (Button) / **Period** (Button)
- Frequency: 1.000000000 kHz
- High Level: 50 mV
- Low Level: -50 mV
- Ampl** (Button) / **Level** (Button)
- Width** (Section Header)
- Width: 100 ns
- Rise Time: 20 ns
- Fall Time: 20 ns

For custom waveforms, choose **ARB** and **Upload** arbitrary function script.

Saving and Sharing Data

Use the oscilloscope **File** menu options to save and recall data. See the *HDO6000B Oscilloscopes Operator's Manual* for more information on using these features.

LabNotebooks

LabNotebooks are composite files (.LNB) containing setups, waveform data and screen image as they were at the moment of capture. Creating a LabNotebook can be as simple as pressing the Print button as you work. Flashback LabNotebooks to restore the oscilloscope to the exact state it was in when the file was saved. Waveforms and tables are displayed as they were for new analyses to be performed.

LabNotebook files can be edited, annotated and exported into a preformatted HTML, .RTF or .PDF report. They can also be extracted into their component setup, waveform and screen image files.



Setup, Waveform and Table Data

The current oscilloscope configuration can be saved to internal setup panels or setup (.LSS) files and later recalled.

Waveform data can be stored to trace (.TRC) files and later recalled into memories to restore the waveform display to the screen.

Table data can be saved to either ASCII (.TXT) or Excel (.CSV) files.

When multiple waveforms or tables are displayed, one command saves **All Displayed** to separate, autonamed files.

Screen Captures



The front panel **Save** and **User** buttons can be configured to capture a **Screen Image** and save it according to your chosen **Screen Image Preferences** for file format, print area and color palette.

Choose **Utilities > Front Panel Setup** to configure the User button. Choose **File > Save** to configure the Save button.

File Sharing

If the oscilloscope is networked, LabNotebooks, reports and other user data files can be emailed directly from the instrument or saved to accessible network devices. The oscilloscope can be added to a LAN via TCP/IP or directly connected to a PC via USBTMC to transfer data.

Files can also be transferred to a USB drive through any of the host USB ports. Stored user data files are located on the D: drive.

Software Options

Software options are available to extend the capabilities of an HDO6000B oscilloscope. To purchase an option, contact your Teledyne LeCroy sales representative. You will receive a license key via email that activates the optional features on the oscilloscope. To install the key on the oscilloscope:

1. From the menu bar, choose **Utilities > Utilities Setup > Options**.
2. Touch **Add Key**.
3. Enter the new **license key** and click **OK**.
4. Reboot the instrument.

See the HDO6000B product page on our website for a full list of options.

Advanced Customization Package (HDO6K-XDEV) supports user-defined measurement parameters and math functions. Algorithms can be created in your favorite programming language, such as MATLAB.

Power Analysis Software (HDO6K-PWR) lets you measure and analyze the operating characteristics of power conversion devices and circuits.

Digital Power Management Analysis (HDO6K-DIGPWRMGMT) software translates complicated multi-phase PMIC, VRM, POL, LDO and other DC rail behaviors into per-cycle measurements and Waveforms (plots).

3-Phase Power Analysis software (HDO6K-THREEPHASEPOWER) provides complete static and dynamic 3-phase electrical power analysis, with options for harmonics measurements, dq0 transforms and vector display.

Power Device (HDO6K-PWRDEV) software simplifies setup of power measurements for double-pulse testing.

Spectrum Analyzer (HDO6K-SPECTRUM-1/HDO6K-SPECTRUM-PRO-2R) creates an RF Spectrum Analyzer-like environment for analyzing frequency-dependent effects.

SDA Expert (HDO6K-SDAX-* options) delivers jitter and timing analysis for NRZ and PAM data signals.

Clock Expert (HDO6K-CLKX and HDO6K-CLKX-PRO options) provides basic and separated jitter measurements geared toward clock signals in circuit, plus Phase Noise, SSC and Accumulated Jitter measurements with Clock Expert Pro.

Many **Serial TDME Options** provide added insight when debugging serial data. For the latest list, visit teledynelecroy.com/serialdata.

Support Online Documentation

Online Help is available by selecting **Support > Dynamic Help** from the oscilloscope display menu bar. You can also select **Support > OneTouch Help** for a demonstration of MAUI with OneTouch.

Teledyne LeCroy publishes a free Technical Library on its website at teledynelecroy.com/support/techlib. Manuals, tutorials, application notes, white papers, and videos are available to help you get the most out of your Teledyne LeCroy products.

The *HDO6000B Oscilloscopes Operator's Manual* can be downloaded from the Technical Library under **Manuals > Oscilloscopes**. This PDF contains more extensive operating procedures than are found here.

The Datasheet published on the product page contains the detailed product specifications.

Technical Support

Registered users can contact their local Teledyne LeCroy service center to make Technical Support requests by phone or email. For a complete list of offices, visit teledynelecroy.com/support/contact.

You can also submit Technical Support requests via the website at teledynelecroy.com/support/techhelp.

Cleaning


Clean the outside of the oscilloscope using a soft cloth moistened with water or isopropyl alcohol solution. Do not use harsh or abrasive cleansers. Dry thoroughly before using. Do not submerge the instrument or allow moisture to penetrate it.



CAUTION. Do not attempt to clean internal parts.

Language Selection

To change the language that appears on the oscilloscope touch screen, from the menu bar, choose **Utilities > Preference Setup > Preferences** and make your **Language** selection.

You can also select at power on by touching the Language icon  when it appears at the upper-right of the touch screen.

Reboot the oscilloscope after changing language.

Calibration

The HDO6000B is calibrated at the factory at 23 °C (± 2 °C) for all possible vertical and horizontal settings. This calibration is never deleted and is used if there is no more recent calibration.

So that it maintains specified performance, the oscilloscope employs an automatic Temperature Dependent Calibration using a combination of cached and dynamic calibrations. Warm the oscilloscope for at least 20 min. after power on to reach a stable operating temperature. You will see a warning message on the Calibration dialog when the oscilloscope is still in the warm-up phase. Specifications are not guaranteed during warm up.

Upon acquisition the oscilloscope checks the current temperature. If the temperature has changed ± 5 °C from the last temperature calibrated for the acquisition settings in use, it will load the most recent calibration file that is within ± 5 °C of the current temperature. If there is no file within threshold, it will load the closest temperature and you will receive a message on the Calibration dialog to manually recalibrate.

To manually recalibrate, from the menu bar, choose **Utilities > Calibration**. There are two calibration routines for selection:

Calibrate All calibrates all possible combinations of vertical and horizontal settings at the current temperature. This calibration is valid for all possible settings at the current temperature ± 5 °C and may take over an hour to complete.

Calibrate Current Setting calibrates the current vertical and horizontal settings at the current temperature. This calibration is valid for *only the current acquisition settings* at the current temperature ± 5 °C and takes about 10 seconds to complete.

We recommend Calibrate All if it has been more than one month since the last full calibration. The Calibration dialog will inform you when calibration is valid.



CAUTION. Remove all inputs from the oscilloscope prior to calibration.

Schedule factory calibration once per year. Contact your local Teledyne LeCroy office for service.

Firmware Updates

Free firmware updates are available periodically from the Teledyne LeCroy website at teledynelecroy.com/support/softwaredownload. Registered users will receive email notification when a new update is released.

Consult your IT department/lab manager for the current LCRYADMIN user password, which is required for firmware installation and other Windows OS changes. User passwords at time of shipment are on a sticker on the body of the oscilloscope.



CAUTION. The installation may take several minutes, depending on the length of time since your last update. Do not power down the oscilloscope at any point during the installation process.

To download and install an update:



1. From the oscilloscope desktop (File > Exit) or a remote PC, launch the browser and visit the software download page at the URL above.
2. Click the link to **Oscilloscope Downloads > Firmware Upgrades**.
3. Enter the required model information and account login. If you don't yet have an account, create one now.
4. Follow the instructions to save the installer to a location on the oscilloscope D: drive or a USB storage device.
5. On the oscilloscope, use Windows Explorer to browse to the installer file and double-click it to launch the setup wizard.
6. When prompted, enter the LCRYADMIN password.
7. Follow the wizard prompts.
8. When installation is complete, power cycle the instrument.

Switching Windows Users

Windows 10 oscilloscopes are by default set to operate from the LeCroyUser account, but you may need to switch to the Administrative User, LCRYADMIN, to run certain compliance packages or use LXI remote control.

Note: To install software or change Windows settings, it is sufficient to supply the LCRYADMIN password. Consult your IT department/lab manager for the current passwords.

To switch to the LCRYADMIN account:

1. Exit the MAUI application by choosing **File > Exit**.
2. Open the Windows **Start menu** .
3. Hover over the **Teledyne LeCroy logo**  and select user **LCRYADMIN**.
4. Enter the oscilloscope **LCRYADMIN password**.
5. Double-click the **StartDSO icon** on the oscilloscope desktop.

To return to the Standard user, repeat this procedure selecting user **LeCroyUser** and entering the LeCroyUser password.

You may create as many new users on the oscilloscope as you wish provided you are logged in as LCRYADMIN when doing so. Use the standard Windows tools to add users.

Note: As long as there are any Standard (non-administrative) users, the oscilloscope will reboot into the last active Standard user, regardless of whether you've manually switched to an Administrative user. The only way to change this is to give LeCroyUser and all other users Administrator privileges.

Service

If the HDO6000B cannot be serviced on location, contact your service center for a **Return Material Authorization (RMA)** code and instructions where to ship the product. All products returned to the factory must have an RMA.

Return shipments must be prepaid. Teledyne LeCroy cannot accept COD or Collect shipments. We recommend air freighting. Insure the item you're returning for at least the replacement cost.

Follow these steps for a smooth product return:

1. Remove all accessories from the instrument.
2. Label the unit with:
 - The RMA
 - Name and address of the owner
 - Description of failure or requisite service
 - Passwords if other than factory default or those shown on sticker.
3. Pack the instrument in its original shipping box, if available, or an equivalent carton with adequate padding to avoid damage in transit. Do not include the manual.
4. Mark the outside of the box with the shipping address. Add:
 - ATTN: <RMA code assigned by Teledyne LeCroy>
 - FRAGILE
5. **If returning a product to a different country:** contact Teledyne LeCroy Service for instructions on completing your import/export documents.

Service Plans

Extended warranty, calibration, and upgrade plans are available for purchase. Contact your Teledyne LeCroy sales representative or customersupport@teledynelecroy.com to purchase a service plan.

Service Centers

For a complete list of Teledyne LeCroy offices by country, including our sales and distribution partners, visit: teledynelecroy.com/support/contact

Teledyne LeCroy
700 Chestnut Ridge Road
Chestnut Ridge, NY, 10977, USA
teledynelecroy.com

Sales and Service:

Ph: 800-553-2769 / 845-425-2000
FAX: 845-578-5985
contact.corp@teledynelecroy.com

Support:

Ph: 800-553-2769
customersupport@teledynelecroy.com

Warranty

NOTE: THE WARRANTY BELOW REPLACES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. TELEDYNE LECROY SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT OR OTHERWISE. THE CUSTOMER IS RESPONSIBLE FOR THE TRANSPORTATION AND INSURANCE CHARGES FOR THE RETURN OF PRODUCTS TO THE SERVICE FACILITY. TELEDYNE LECROY WILL RETURN ALL PRODUCTS UNDER WARRANTY WITH TRANSPORT PREPAID.

The product is warranted for normal use and operation, within specifications, for a period of three years from shipment. Teledyne LeCroy will either repair or, at our option, replace any product returned to one of our authorized service centers within this period. However, in order to do this we must first examine the product and find that it is defective due to workmanship or materials and not due to misuse, neglect, accident, or abnormal conditions or operation.


Teledyne LeCroy shall not be responsible for any defect, damage, or failure caused by any of the following: a) attempted repairs or installations by personnel other than Teledyne LeCroy representatives; b) improper connection to incompatible equipment; or c) for any damage or malfunction caused by the use of non-Teledyne LeCroy supplies. Furthermore, Teledyne LeCroy shall not be obligated to service a product that has been modified or integrated where the modification or integration increases the task duration or difficulty of servicing the instrument. Spare and replacement parts, and repairs, all have a 90-day warranty.

The instrument's firmware has been thoroughly tested and is presumed to be functional. Nevertheless, it is supplied without warranty of any kind covering detailed performance. Products not made by Teledyne LeCroy are covered solely by the original manufacturer's warranty.

Certifications

Teledyne LeCroy certifies compliance to the following standards as of the time of publication.

European Council

 The instrument bears this mark to indicate it conforms to all applicable European Council standards. Please see the EC Declaration of Conformity document shipped with your product for current certifications.

EMC DIRECTIVE

The instrument meets the intent of EC Directive 2014/30/EU for Electromagnetic Compatibility. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:

EN IEC 61326-1:2021 EMC requirements for electrical equipment for measurement, control and laboratory use

EN IEC 61326-2-1:2021 Particular requirements for sensitive test and measurement equipment for EMC unprotected applications ^{1, 2, 3}

¹ To ensure compliance with all applicable EMC standards, use high-quality shielded interface cables.

² Emissions which exceed the levels required by this standard may occur when the instrument is connected to a test object.

³ This product is intended for use in nonresidential areas only. Use in residential areas may cause electromagnetic interference.

LOW VOLTAGE DIRECTIVE

The instrument meets intent of EC Directive 2014/35/EU for Product Safety. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:

EN 61010-1:2010+A1:2019 Safety requirements for electrical equipment for measurement, control and laboratory use—Part 1: General requirements

EN 61010-2:030:2021 Safety requirements for electrical equipment for measurement, control, and laboratory use—Part 2-030: Particular requirements for testing and measuring circuits

The design of the instrument has been verified to conform to the following limits:

- Mains Supply Connector: Overvoltage Category II, instrument intended to be supplied from the building wiring at utilization points (socket outlets and similar).
- Measuring Circuit Terminals: No rated measurement category. Terminals not intended to be connected directly to the mains supply.
- Unit: Pollution Degree 2, operating environment where normally only dry, non-conductive pollution occurs. Temporary conductivity caused by condensation should be expected.

END-OF-LIFE HANDLING / WEEE



The instrument bears this mark to indicate that it complies with the applicable European Union requirements to Directives 2012/19/EU and 2013/56/EU on Waste Electrical and Electronic Equipment (WEEE) and Batteries.

The instrument is subject to disposal and recycling regulations that vary by country and region. Many countries prohibit the disposal of waste electronic equipment in standard waste receptacles. For more information about proper disposal of your Teledyne LeCroy product, visit teledyneleeroy.com/recycle.

RESTRICTION OF HAZARDOUS SUBSTANCES (RoHS)

Unless otherwise specified, all materials and processes are compliant with RoHS Directive 2011/65/EU in its entirety, inclusive of any further amendments or modifications of said Directive.

European Contact:*

Teledyne GmbH, European Division
 Im Breitspiel 11c
 D-69126 Heidelberg
 Germany
 Tel: + 49 6221 8270

United Kingdom

The instrument bears this mark to indicate conformity with health, safety, and environmental protection standards for products sold within Great Britain (England, Wales and Scotland). The design of the product has been verified to conform to the applicable harmonized standards and technical specifications, and with the relevant Union harmonization legislation.

Australia and New Zealand

The instrument bears this mark to indicate it complies with the EMC provision of the Australian Communication and Media Authority (ACMA) Radio Communications Act:

AS/NZS CISPR 11:2015, Radiated and Conducted Emissions, Group 1, Class A.

Australia / New Zealand Contacts:*

RS Components Pty Ltd.
 Suite 326 The Parade West
 Kent Town, South Australia 5067

RS Components Ltd.
 Units 30 & 31 Warehouse World
 761 Great South Road
 Penrose, Auckland, New Zealand

* Visit teledynelecroy.com/support/contact for the latest information.

United States and Canada

The oscilloscope has been certified by Underwriters Laboratories (UL) to conform to the following safety standards and bears the UL/cUL Listing Mark:

UL 61010-1 Third Edition – Safety standard for electrical measuring and test equipment.

UL 61010-2-030 Ed. 2-2018 – Particular requirements for equipment having testing or measuring circuits.

CAN/CSA-C22.2 No. 61010-1-12 – Safety requirements for electrical equipment for measurement, control and laboratory use.

CAN/CSA-C22.2 No. 61010-2-030:18 – Particular requirements for equipment having testing or measuring circuits.

China

Unless otherwise specified, all materials and processes are compliant with the latest requirements of China RoHS 2.

ISO Certification

Manufactured under an ISO 9000 Registered Quality Management System.

Intellectual Property

All patents pertaining to the WaveMaster 8000HD are on our website at:

teledynelecroy.com/patents/

